


INSTALLATION

1. INSTALL AIR FUEL RATIO SENSOR

- (a) Using SST, install the 2 air fuel ratio sensors onto the exhaust manifold.

SST 09224-00010

Torque: 44 N*m (449 kgf*cm, 33 ft.*lbf)

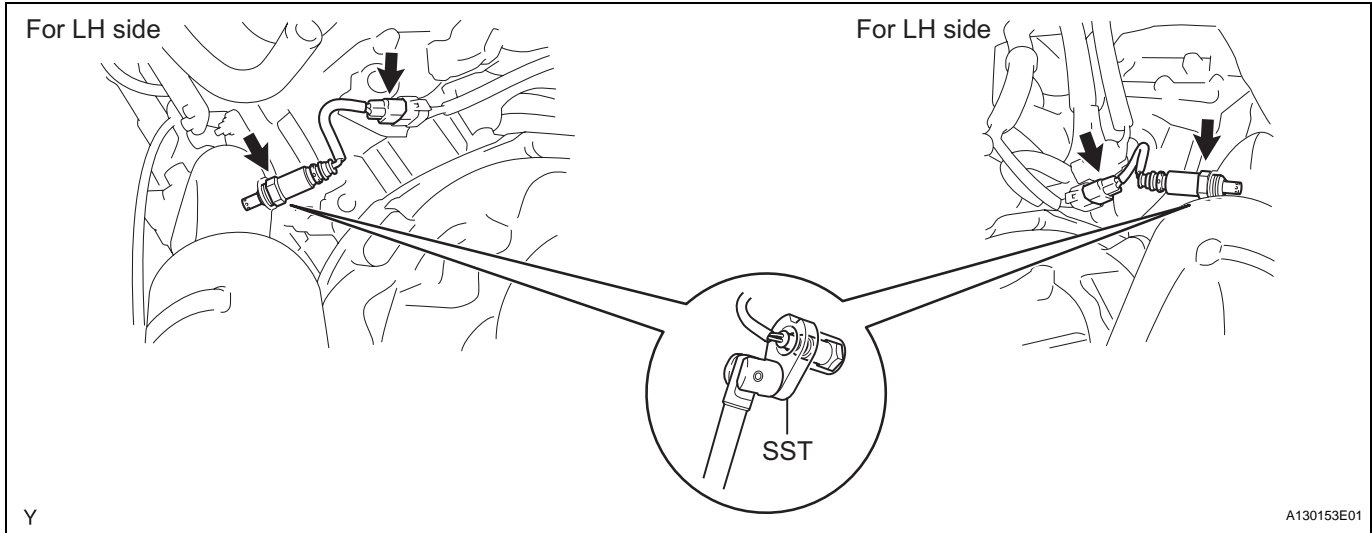

- (b) Connect the 2 air fuel ratio sensor connectors.

- (c) Install the exhaust manifold stay with the 3 bolts. (for LH Bank)

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

