
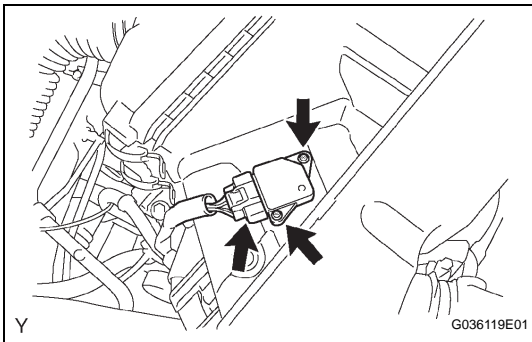


## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE V-BANK COVER (See page [ES-428](#))**
3. **REMOVE MASS AIR FLOW METER**
  - (a) Disconnect the connector.
  - (b) Remove the 2 screws, then remove the mass air flow meter.

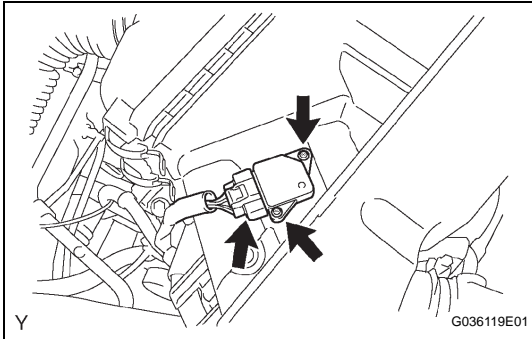

## INSTALLATION

1. **INSTALL MASS AIR FLOW METER**
  - (a) Install the mass air flow meter with 2 screws.
  - (b) Connect the connector.
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**  
Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)
3. **INSTALL V-BANK COVER (See page [ES-431](#))**