


- (2) Apply battery voltage across the terminals.
- (3) Check that air flows from port E to port F.  
If the operation is not as specified, replace the vacuum switching valve No. 1.

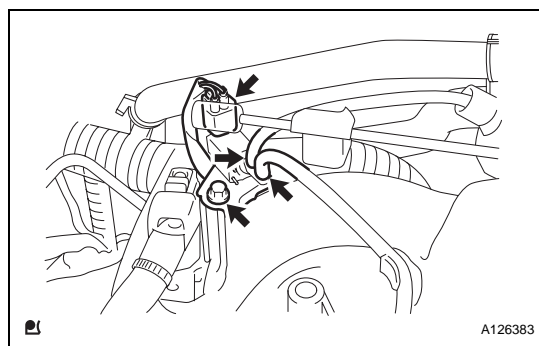

## INSTALLATION

1. **INSTALL NO. 1 VACUUM SWITCHING VALVE ASSEMBLY**
  - (a) Install the No. 1 vacuum switching valve with the bolt onto the intake air surge tank.  
**Torque: 9.0 N\*m (92 kgf\*cm, 80 in.\*lbf)**
  - (b) Connect the 2 vacuum hoses.
  - (c) Connect the connector.
2. **INSTALL AIR CLEANER ASSEMBLY (See page ES-431)**
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**  
**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**
4. **INSTALL V-BANK COVER (See page ES-431)**