
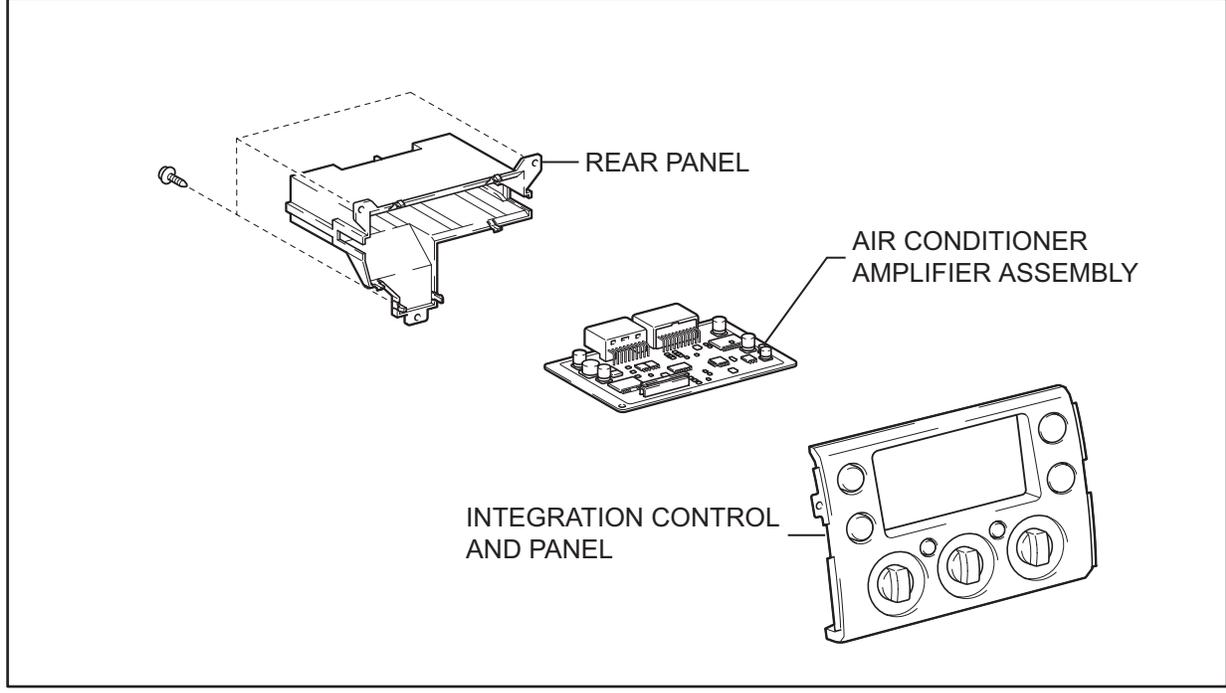


# INTEGRATION CONTROL AND PANEL



## COMPONENTS

AC

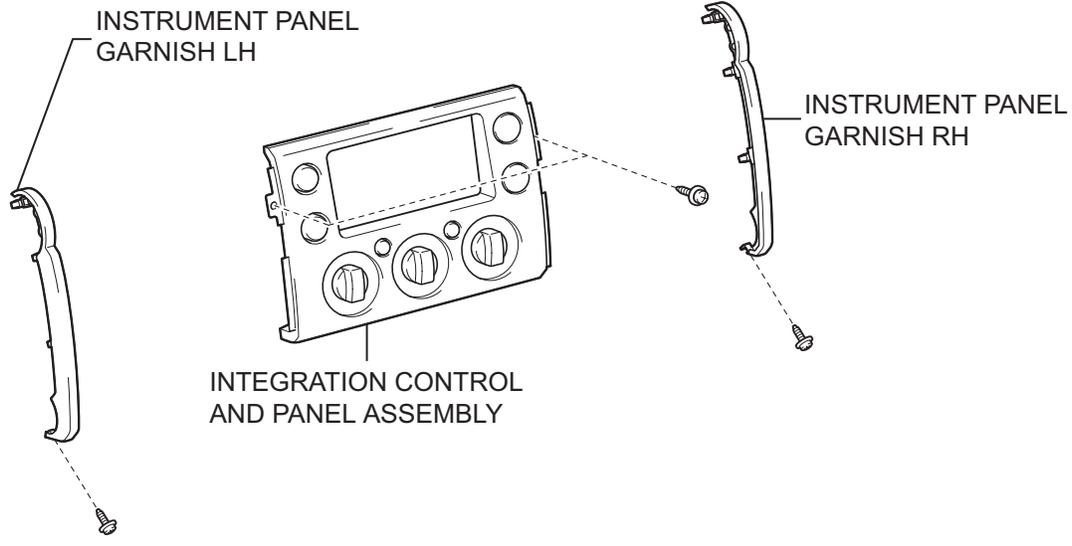

## REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE INSTRUMENT PANEL GARNISH LH (See page [IP-10](#))
3. REMOVE INSTRUMENT PANEL GARNISH RH (See page [IP-10](#))
4. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY
  - (a) Remove the 2 screws.
  - (b) Disengage the 4 clips and remove the integration control assembly.
  - (c) Disconnect the 3 connectors.

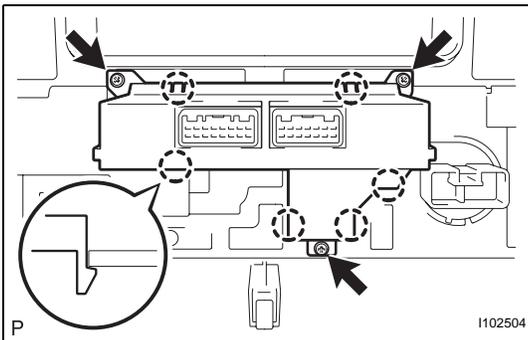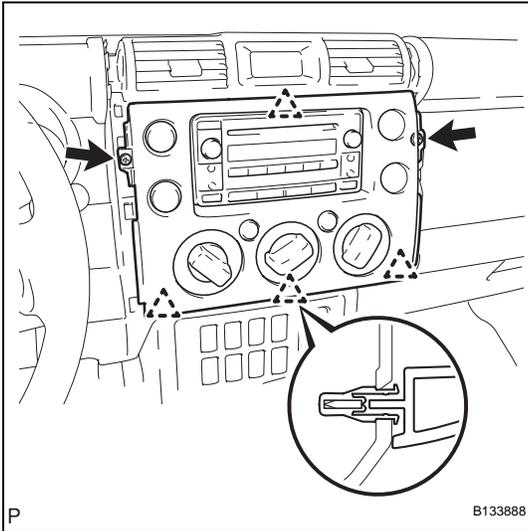

## DISASSEMBLY

1. REMOVE AIR CONDITIONER AMPLIFIER ASSEMBLY
  - (a) Remove the 3 screws.
  - (b) Disengage the 6 claws and remove the rear panel.
  - (c) Disengage the lock of the connector and disconnect the cable.
  - (d) Remove the air conditioner amplifier assembly.

