




REAR AXLE HUB BOLT

COMPONENTS

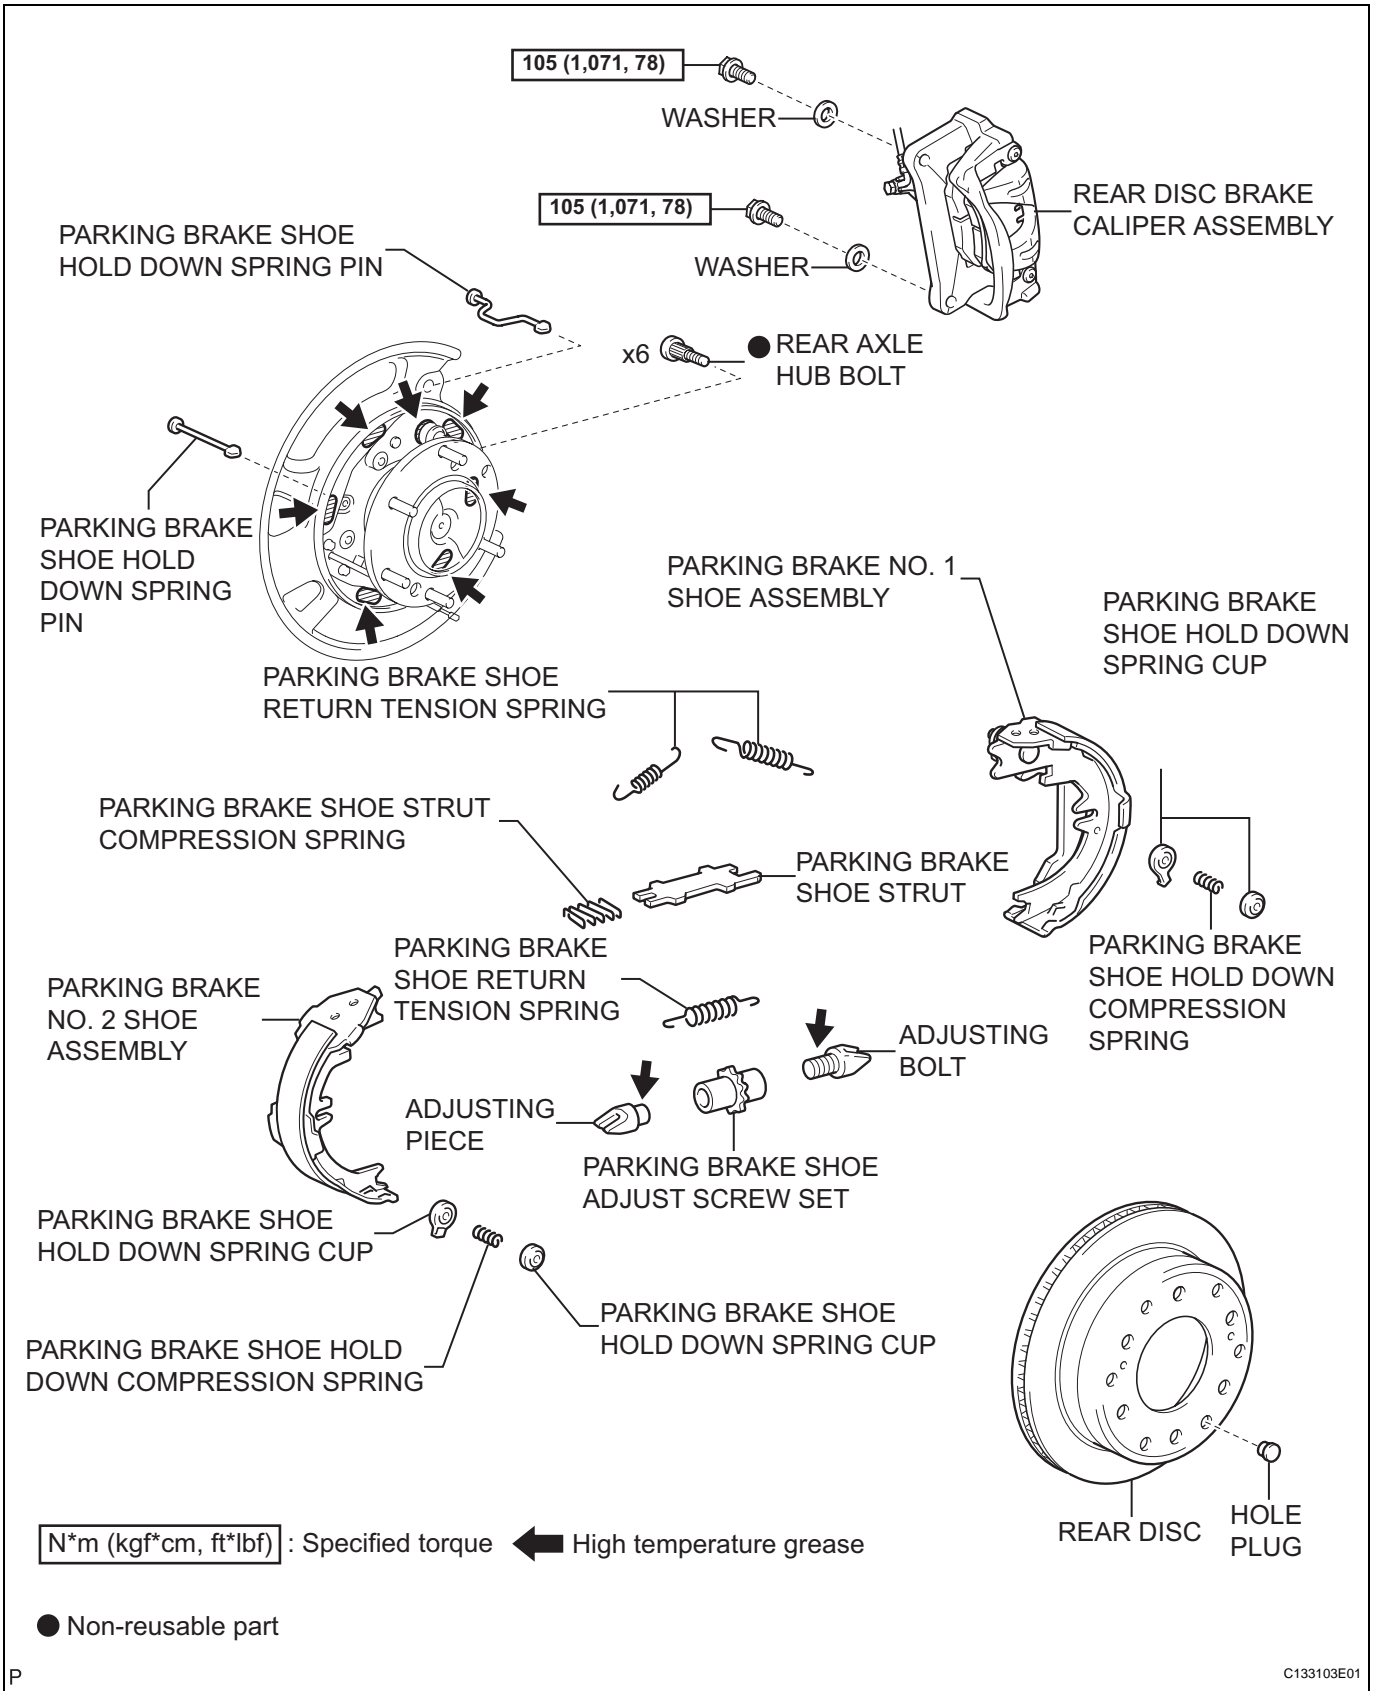

REMOVAL

1. REMOVE REAR WHEEL
2. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY (See page [PB-17](#))
3. REMOVE REAR DISC (See page [PB-17](#))
4. REMOVE PARKING BRAKE SHOE RETURN TENSION SPRING (See page [PB-17](#))
5. REMOVE PARKING BRAKE SHOE STRUT (See page [PB-17](#))
6. REMOVE PARKING BRAKE SHOE (See page [PB-17](#))
7. REMOVE REAR AXLE HUB BOLT
 - (a) Using SST and a screwdriver or the equivalent to hold the axle hub, remove the hub bolt.
SST 09650-17011

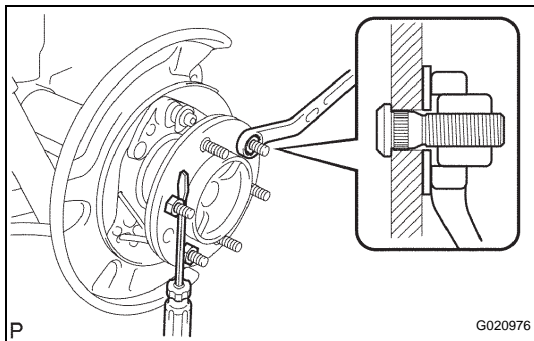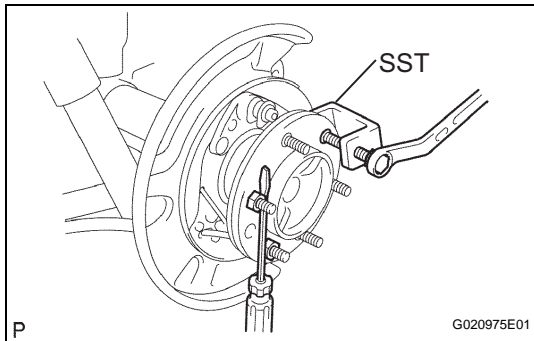

INSTALLATION

1. INSTALL REAR AXLE HUB BOLT
 - (a) Install the washer and the nut onto a new hub bolt, as shown in the illustration.
 - (b) Using a screwdriver or the equivalent to hold the axle hub, install the hub bolt by tightening the nut.
2. APPLY HIGH TEMPERATURE GREASE (See page [PB-19](#))
3. INSTALL PARKING BRAKE SHOE (See page [PB-19](#))
4. INSTALL PARKING BRAKE SHOE STRUT (See page [PB-19](#))
5. INSTALL PARKING BRAKE SHOE RETURN TENSION SPRING (See page [PB-19](#))
6. CHECK PARKING BRAKE INSTALLATION (See page [PB-20](#))
7. INSTALL REAR DISC (See page [PB-20](#))
8. ADJUST PARKING BRAKE SHOE CLEARANCE (See page [PB-20](#))
9. INSTALL REAR DISC BRAKE CALIPER ASSEMBLY (See page [PB-20](#))
10. INSTALL REAR WHEEL
Torque: 112 N*m (1,137 kgf*cm, 82 ft.*lbf)
11. INSPECT PARKING BRAKE LEVER TRAVEL (See page [PB-4](#))

**12. ADJUST PARKING BRAKE LEVER TRAVEL (See
page [PB-4](#))**