


FRONT DIFFERENTIAL SIDE GEAR SHAFT OIL SEAL COMPONENTS

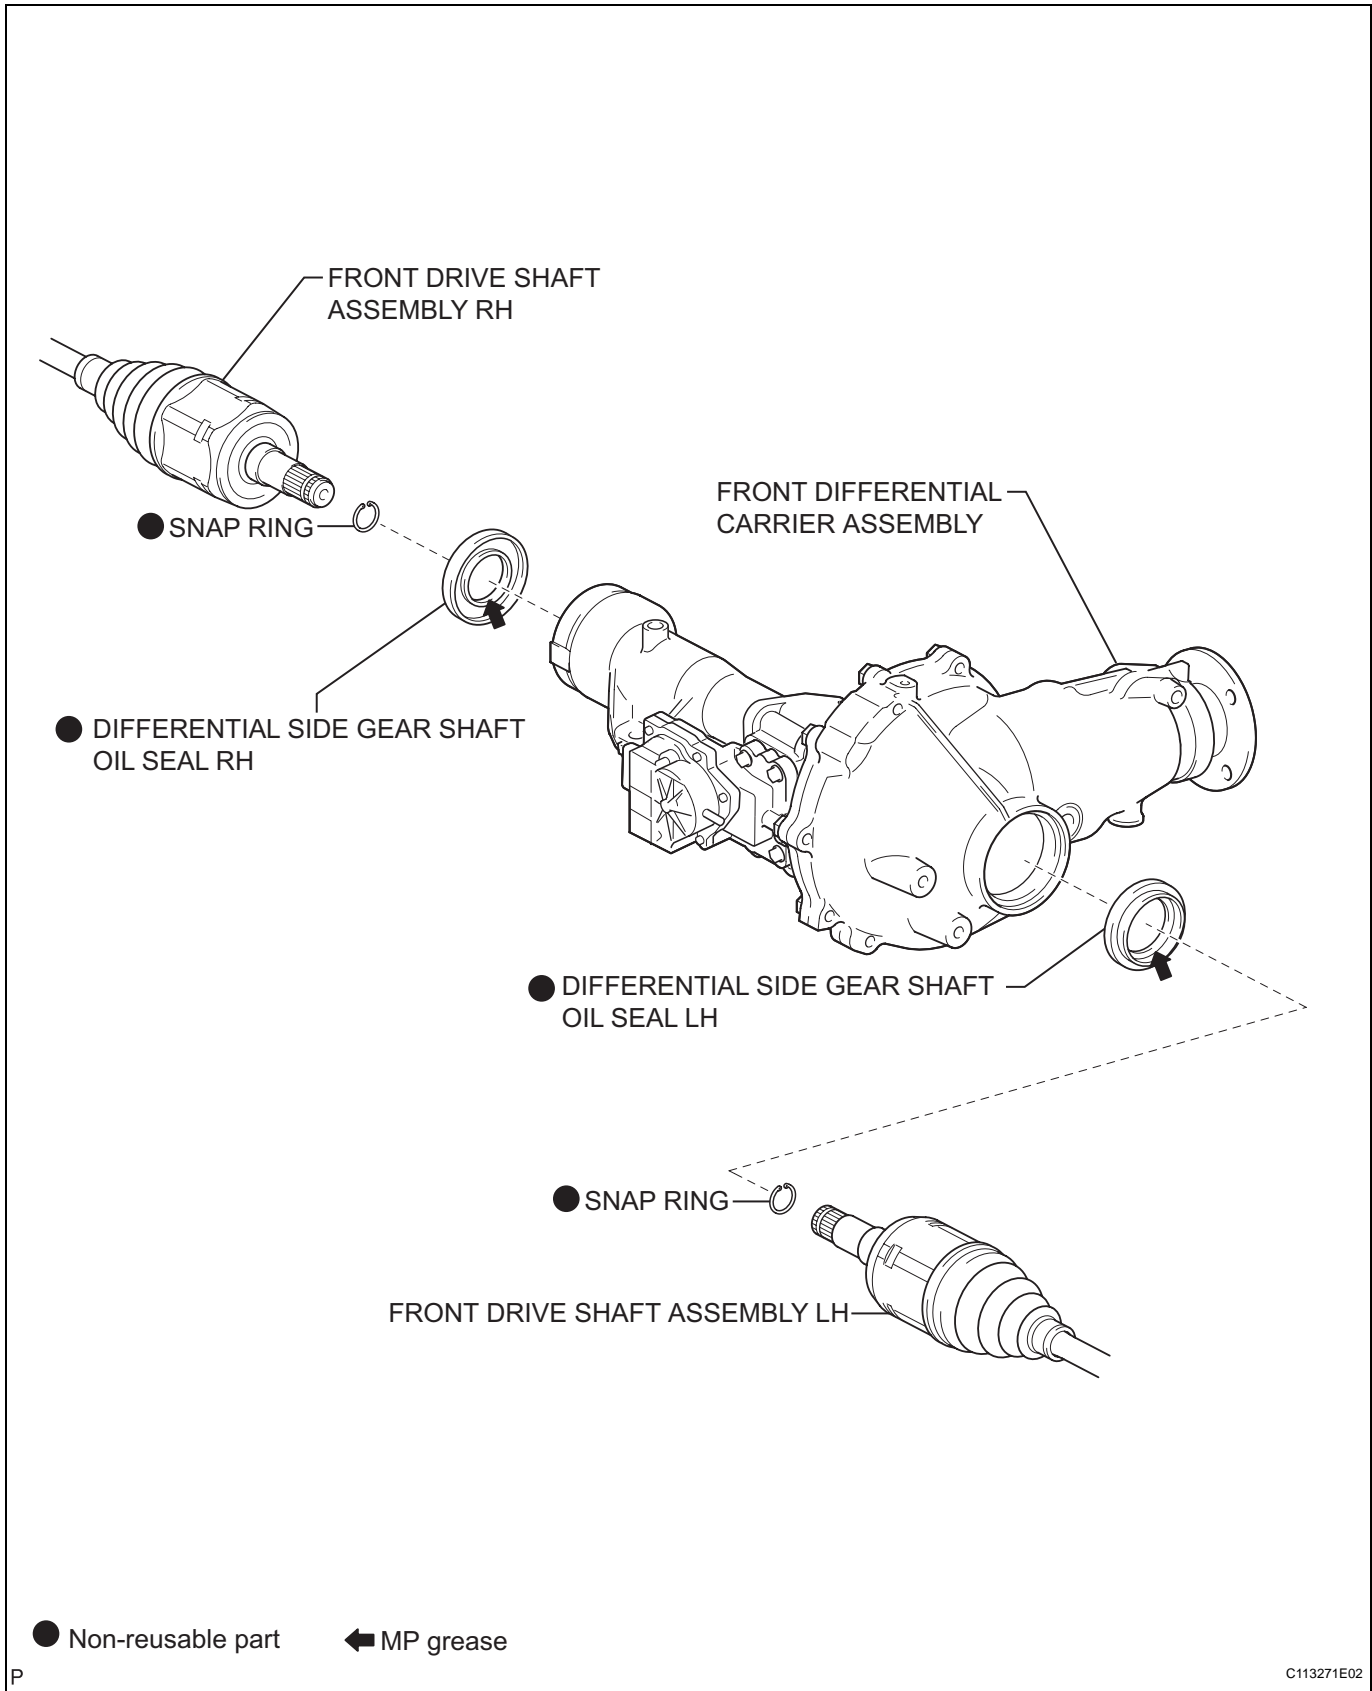

DF

REMOVAL

HINT:

The procedure described below is for the LH side. Use the same procedure for both the RH and LH sides, unless otherwise specified.

1. **REMOVE FRONT DRIVE SHAFT ASSEMBLY LH**
(See page [DS-3](#))
2. **REMOVE DIFFERENTIAL SIDE GEAR SHAFT OIL SEAL**
 - (a) Using SST, tap out the oil seal.
SST 09308-10010

