


# DOOR CONTROL SWITCH (for Front Passenger Side)

## COMPONENTS

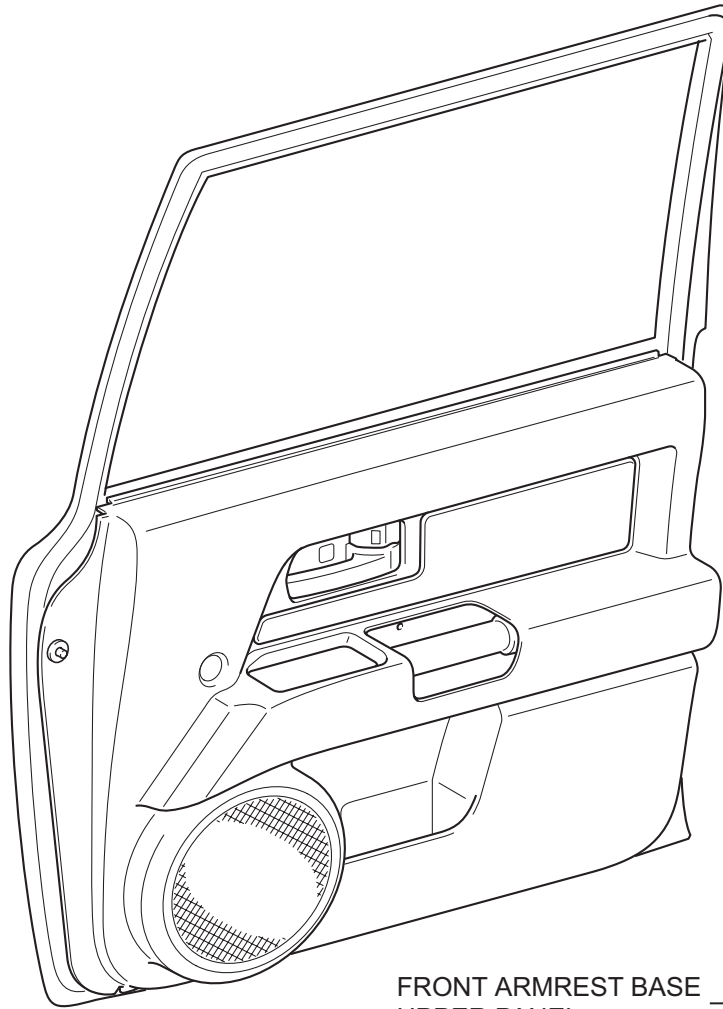

FRONT ARMREST BASE  
UPPER PANEL





DOOR CONTROL  
SWITCH



DL

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT ARMREST BASE UPPER PANEL**  
(See page [ED-9](#))
3. **REMOVE DOOR CONTROL SWITCH**
  - (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 2 claws and remove the door control switch.

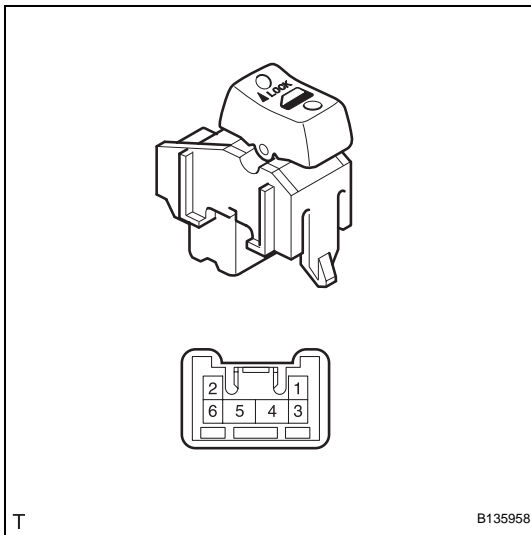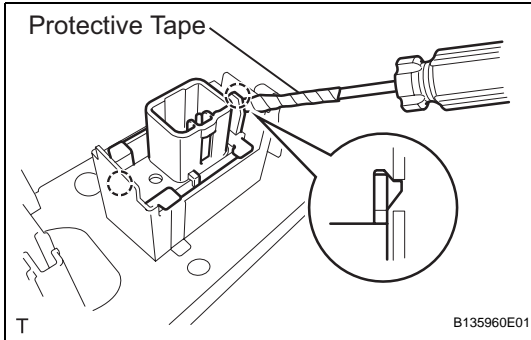

## INSPECTION

1. **INSPECT DOOR CONTROL SWITCH**
  - (a) Check the resistance.
    - (1) Using an ohmmeter, measure the resistance and check the results in accordance with the value(s) in the table below.

### Standard Resistance

Tester Connection	Condition	Specified Condition
3 - 6	Locked	Below 1 $\Omega$
3 - 6	Unlocked	10 k $\Omega$ or higher
3 - 5	Locked	10 k $\Omega$ or higher
3 - 5	Unlocked	Below 1 $\Omega$

If the result is not as specified, replace the door control switch.

## INSTALLATION

1. **INSTALL DOOR CONTROL SWITCH**
  - (a) Engage the 2 claws and install the door control switch.
2. **INSTALL FRONT ARMREST BASE UPPER PANEL**  
(See page [ED-25](#))
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**  
Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)

