


## REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE FRONT DOOR SCUFF PLATE RH (See page [IR-15](#))
3. REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-15](#))
4. REMOVE FRONT FLOOR FOOTREST (See page [IR-2](#))
5. REMOVE FOOTREST CLIP (See page [IR-2](#))
6. REMOVE COWL SIDE TRIM BOARD RH (See page [IR-15](#))
7. REMOVE COWL SIDE TRIM BOARD LH (See page [IR-15](#))
8. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IP-10](#))
9. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH (See page [IP-10](#))
10. REMOVE ASSIST GRIP PLUG (See page [IR-17](#))
11. REMOVE ASSIST GRIP ASSEMBLY (See page [IR-17](#))
12. REMOVE FRONT PILLAR GARNISH RH (See page [IR-18](#))
13. REMOVE FRONT PILLAR GARNISH LH (See page [IR-18](#))
14. REMOVE INSTRUMENT PANEL GARNISH LH (See page [IP-10](#))
15. REMOVE INSTRUMENT PANEL GARNISH RH (See page [IP-10](#))
16. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY (See page [IP-11](#))
17. REMOVE RADIO RECEIVER ASSEMBLY (See page [AV-55](#))
18. REMOVE PARKING BRAKE HOLE COVER SUB-ASSEMBLY (See page [IP-11](#))
19. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transmission) (See page [IP-11](#))
20. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (for 4WD) (See page [IP-11](#))
21. REMOVE CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (See page [IP-12](#))
22. REMOVE BOX BOTTOM MAT (See page [IP-12](#))
23. REMOVE FRONT CONSOLE BOX (See page [IP-12](#))
24. REMOVE CONSOLE UPPER PANEL NO. 1 GARNISH (See page [IP-12](#))

25. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-13](#))
26. REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY (See page [IP-13](#))
27. REMOVE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [IP-13](#))
28. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LH (See page [IP-14](#))
29. REMOVE LOWER INSTRUMENT PANEL LH (See page [IP-14](#))
30. REMOVE INSTRUMENT CLUSTER LOWER FINISH PANEL (See page [IP-14](#))
31. REMOVE COMBINATION METER ASSEMBLY (See page [IP-14](#))
32. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-15](#))
33. REMOVE INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-15](#))
34. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY (See page [IP-16](#))
35. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY (See page [IP-16](#))
36. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY (See page [IP-16](#))
37. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (See page [AV-62](#))
38. REMOVE ASSIST GRIP RETAINER RH (See page [IP-16](#))
39. REMOVE ASSIST GRIP RETAINER LH (See page [IP-16](#))
40. DISCONNECT PASSENGER AIRBAG CONNECTOR (See page [IP-16](#))
41. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-16](#))
42. REMOVE INSTRUMENT PANEL FINISH PANEL END LH (See page [IP-21](#))
43. REMOVE IGNITION SWITCH LOCK CYLINDER AND KEY SET
  - (a) Turn the ignition switch lock cylinder to the ACC position.
  - (b) Push down the stop pin with a screwdriver and pull out the ignition switch lock cylinder.

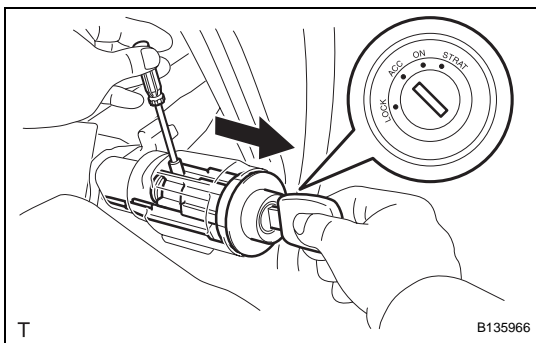

T

B135966

DL