

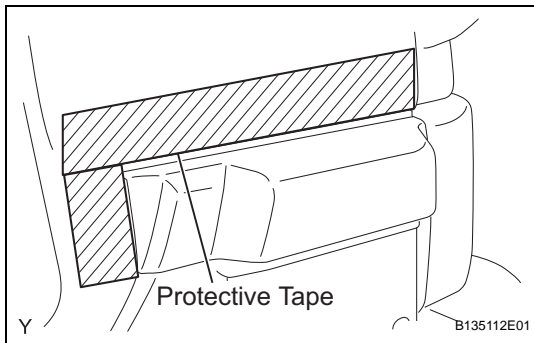


REMOVAL


1. REMOVE CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE SPARE TIRE
3. REMOVE BACK DOOR OUTSIDE MOULDING (See page [ET-71](#))
4. REMOVE BACK DOOR TRIM COVER RH (See page [ED-48](#))
5. REMOVE BACK DOOR TRIM COVER LH (See page [ED-48](#))
6. REMOVE BACK DOOR TRIM BOARD (See page [ED-49](#))
7. REMOVE BACK DOOR SERVICE HOLE COVER
 - (a) Remove the back door service hole cover to the extent that the back door outside garnish can be removed.

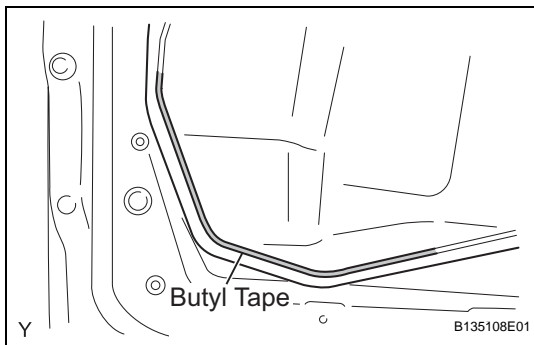


8. REMOVE BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY
 - (a) Apply protective tape to the back door panel in the area around the back door outside garnish.

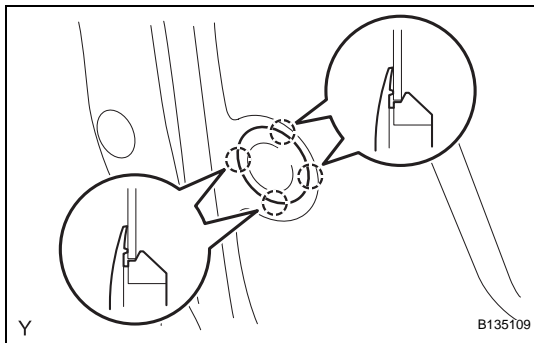


- (b) Using a clip remover, disengage the 4 claws and remove the plug hole.

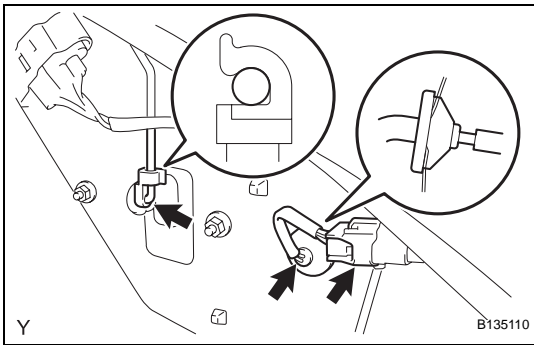


- (c) Disconnect the license light connector.
- (d) Disconnect the back door lock rod.

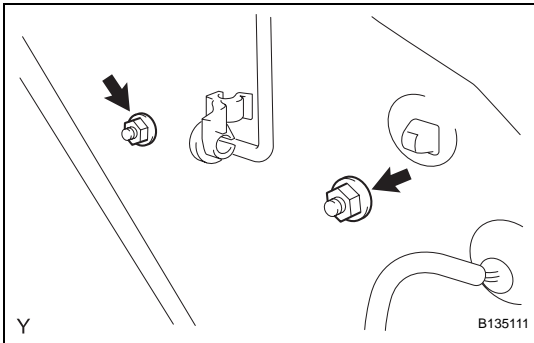

- (e) Remove the 2 nuts.

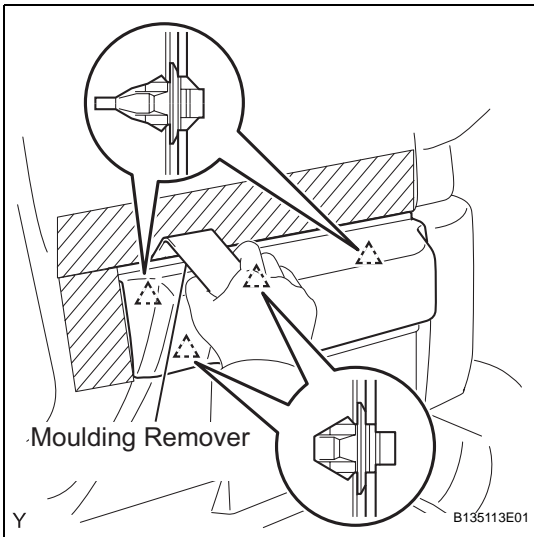


- (f) Using a moulding remover, disengage the 4 clips and remove the back door outside garnish.

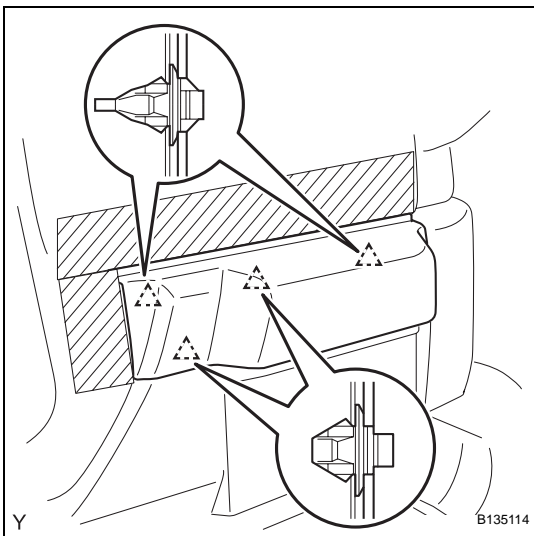


INSTALLATION

1. INSTALL BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY


- (a) Engage the 4 clips and install the back door outside garnish.

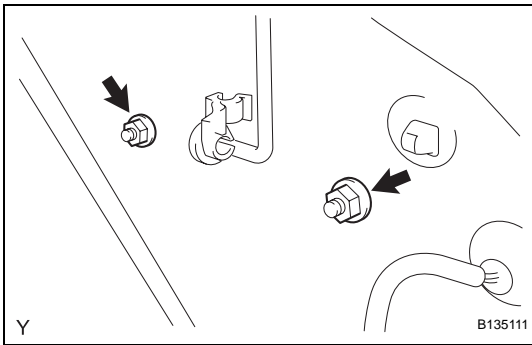


- (b) Tighten the 2 nuts.
Torque: 6.0 N*m (60 kgf*cm, 53 in.*lbf)

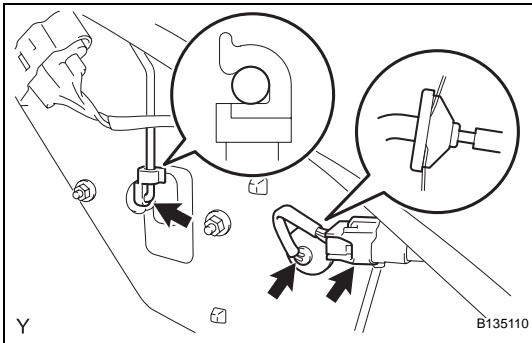


- (c) Connect the back door lock rod.
 (d) Connect the license light connector.

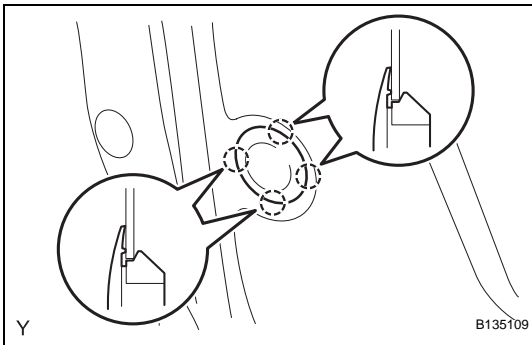

- (e) Engage the 4 claws and install the plug hole.

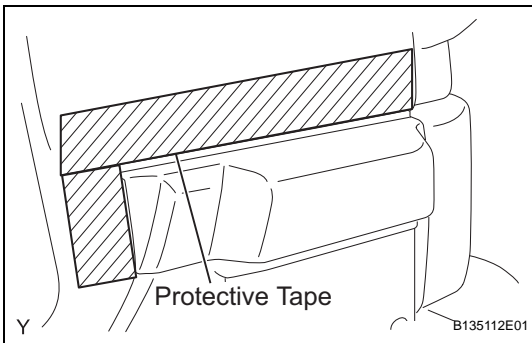

- (f) Remove the protective tape.

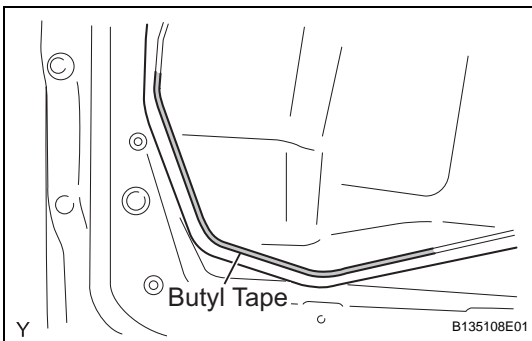

2. INSTALL BACK DOOR SERVICE HOLE COVER

- (a) Install the back door service hole cover.

3. INSTALL BACK DOOR TRIM BOARD (See page [ED-57](#))

4. INSTALL BACK DOOR TRIM COVER RH (See page [ED-57](#))

5. INSTALL BACK DOOR TRIM COVER LH (See page [ED-57](#))

6. **INSTALL BACK DOOR OUTSIDE MOULDING (See page [ET-72](#))**
7. **INSTALL SPARE TIRE**
Torque: 88 N*m (897 kgf*cm, 65 ft.*lbf)
8. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)