

INSPECTION

1. INSPECT BACK DOOR COURTESY SWITCH

- (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance and check the results in accordance with the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
1 - Switch body	ON (Shaft not pressed)	Below 1 Ω
1 - Switch body	OFF (Shaft not pressed)	10 k Ω or higher

If the result is not as specified, replace the back door courtesy switch.

INSTALLATION

1. INSTALL BACK DOOR COURTESY SWITCH

- (a) Connect the connector.
- (b) Install the back door courtesy switch with the bolt.
Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

- Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

