

HEADLIGHT DIMMER RELAY

ON-VEHICLE INSPECTION

1. INSPECT HEADLIGHT DIMMER RELAY

(a) Check the resistance.

- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard Resistance

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 4	10 k Ω or higher (Battery voltage applied to terminals 1 and 2)
3 - 5	10 k Ω or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the headlight dimmer relay.

