



REAR ROOM LIGHT ASSEMBLY

COMPONENTS

REAR ROOM LIGHT ASSEMBLY

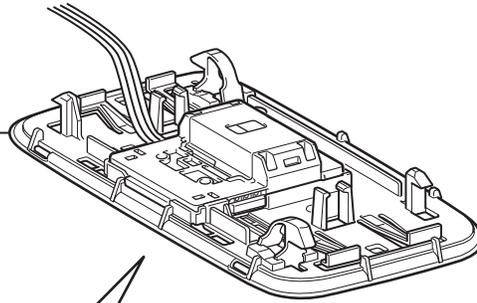


ROOM LIGHT SWITCH BASE

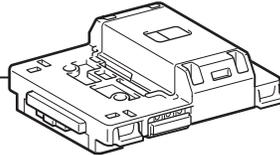


ROOM LIGHT BULB NO. 1




ROOM LIGHT HOUSING ASSEMBLY

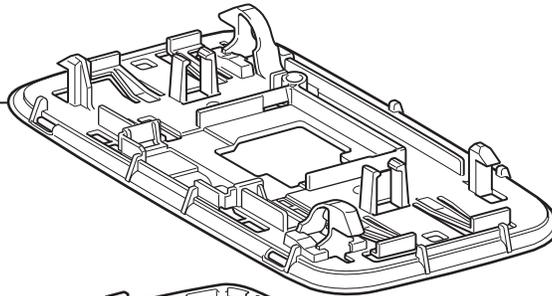


ROOM LIGHT COVER

 

ROOM LIGHT COVER

 

ROOM LIGHT LENS

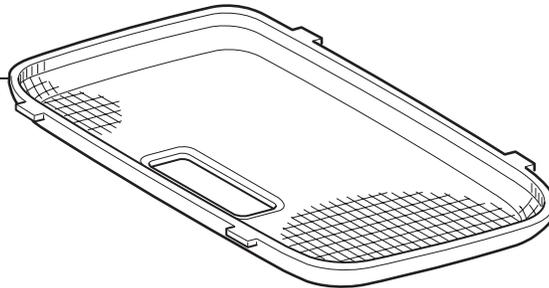


REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

2. REMOVE REAR ROOM LIGHT ASSEMBLY

- (a) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the room light lens.

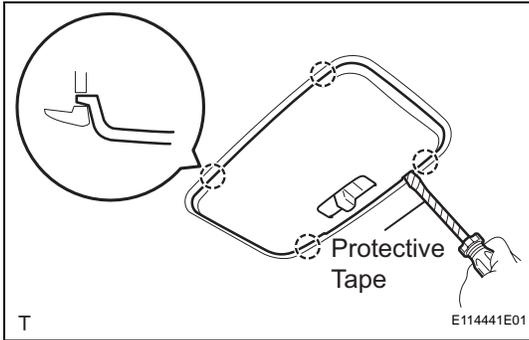

- (b) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws and remove the 2 covers.

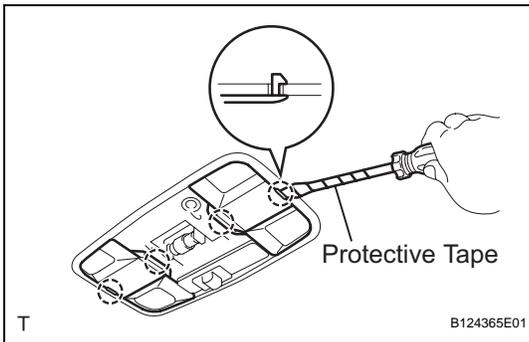

- (c) Using a screwdriver with its tip wrapped in protective tape, disengage the 4 claws.

