



 










 
 


 
 


 

VF4B TRANSFER

 
 



 

SST

	09223-15020	Oil Seal & Bearing Replacer	
	09223-46011	Crankshaft Front Oil Seal Replacer	
	09304-12012	Input Shaft Front Bearing Replacer	
	09308-00010	Oil Seal Puller	
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	
	(09316-00031)	Replacer B	
	(09316-00071)	Replacer F	
	09330-00021	Companion Flange Holding Tool	
	09515-30010	Rear Wheel Bearing Replacer	
	09554-30011	Differential Oil Seal Replacer	

PP

PP

	<p>09555-55010</p>	<p>Differential Drive Pinion Bearing Replacer</p>	
	<p>09612-65014</p>	<p>Steering Worm Bearing Puller</p>	
	<p>(09612-01030)</p>	<p>Claw C</p>	
	<p>(09612-01050)</p>	<p>Hanger Pin with Nut</p>	
	<p>09631-32020</p>	<p>Seal Ring Tool</p>	
	<p>09950-40011</p>	<p>Puller B Set</p>	
	<p>(09951-04020)</p>	<p>Hanger 200</p>	
	<p>(09952-04010)</p>	<p>Slide Arm</p>	
	<p>(09953-04030)</p>	<p>Center Bolt 200</p>	
	<p>(09954-04010)</p>	<p>Arm 25</p>	
	<p>(09955-04051)</p>	<p>Claw No.5</p>	
	<p>(09957-04010)</p>	<p>Attachment</p>	

	(09958-04011)	Holder	
	09950-60010	Replacer Set	
	(09951-00320)	Replacer 32	
	(09951-00570)	Replacer 57	
	(09951-00590)	Replacer 59	
	09950-70010	Handle Set	
	(09951-07100)	Handle 100	