



# REAR CENTER SEAT INNER BELT ASSEMBLY

## COMPONENTS

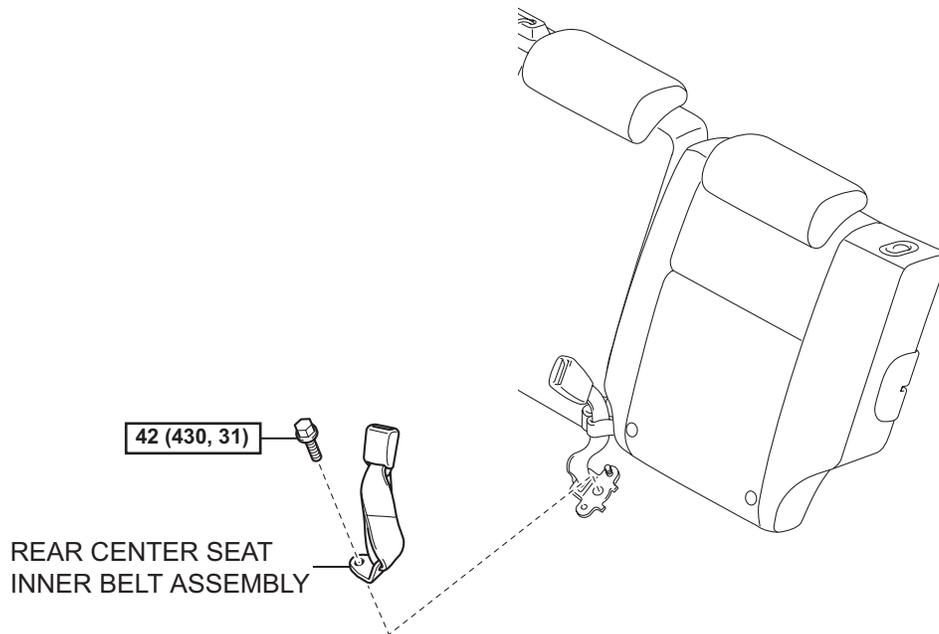


**N\*m (kgf\*cm, ft\*lbf)** : Specified torque

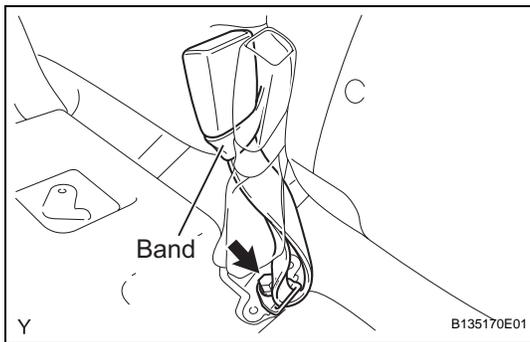

## REMOVAL

### 1. REMOVE REAR CENTER SEAT INNER BELT ASSEMBLY

- (a) Pull up the rear seat cushion.
- (b) Remove the buckle from the rear seatback band.
- (c) Remove the bolt and the rear center seat inner belt.

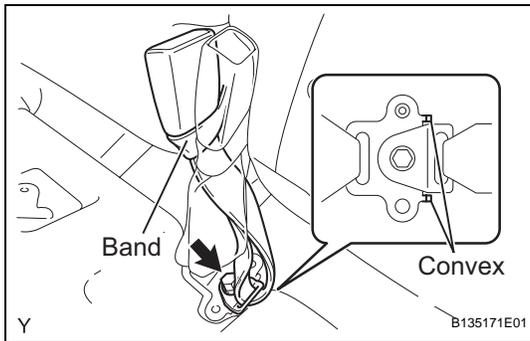

## INSTALLATION

### 1. INSTALL REAR CENTER SEAT INNER BELT ASSEMBLY

- (a) Install the anchor plate of the rear center seat inner belt with the bolt.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**

#### NOTICE:

**Do not place the anchor plate over the convex areas of the rear seat inner belt.**

- (b) Install the buckle into the rear seatback band.
- (c) Install the rear seat cushion.