


## 7. INSTALL STEERING INTERMEDIATE SHAFT ASSEMBLY

- Align the matchmarks on the steering column assembly and the steering intermediate shaft assembly.
- Install the steering intermediate shaft assembly and thrust stopper onto the steering column assembly with the bolt.

**Torque: 36 N\*m (367 kgf\*cm, 27 ft.\*lbf)**

SR

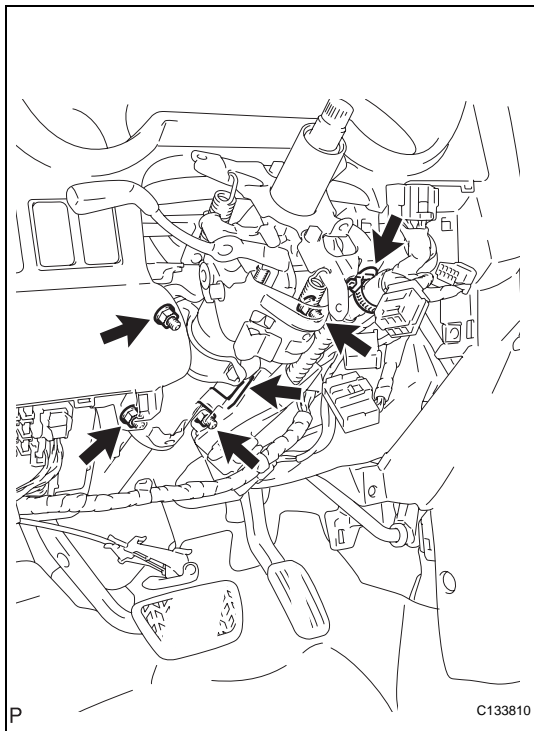

## INSTALLATION

### 1. INSTALL STEERING COLUMN ASSEMBLY

- Install the steering column assembly with the 4 nuts.  
**Torque: 26 N\*m (265 kgf\*cm, 19 ft.\*lbf)**
- Connect each of the connectors to the steering column assembly.
- Connect the wire harness clamps to the steering column assembly.

#### CAUTION:

**Use a shop rag or piece of cloth to wipe any dirt off the installation plane and column body side.**

#### NOTICE:

**Be careful not to scratch or soil the installation plane of the steering column.**

### 2. INSTALL NO.2 STEERING INTERMEDIATE SHAFT SUB-ASSEMBLY


- Align the matchmarks on the power steering gear and No. 2 steering intermediate shaft.
- Install the No. 2 steering intermediate shaft onto the steering gear box with bolt C.


**Torque: 36 N\*m (367 kgf\*cm, 27 ft.\*lbf) for bolt C**

### 3. INSTALL STEERING SLIDING YOKE

- Align the matchmarks on the steering column and steering sliding yoke.
- Install the steering sliding yoke onto the steering column assembly and slide it upward.
- Align the matchmarks on the No. 2 intermediate shaft sub-assembly and steering sliding yoke.
- Install the sliding yoke onto the No. 2 intermediate shaft sub-assembly with bolts A and B.

**Torque: 36 N\*m (367 kgf\*cm, 27 ft.\*lbf) for bolt A, B**

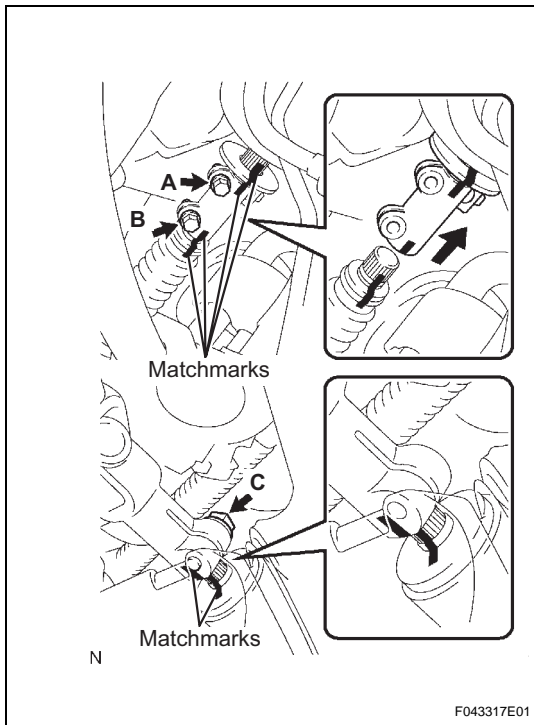

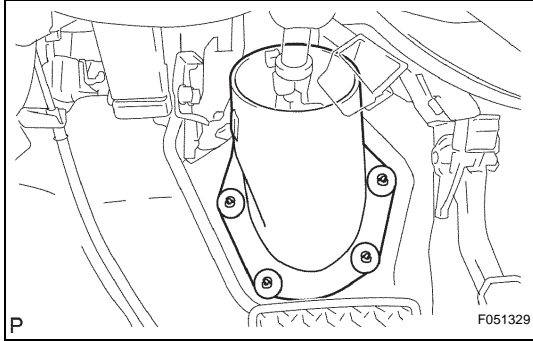

#### 4. INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

- (a) Install the No. 1 engine under cover sub-assembly with the 4 bolts.

**Torque: 29 N\*m (296 kgf\*cm, 21 ft.\*lbf)**

#### 5. INSTALL FRONT WHEEL LH

#### 6. INSTALL STEERING COLUMN HOLE COVER

- (a) Install the steering column hole cover with the 4 clips.

**NOTICE:**

**Be careful not to damage the dust seal of the steering column hole cover.**

#### 7. INSTALL NO.1 AIR DUCT (See page [AC-53](#))

#### 8. INSTALL LOWER INSTRUMENT PANEL LH (See page [IP-29](#))

#### 9. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LH (See page [IP-29](#))

#### 10. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH (See page [IP-33](#))

#### 11. INSTALL COWL SIDE TRIM BOARD LH (See page [IR-45](#))


#### 12. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-45](#))

#### 13. INSTALL FRONT FLOOR FOOTREST (See page [IR-2](#))

#### 14. INSTALL NO.1 INSTRUMENT PANEL REGISTER ASSEMBLY (See page [IP-30](#))


#### 15. INSTALL COMBINATION SWITCH ASSEMBLY


- (a) Install the 3 screws.  
 (b) Connect all connectors to the combination switch assembly.

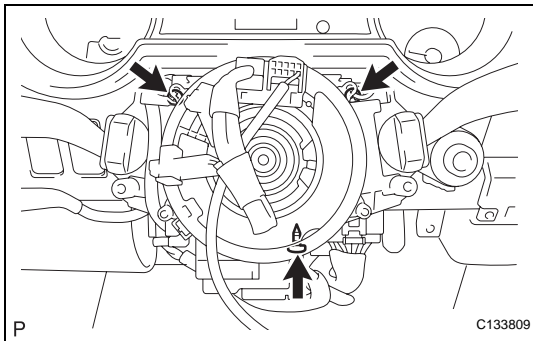

#### 16. INSTALL UPPER STEERING COLUMN COVER

- (a) Engage the claw and install the upper steering column cover.

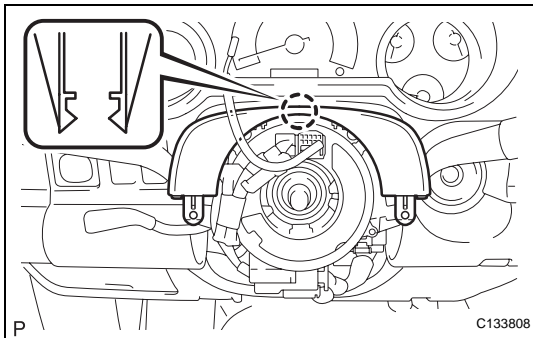

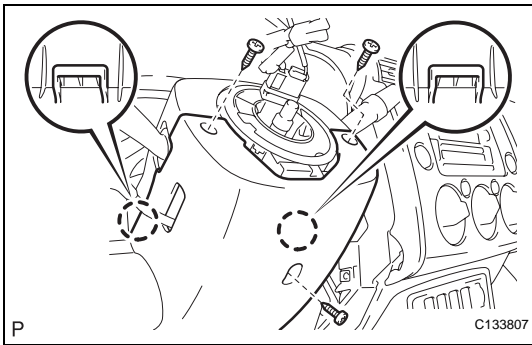

SR

**17. INSTALL LOWER STEERING COLUMN COVER**

- (a) Engage the 2 claws.
- (b) Install the lower steering column cover with the 3 screws.

**18. INSTALL STEERING WHEEL ASSEMBLY**

- (a) Align the matchmarks on the steering wheel assembly and steering main shaft assembly.
- (b) Install the steering wheel assembly set nut.  
Torque: 50 N\*m (510 kgf\*cm, 37 ft.\*lbf)

**19. INSTALL STEERING PAD (See page [RS-346](#))****20. INSTALL LOWER NO.3 STEERING WHEEL COVER (See page [RS-347](#))****21. INSTALL LOWER NO.2 STEERING WHEEL COVER (See page [RS-347](#))****22. PLACE FRONT WHEELS FACING STRAIGHT AHEAD****23. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)

**24. INSPECT SRS WARNING LIGHT**(See page [RS-29](#))