


INSTALLATION


1. INSTALL REAR STABILIZER BUSH

- (a) Install the 2 stabilizer bushes onto the stabilizer bar.
HINT:
 Install the stabilizer bush onto the outer side of the bush stopper on the stabilizer bar.

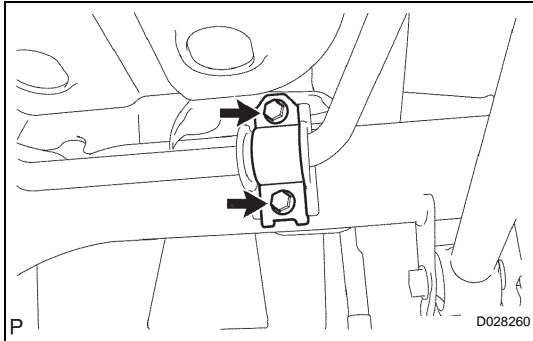


2. INSTALL REAR STABILIZER BAR

- (a) Install the stabilizer bar and 2 stabilizer bracket covers with the 4 bolts.
Torque: 30 N*m (306 kgf*cm, 22 ft.*lbf)

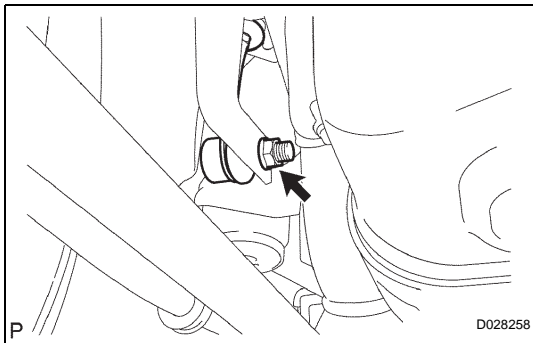

3. INSTALL REAR STABILIZER LINK ASSEMBLY

- (a) Install the stabilizer link with the nut.
Torque: 70 N*m (714 kgf*cm, 52 ft.*lbf)
HINT:
 If the ball joint turns together with the nut, use a 6 mm hexagon wrench to hold the stud.
 (b) Install the 2 No. 1 retainers, 2 cushions and No. 2 retainer.

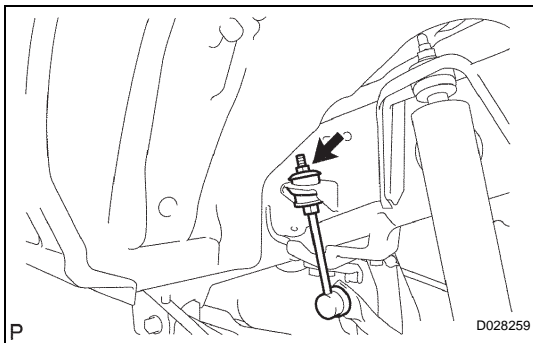

- (c) While holding the stabilizer link with a spanner, install a new nut.
Torque: 15 N*m (153 kgf*cm, 11 ft.*lbf)
 (d) The installation procedure for the RH side is the same as that for the LH side.

4. INSTALL REAR WHEEL

- Torque: 112 N*m (1,137 kgf*cm, 82 ft.*lbf)**