
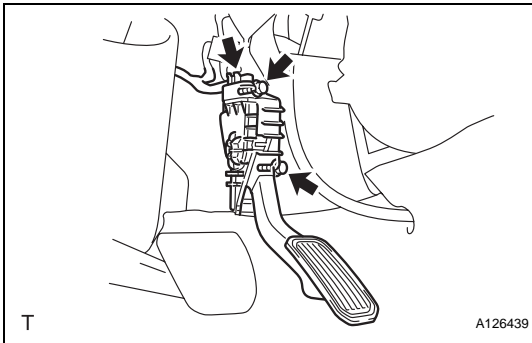


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE ACCELERATOR PEDAL ROD ASSEMBLY**
 - (a) Disconnect the accelerator position sensor connector.
 - (b) Remove the 2 bolts, then remove the accelerator pedal.

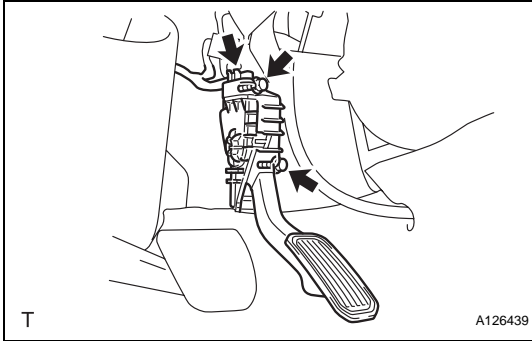

INSTALLATION

1. **INSTALL ACCELERATOR PEDAL ROD ASSEMBLY**
NOTICE:
 - Avoid any physical impact to the accelerator pedal assembly.
 - Do not disassemble the accelerator pedal assembly.
 - (a) Install the accelerator pedal with the 2 bolts.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)
 - (b) Connect the accelerator position sensor connector.
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)