


EFI RELAY

ON-VEHICLE INSPECTION

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

2. **REMOVE EFI RELAY**

- (a) Remove the relay block cover upper.
- (b) Remove the EFI relay.

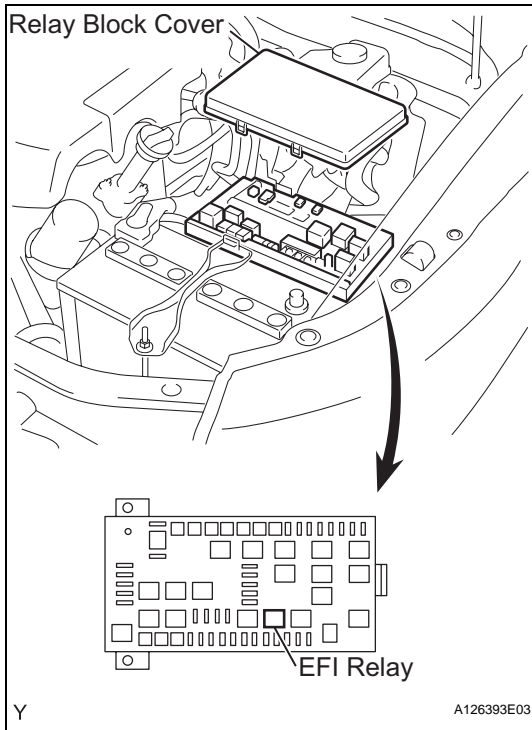


3. **INSPECT EFI RELAY**

- (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

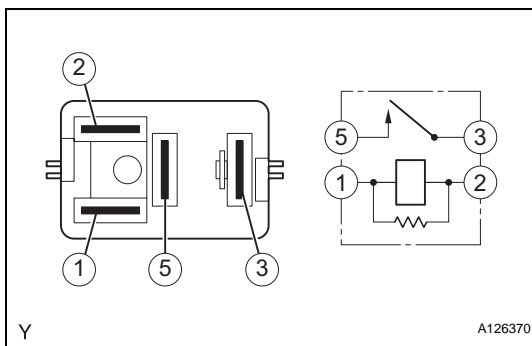

If the result is not as specified, replace the EFI relay.

4. **INSTALL EFI RELAY**

- (a) Install the EFI relay.
- (b) Install the relay block cover upper.

5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)