

## INSTALLATION

1. **INSTALL FUEL PRESSURE REGULATOR ASSEMBLY**
  - (a) Install the vacuum hose.
  - (b) Apply a light coat of spindle oil or gasoline to a new O-ring and install it onto the fuel pressure regulator.
  - (c) Install the fuel pressure regulator with the 2 bolts.  
**Torque: 9.0 N\*m (92 kgf\*cm, 80 in.\*lbf)**
2. **CONNECT NO. 2 FUEL PIPE SUB-ASSEMBLY** (See page [FU-17](#))
3. **INSTALL AIR CLEANER ASSEMBLY** (See page [ES-431](#))
4. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**  
**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**
5. **CHECK FOR FUEL LEAKAGE**
6. **INSTALL V-BANK COVER** (See page [ES-431](#))

