

INSTALLATION

- 1. INSTALL IGNITION SWITCH ASSEMBLY**
 - (a) Connect the connector.
 - (b) Install the ignition switch with the 2 screws.
- 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Terminal
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

