


INSPECTION

1. INSPECT FRONT SPEED SENSOR

- (a) Check the speed sensor.

If any of the following occurs, replace the speed sensor with a new one.

- The surface of the speed sensor is cracked, dented or chipped off.
- The connector is scratched, cracked or damaged.
- The speed sensor has been dropped.

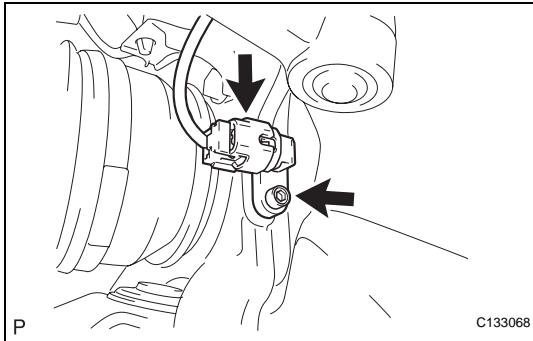

INSTALLATION

1. INSTALL FRONT SPEED SENSOR

- (a) Using a 5 mm hexagon wrench, install the front speed sensor with the bolt.

Torque: 8.3 N*m (85 kgf*cm, 73 in.*lbf)

NOTICE:

Make sure that the sensor tip is clean.

- (b) Connect the skid control sensor wire.

2. INSTALL FRONT WHEEL

Torque: 112 N*m (1,137 kgf*cm, 82 ft.*lbf)

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

4. CHECK VSC SENSOR SIGNAL

(See page [BC-28](#))