
VSC OFF Indicator Light Remains ON

DESCRIPTION

When the rear differential is locked or during the 4WD mode, VSC control turns off and the VSC OFF indicator illuminates. Also, the VSC OFF indicator light is ON when the VSC system is in fail-safe control.

WIRING DIAGRAM

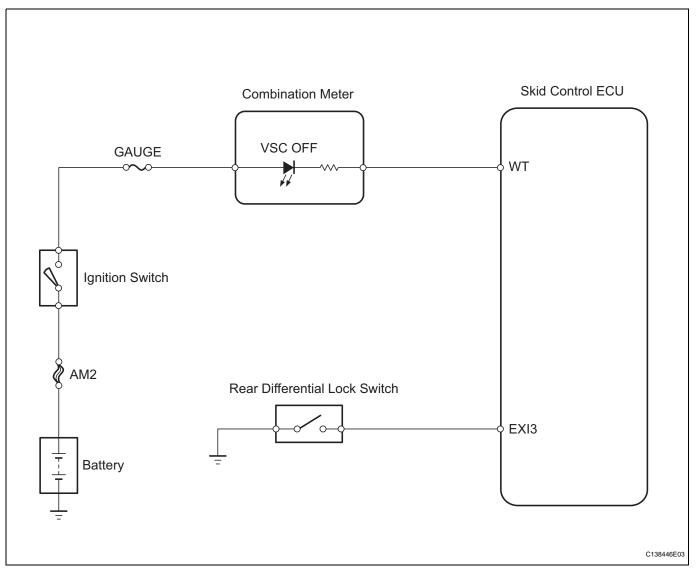

INSPECTION PROCEDURE

NOTICE:

When replacing the master cylinder solenoid, perform zero point calibration (See page BC-24).

1	CHECK DTC
---	-----------

Result

(a) Check if DTCs for VSC are recorded (See page BC-45).

Result	Proceed to
DTC not output	A
DTC output	В

Α

2



REPAIR CIRCUITS INDICATED BY OUTPUT DTCS



INSPECT REAR DIFFERENTIAL LOCK SWITCH

