
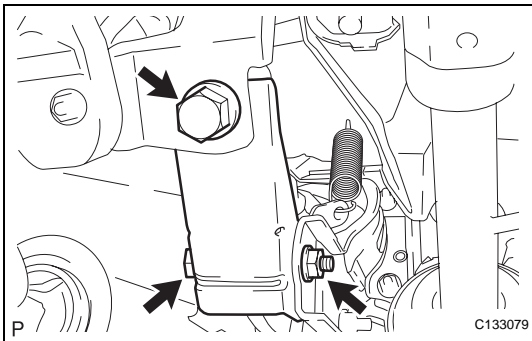
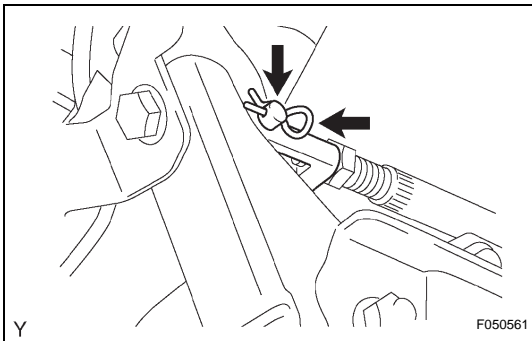


## REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE FRONT DOOR SCUFF PLATE (See page [IR-15](#))
3. REMOVE FRONT FLOOR FOOTREST (See page [IR-2](#))
4. REMOVE FOOTREST CLIP (See page [IR-2](#))
5. REMOVE COWL SIDE TRIM BOARD (See page [IR-15](#))
6. SEPARATE FRONT DOOR OPENING TRIM WEATHERSTRIP (See page [IP-10](#))
7. REMOVE INSTRUMENT PANEL NO. 1 REGISTER ASSEMBLY (See page [IP-13](#))
8. SEPARATE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [IP-13](#))
9. REMOVE INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY (See page [IP-14](#))
10. REMOVE STOP LIGHT SWITCH
  - (a) Disconnect the stop light switch connector from the stop light switch.
  - (b) Turn the stop light switch counterclockwise and remove the stop light switch.
11. SEPARATE MASTER CYLINDER PUSH ROD CLEVIS
  - (a) Remove the clip and push rod pin and separate the push rod clevis.

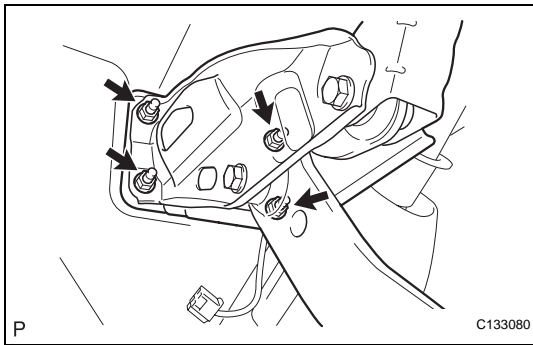

12. REMOVE BRAKE PEDAL SUPPORT REINFORCEMENT
  - (a) Remove the bolt.
  - (b) Remove the bolt and nut and remove the reinforcement from the brake pedal support.

**13. REMOVE BRAKE PEDAL SUPPORT SUB-ASSEMBLY**


- (a) Remove the 4 nuts and the brake pedal support.

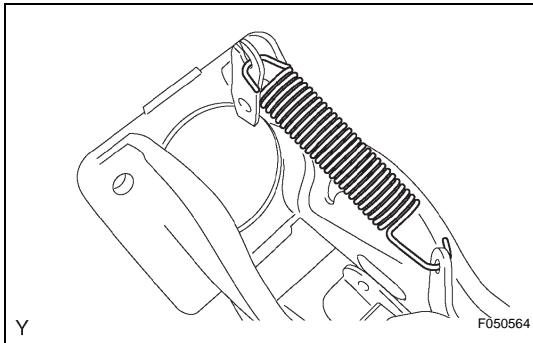**14. REMOVE BRAKE PEDAL RETURN SPRING**


- (a) Remove the return spring from the brake pedal support and brake pedal.

**15. REMOVE STOP LIGHT SWITCH MOUNTING ADJUSTER**

- (a) Remove the stop light switch mounting adjuster from the brake pedal support.

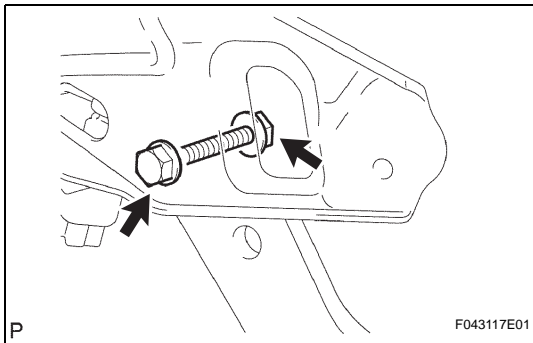**16. REMOVE BRAKE PEDAL**

- (a) Remove the bolt and nut and remove the brake pedal and brake pedal lever from the brake pedal support.
- (b) Remove the 4 brake pedal bushes from the brake pedal and brake pedal lever.
- (c) Remove the 2 collars from the brake pedal and brake pedal lever.

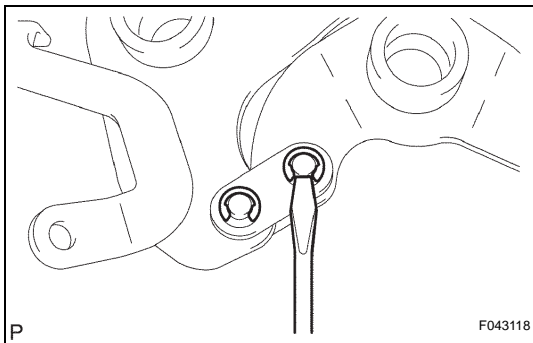**17. REMOVE BRAKE PEDAL LEVER**

- (a) Using a screwdriver, remove the 2 E-rings from the brake pedal link.
- (b) Remove the 2 brake pedal links and the brake pedal lever.
- (c) Remove the 2 brake pedal shaft collars from the brake pedal and brake pedal lever.

**18. REMOVE BRAKE PEDAL PAD**

- (a) Remove the brake pedal pad from the brake pedal.