


FRONT BRAKE FLEXIBLE HOSE

COMPONENTS

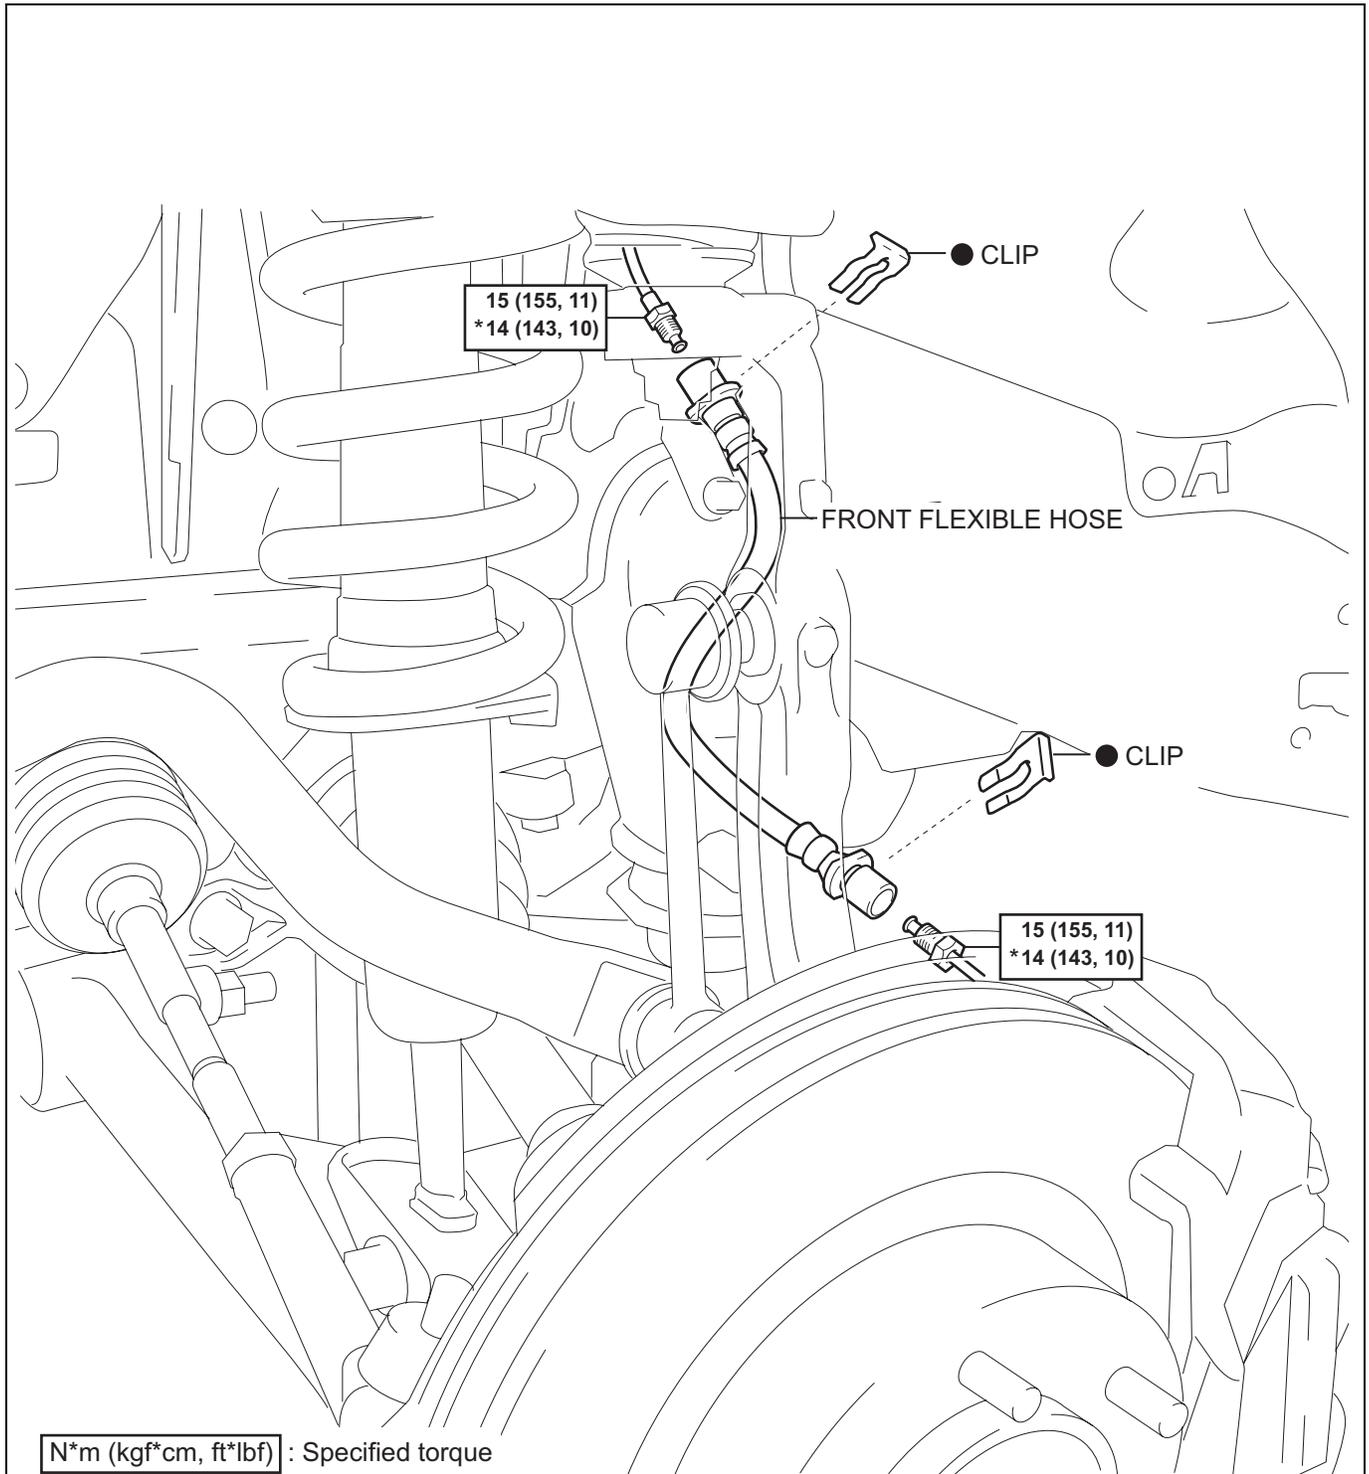

BR

REMOVAL

1. REMOVE FRONT WHEEL

2. DRAIN BRAKE FLUID

NOTICE:

Immediately wash off any brake fluid that comes into contact with any painted surfaces.

3. REMOVE FRONT FLEXIBLE HOSE



- (a) Using SST, separate the brake tubes.

SST 09023-00101

HINT:

Use a container to collect the brake fluid as it drains out.

- (b) Remove the 2 clips and flexible hose.

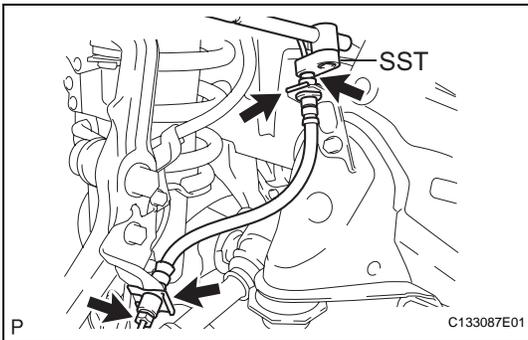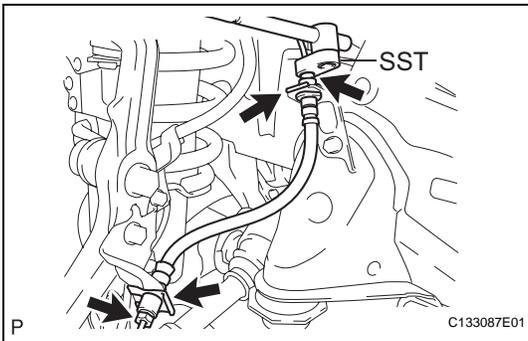

INSTALLATION

1. INSTALL FRONT FLEXIBLE HOSE

- (a) Install the flexible hose with 2 new clips.

- (b) Using SST, install the 2 brake tubes onto the flexible hose.

SST 09023-00101

Torque: for use without SST

15 N*m (155 kgf*cm, 11 ft.*lbf)

for use with SST

14 N*m (143 kgf*cm, 10 ft.*lbf)

HINT:

- Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).
- This torque value is effective when SST is parallel to the torque wrench.

2. FILL RESERVOIR WITH BRAKE FLUID (See page [BR-5](#))

3. BLEED BRAKE LINE (See page [BR-5](#))

4. CHECK FLUID LEVEL IN RESERVOIR (See page [BR-7](#))

5. CHECK FOR BRAKE FLUID LEAKAGE

6. INSTALL FRONT WHEEL

Torque: 112 N*m (1,137 kgf*cm, 82 ft.*lbf)