


REAR BRAKE FLEXIBLE HOSE

COMPONENTS

BR

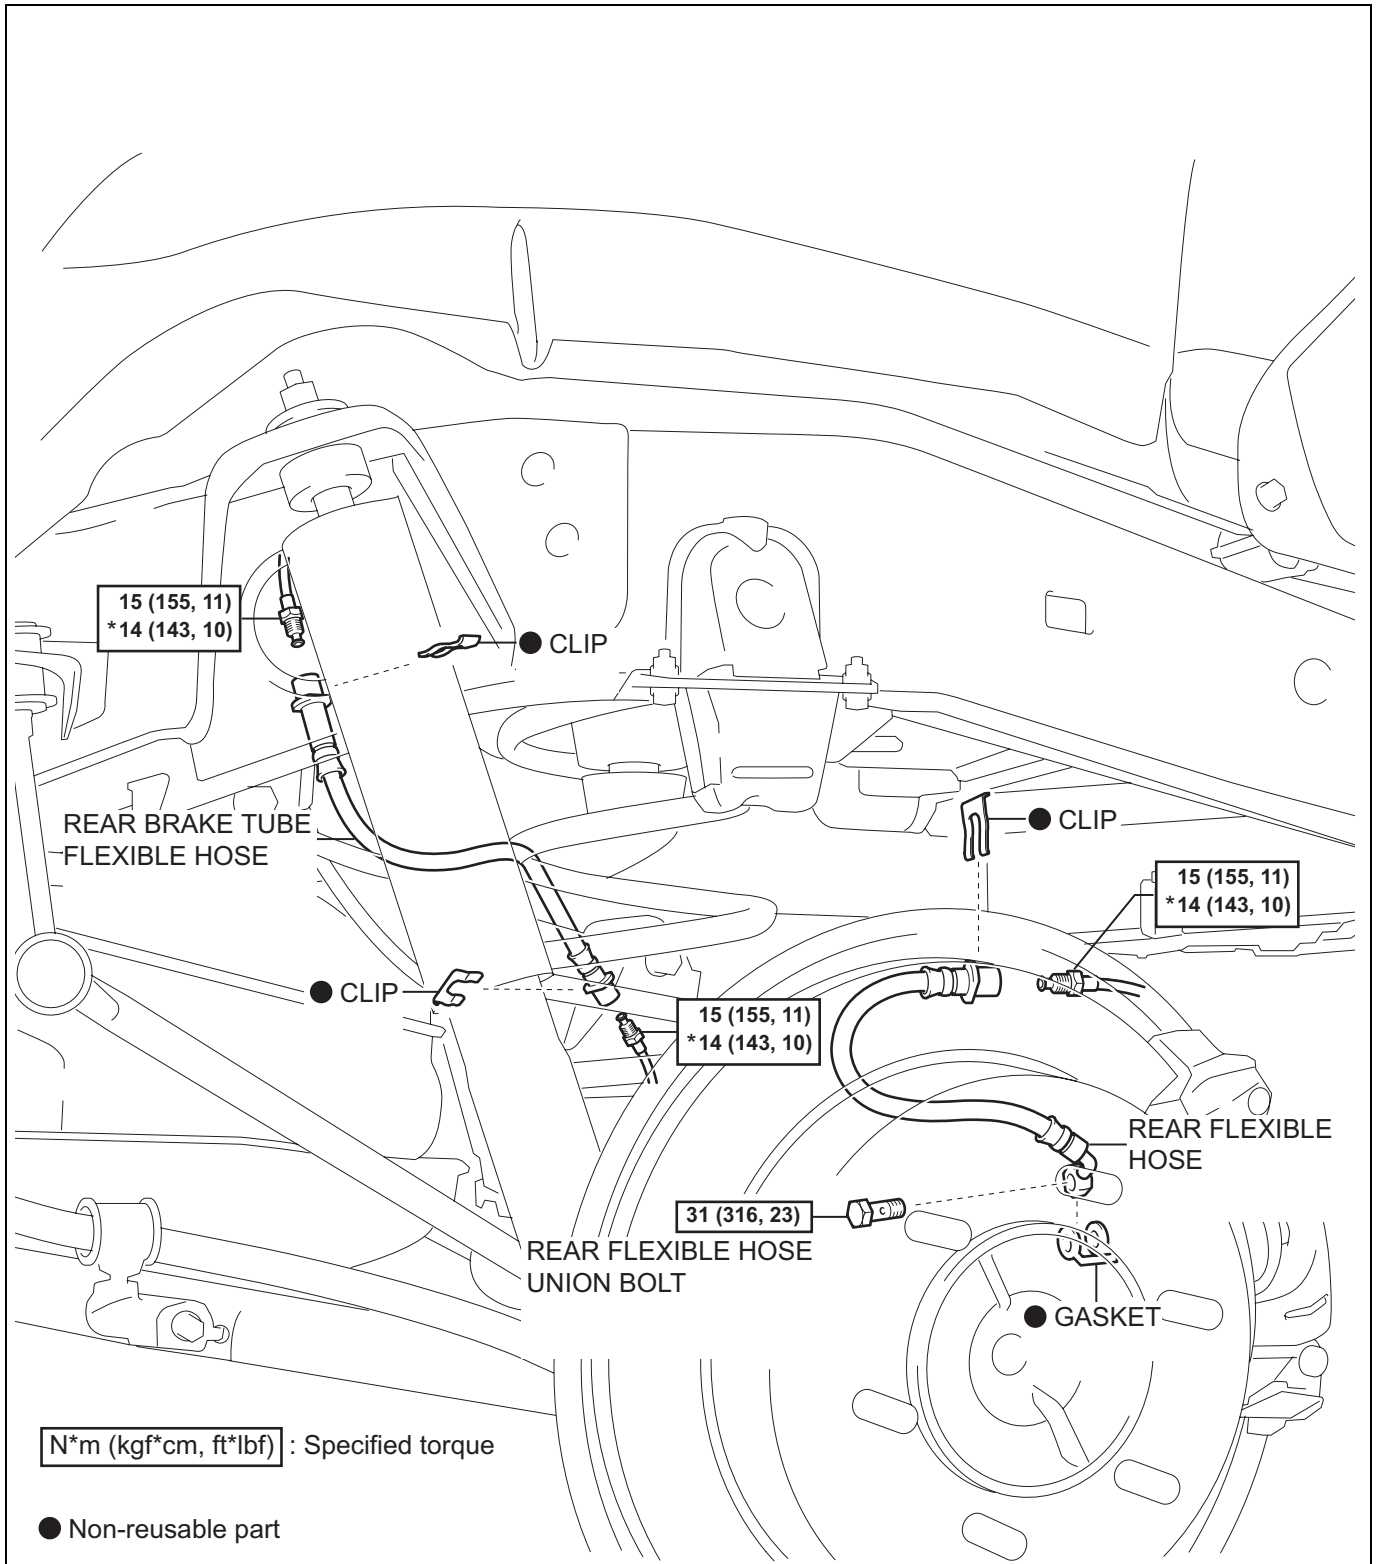

N*m (kgf*cm, ft*lbf) : Specified torque

● Non-reusable part

* For use with SST

REMOVAL

1. REMOVE REAR WHEEL

2. DRAIN BRAKE FLUID

NOTICE:

Immediately wash off any brake fluid that comes into contact with any painted surfaces.

3. REMOVE REAR FLEXIBLE HOSE

- (a) Remove the union bolt and gasket and separate the flexible hose from the disc brake cylinder.

HINT:

Use a container to collect the brake fluid as it drains out.

- (b) Using SST, separate the brake tube.

SST 09023-00101

HINT:

Use a container to collect the brake fluid as it drains out.

- (c) Remove the clip and flexible hose.

4. REMOVE REAR BRAKE TUBE FLEXIBLE HOSE

- (a) Using SST, separate the brake tubes.




SST 09023-00101

HINT:

Use a container to collect the brake fluid as it drains out.

- (b) Remove the 2 clips and flexible hose.

BR

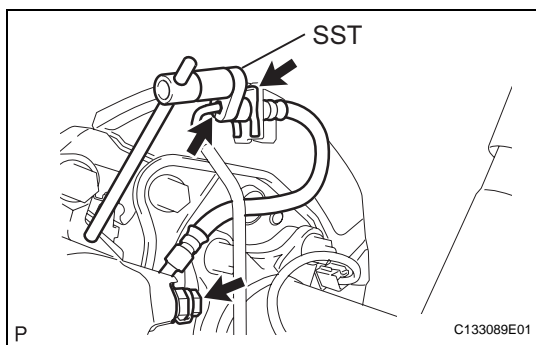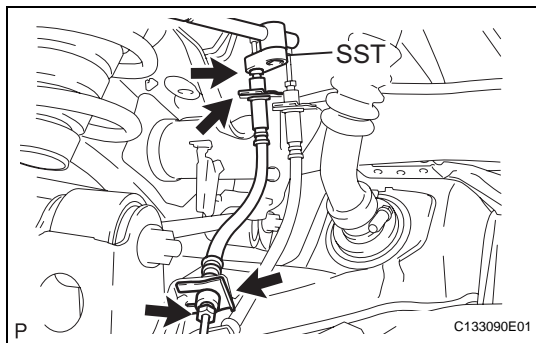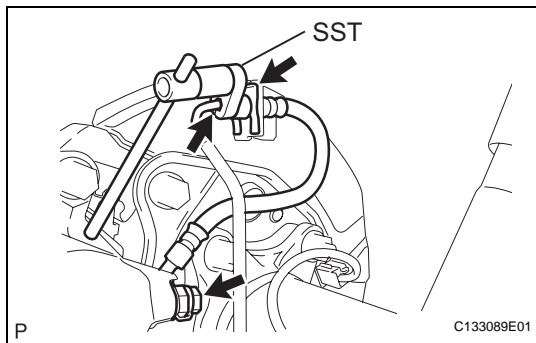

INSTALLATION

1. INSTALL REAR FLEXIBLE HOSE

- (a) Install the flexible hose with a new clip.

- (b) Using SST, install the brake tube onto the flexible hose.

SST 09023-00101

Torque: for use without SST

15 N*m (155 kgf*cm, 11 ft.*lbf)


for use with SST

14 N*m (143 kgf*cm, 10 ft.*lbf)

HINT:

- Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).
 - This torque value is effective when SST is parallel to the torque wrench.
- (c) Install the flexible hose onto the disc brake cylinder with the union bolt and a new gasket.

Torque: 31 N*m (316 kgf*cm, 23 ft.*lbf)

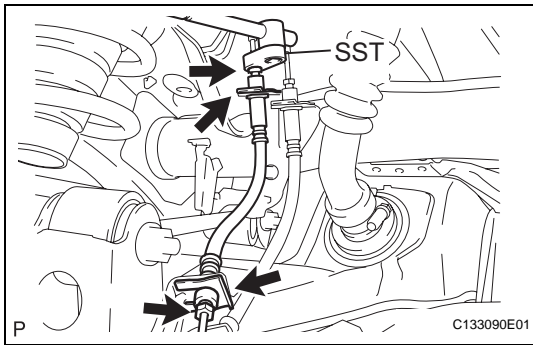

2. INSTALL REAR BRAKE TUBE FLEXIBLE HOSE

- (a) Install the flexible hose with 2 new clips.
- (b) Using SST, install the 2 brake tubes onto the flexible hose.

SST 09023-00101

Torque: for use without SST

15 N*m (155 kgf*cm, 11 ft.*lbf)

for use with SST

14 N*m (143 kgf*cm, 10 ft.*lbf)

HINT:

- Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).
- This torque value is effective when SST is parallel to the torque wrench.

3. FILL RESERVOIR WITH BRAKE FLUID (See page [BR-5](#))

4. BLEED BRAKE LINE (See page [BR-5](#))

5. CHECK FLUID LEVEL IN RESERVOIR (See page [BR-7](#))

6. CHECK FOR BRAKE FLUID LEAKAGE

7. INSTALL REAR WHEEL

Torque: 112 N*m (1,137 kgf*cm, 82 ft.*lbf)