
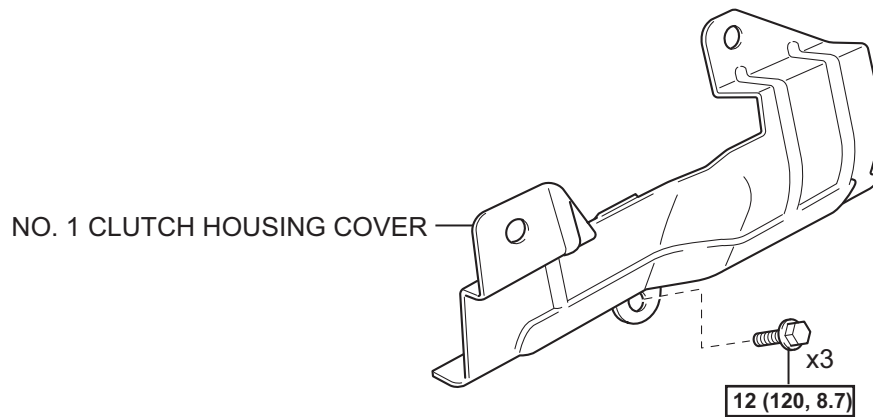


CLUTCH RELEASE CYLINDER

COMPONENTS

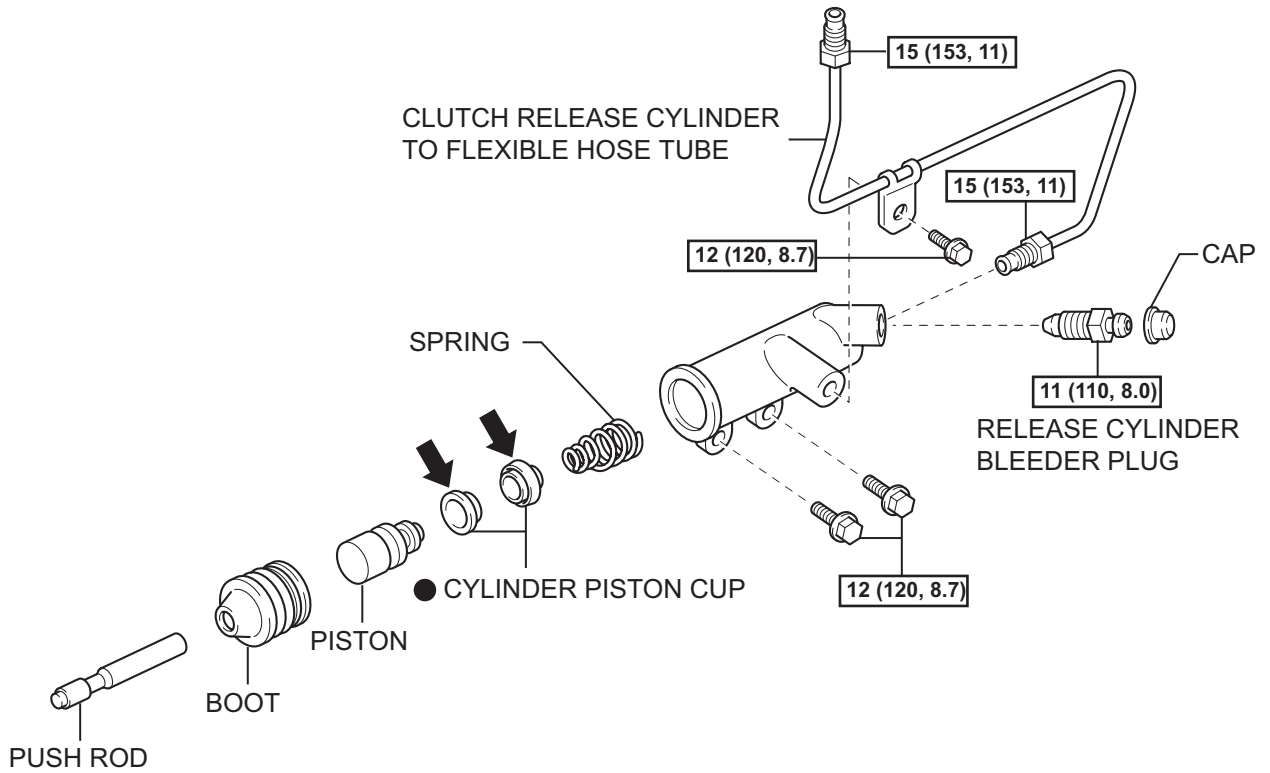

N*m (kgf*cm, ft*lbf) :Specified torque

● Non-reusable part ← Lithium soap base glycol grease


Y

C133788E01

CL


REMOVAL

1. **DRAIN CLUTCH FLUID**
2. **REMOVE NO. 1 CLUTCH HOUSING COVER**
 - (a) Remove the 3 bolts and No. 1 clutch housing cover.

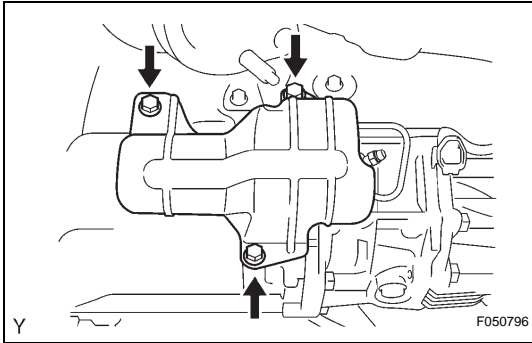

3. **DISCONNECT CLUTCH RELEASE CYLINDER TO FLEXIBLE HOSE TUBE**

- (a) Using SST, disconnect the flexible hose tube.
SST 09023-00101
- (b) Remove the bolt and clutch line bracket.
HINT:
Use a container to catch the fluid.

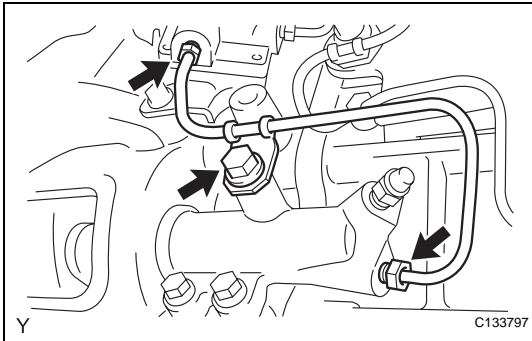

4. **REMOVE CLUTCH RELEASE CYLINDER ASSEMBLY**

- (a) Remove the 2 bolts and pull out the clutch release cylinder.

