


BACK DOOR LOCK

COMPONENTS


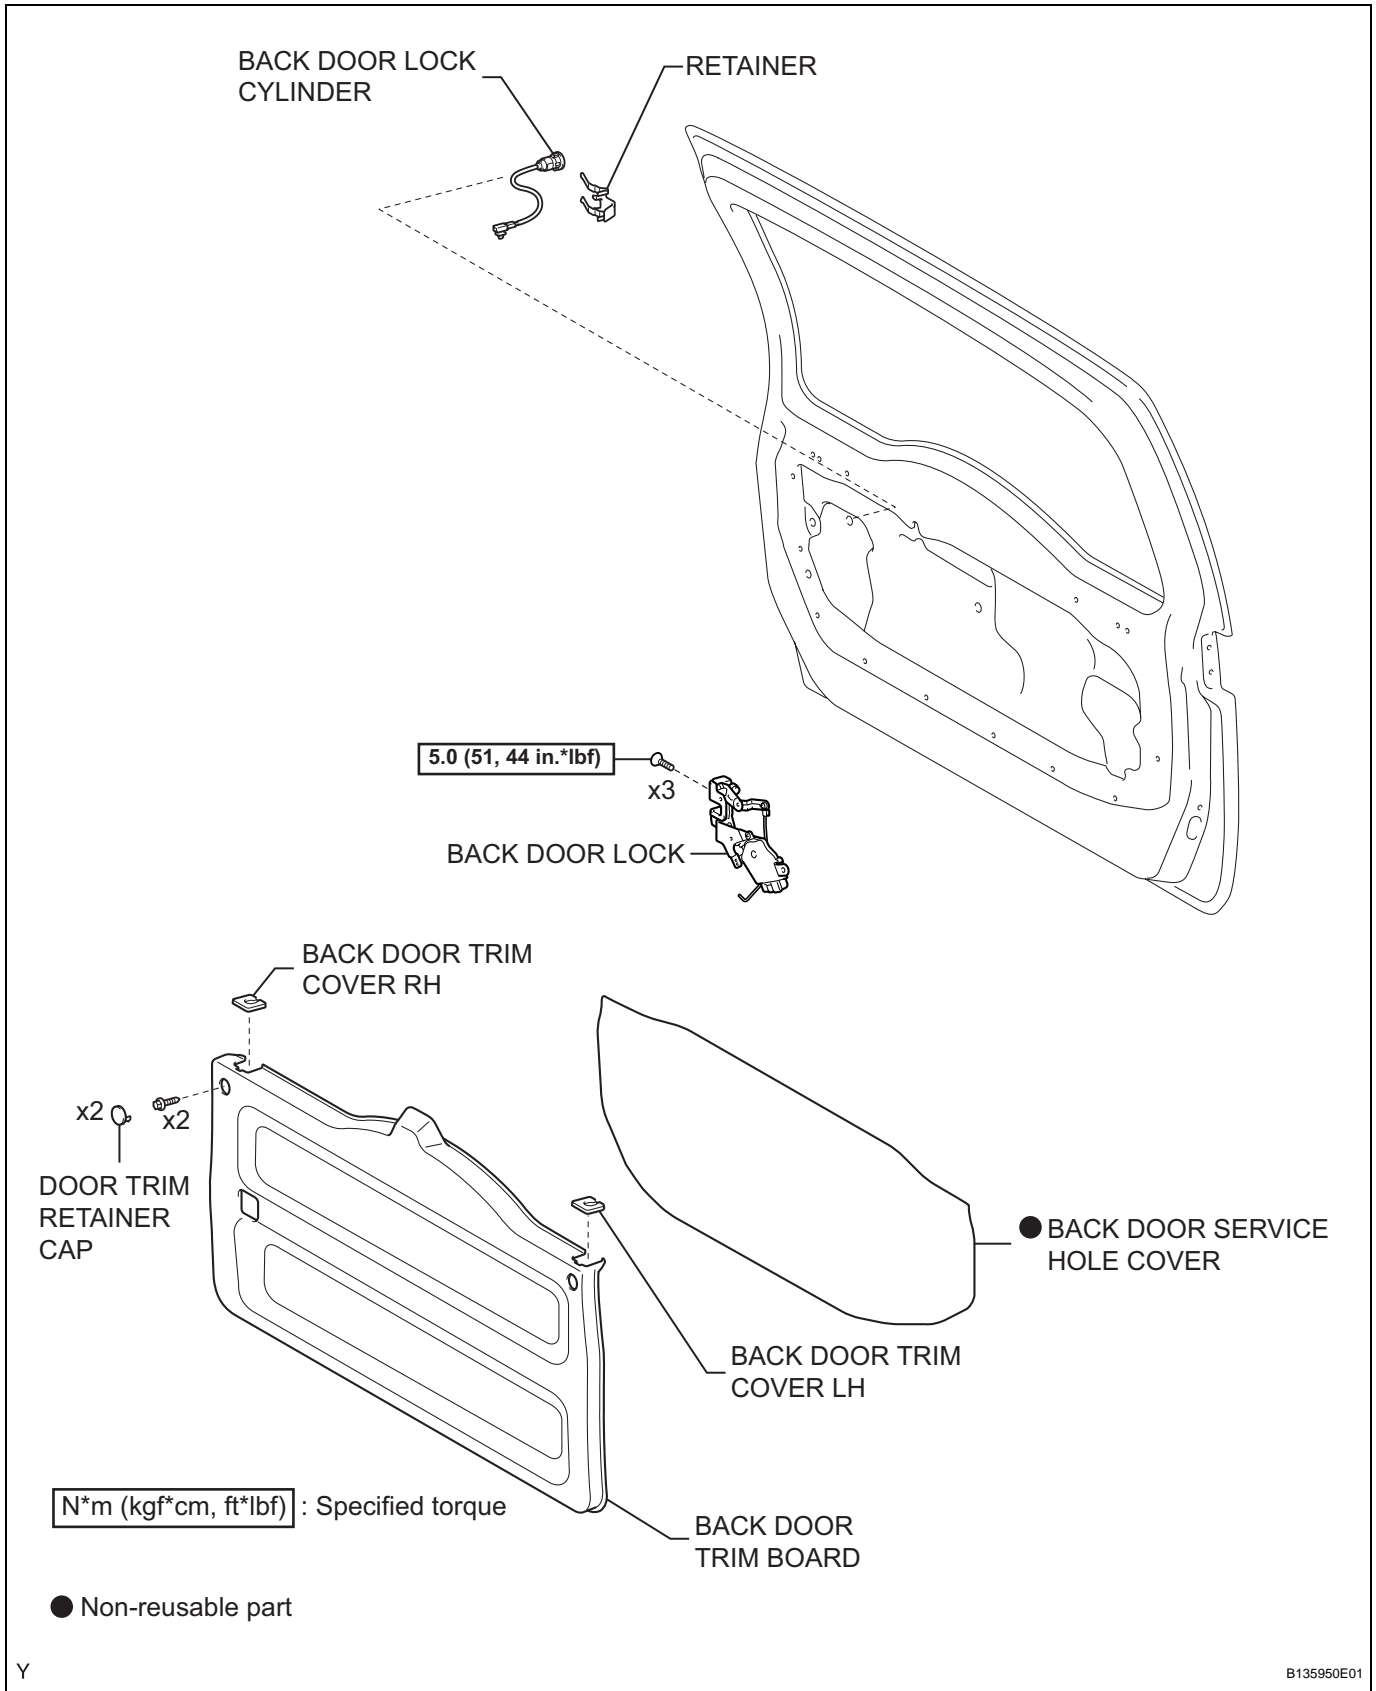


DL

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
2. REMOVE BACK DOOR TRIM COVER RH (See page ED-48)
3. REMOVE BACK DOOR TRIM COVER LH
HINT:
Use the same procedure as for the RH side.
4. REMOVE DOOR TRIM RETAINER CAP (See page ED-48)
5. REMOVE BACK DOOR TRIM BOARD (See page ED-49)
6. REMOVE BACK DOOR SERVICE HOLE COVER (See page ED-49)
7. REMOVE BACK DOOR LOCK

- (a) Disconnect the back door lock rod as shown in the illustration.
- (b) Disconnect the connector.

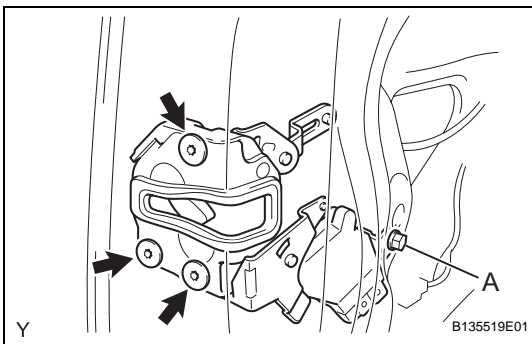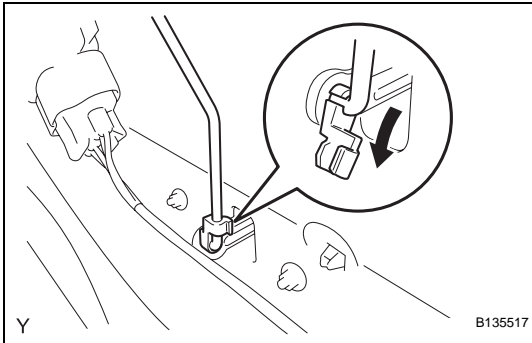


- (c) Loosen bolt A.
- (d) Using "Torx" socket wrench T30, remove the 3 screws and the back door lock.

NOTICE:

Do not drop or damage the back door lock when removing the screws.

HINT:

Remove the back door lock through the service hole.

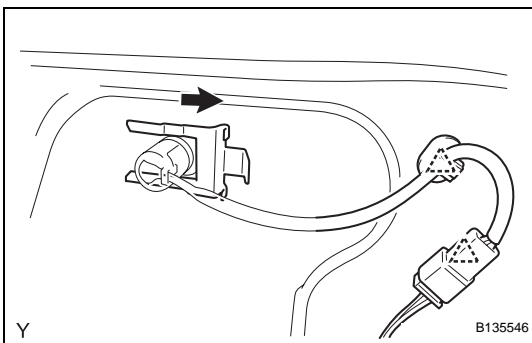

8. REMOVE BACK DOOR LOCK CYLINDER

- (a) Disconnect the connector and the 2 clamps, then remove the retainer.