

CUSTOMIZE PARAMETERS

1. CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER (REFERENCE)

HINT:

- When the customer requests modification of items, first make sure that the functions can be customized.
- Make a note of the current settings before customization.
- When troubleshooting items, first make sure that the functions are set to their default settings.
- The following items can be customized.

Power door lock control system:

Display (Item)	Default	Contents	Setting
UNLK/KEY TWICE	ON	Unlocks only driver side door when driver side door key cylinder turned to unlock once, and unlocks all doors when turned to unlock twice. For OFF setting, turning it once unlocks all doors.	ON / OFF

PROBLEM SYMPTOMS TABLE

HINT:

Use the table below to help determine the causes of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Power door lock control system

Symptom	Suspected area	See page
All Doors cannot be Locked / Unlocked Simultaneously	Power window regulator master switch (Door control switch)	DL-16
	Door control switch (Passenger side)	
	Front door lock assembly LH	
	Front door lock assembly RH	
	Back door lock cylinder	
	Wire harness	
	Main body ECU	
Only Driver Door LOCK / UNLOCK Functions do not Operate	Back door ECU	DL-29
	Front door lock assembly LH	
	Wire harness	
Only Passenger Door LOCK / UNLOCK Functions do not Operate	Main body ECU	DL-31
	Front door lock assembly RH	
	Wire harness	
Only Back Door LOCK / UNLOCK Functions do not Operate	Main body ECU	DL-33
	Back door lock cylinder	
	Wire harness	
Key Lock-in Prevention Function does not Work Properly	Main body ECU	DL-35
	Front door courtesy light switch LH (Driver side)	
	Unlock warning switch	
	Wire harness	