



44. REMOVE KEY INTER LOCK SOLENOID (for Automatic Transmission)

- (a) Disconnect the clamp from the steering column bracket upper.

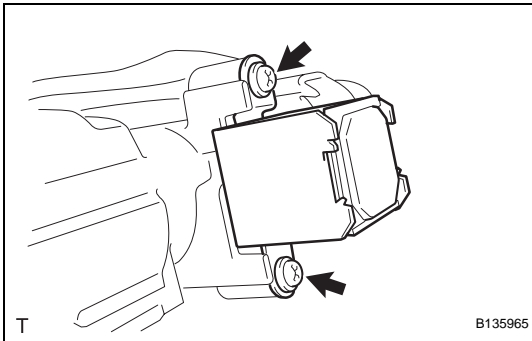


- (b) Remove the 2 screws and the key inter lock solenoid.

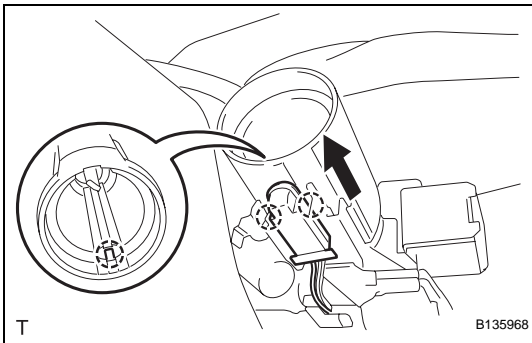

45. REMOVE UNLOCK WARNING SWITCH

- (a) Disconnect the connector.
 (b) Remove the unlock warning switch toward the rear of the vehicle by pushing up the center part.

DL

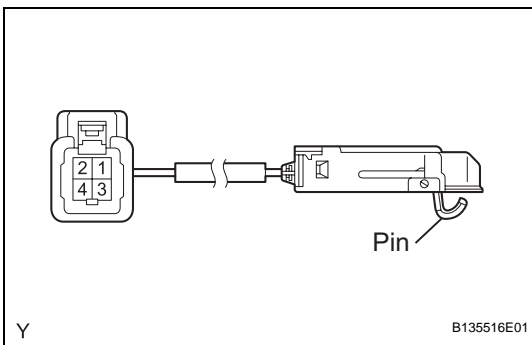

INSPECTION

1. INSPECT UNLOCK WARNING SWITCH


- (a) Check the resistance.
 (1) Using an ohmmeter, measure the resistance and check the results in accordance with the value(s) in the table below.

Standard Resistance


Tester Connection	Condition	Specified Condition
1 - 2	Pin released	10 k Ω or higher
1 - 2	Pin pushed in	Below 1 Ω

If the result is not as specified, replace the unlock warning switch.


INSTALLATION

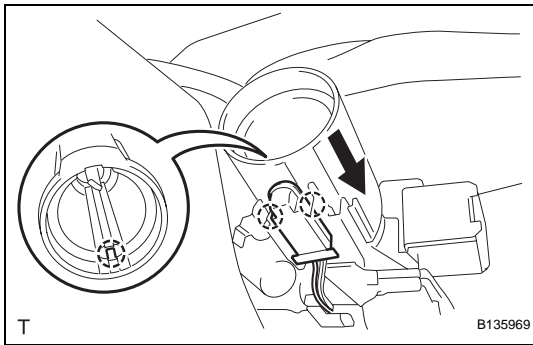


1. **INSTALL UNLOCK WARNING SWITCH**
 - (a) Install the unlock warning switch onto the steering column bracket upper.
 - (b) Connect the connector.

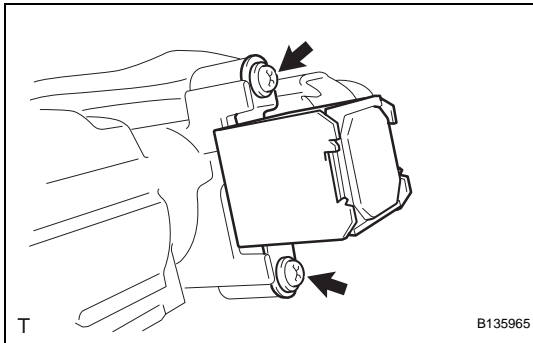

2. **INSTALL KEY INTER LOCK SOLENOID (for Automatic Transmission)**
 - (a) Install the key inter lock solenoid with the 2 screws.

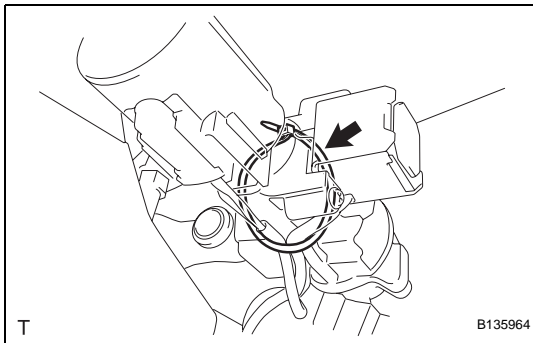

- (b) Install the clamp onto the steering column bracket upper.

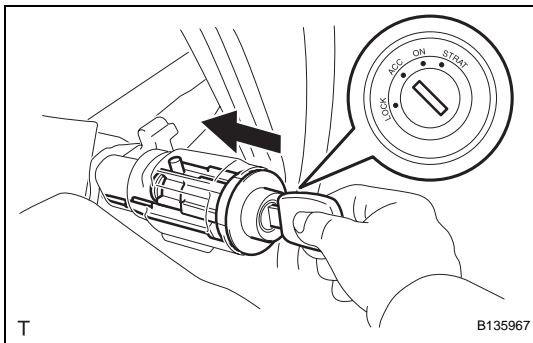

3. **INSTALL IGNITION SWITCH LOCK CYLINDER AND KEY SET**
 - (a) Make sure that the ignition switch lock cylinder is in the ACC position.
 - (b) Install the ignition switch lock cylinder.
4. **INSTALL INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-26](#))**
5. **CONNECT PASSENGER AIRBAG CONNECTOR (See page [IP-26](#))**
6. **REMOVE INSTRUMENT PANEL FINISH PANEL END LH (See page [IP-27](#))**
7. **INSTALL ASSIST GRIP RETAINER RH (See page [IP-27](#))**
8. **INSTALL ASSIST GRIP RETAINER LH (See page [IP-27](#))**
9. **INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (See page [AV-62](#))**

10. INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY (See page [IP-27](#))
11. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY (See page [IP-27](#))
12. INSTALL NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY (See page [IP-27](#))
13. INSTALL INSTRUMENT PANEL LOWER FINISH PANEL SUB-ASSEMBLY RH (See page [IP-28](#))
14. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-28](#))
15. INSTALL COMBINATION METER ASSEMBLY (See page [IP-28](#))
16. INSTALL INSTRUMENT CLUSTER LOWER FINISH PANEL (See page [IP-29](#))
17. INSTALL LOWER INSTRUMENT PANEL LH (See page [IP-29](#))
18. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LH (See page [IP-29](#))
19. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [IP-30](#))
20. INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY (See page [IP-30](#))
21. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-30](#))
22. INSTALL CONSOLE UPPER PANEL NO. 1 GARNISH (See page [IP-31](#))
23. INSTALL FRONT CONSOLE BOX ASSEMBLY (See page [IP-31](#))
24. INSTALL BOX BOTTOM MAT (See page [IP-31](#))
25. INSTALL CONSOLE UPPER REAR PANEL SUB-ASSEMBLY (See page [IP-31](#))
26. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for 4WD) (See page [IP-32](#))
27. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (for Manual Transmission) (See page [IP-32](#))
28. INSTALL PARKING BRAKE HOLE COVER SUB-ASSEMBLY (See page [IP-32](#))
29. INSTALL RADIO RECEIVER ASSEMBLY (See page [AV-56](#))
30. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY (See page [IP-32](#))
31. INSTALL INSTRUMENT PANEL GARNISH LH (See page [IP-33](#))

32. **INSTALL INSTRUMENT PANEL GARNISH RH** (See page [IP-33](#))
33. **INSTALL FRONT PILLAR GARNISH RH** (See page [IR-43](#))
34. **INSTALL FRONT PILLAR GARNISH LH** (See page [IR-43](#))
35. **INSTALL ASSIST GRIP ASSEMBLY** (See page [IR-43](#))
36. **INSTALL ASSIST GRIP PLUG** (See page [IR-44](#))
37. **INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH** (See page [IP-33](#))
38. **INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH** (See page [IP-33](#))
39. **INSTALL COWL SIDE TRIM BOARD RH** (See page [IR-45](#))
40. **INSTALL COWL SIDE TRIM BOARD LH** (See page [IR-45](#))
41. **INSTALL FOOTREST CLIP** (See page [IR-2](#))
42. **INSTALL FRONT FLOOR FOOTREST** (See page [IR-2](#))
43. **INSTALL FRONT DOOR SCUFF PLATE RH** (See page [IR-45](#))
44. **INSTALL FRONT DOOR SCUFF PLATE LH** (See page [IR-45](#))
45. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
46. **INSPECT SRS WARNING LIGHT**
(See page [RS-29](#))