

## REMOVAL

### HINT:

The procedure described below is for the LH side. Use the same procedure for both the RH and LH sides, unless otherwise specified.

#### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### 2. REMOVE FRONT DOOR ARMREST BASE UPPER PANEL

### HINT:

Use the same procedure as for the RH side (See page [ED-9](#)).

#### 3. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY

### HINT:

Use the same procedure as for the RH side (See page [ED-9](#)).

#### 4. REMOVE FRONT DOOR NO. 2 SERVICE HOLE COVER

### HINT:

Use the same procedure as for the RH side (See page [ED-10](#)).

#### 5. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY

##### (a) for Driver Side:

- (1) Provisionally install the power window regulator master switch.

##### (b) for Front Passenger Side:

- (1) Provisionally install the power window regulator switch.


##### (c) Close the door glass.

##### (d) Disconnect the connector.

##### (e) Remove the 3 bolts and the outer rear view mirror.


### NOTICE:


**Do not drop or damage the outer rear view mirror when removing the bolts.**

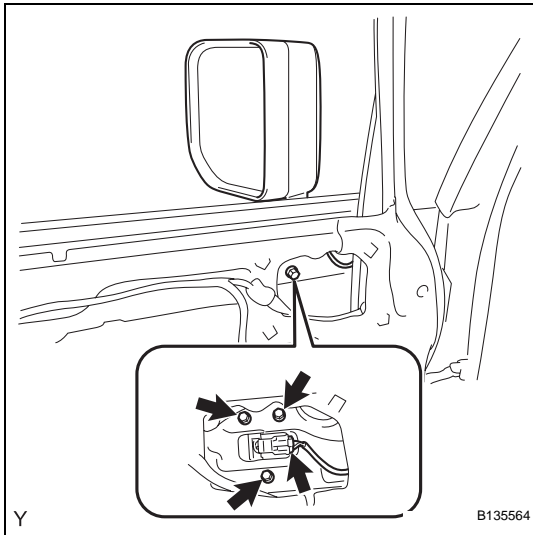

#### 6. REMOVE FRONT DOOR GLASS OUTER WEATHERSTRIP ASSEMBLY

- (a) Apply protective tape to the front door panel in the area around the front door glass outer weatherstrip.

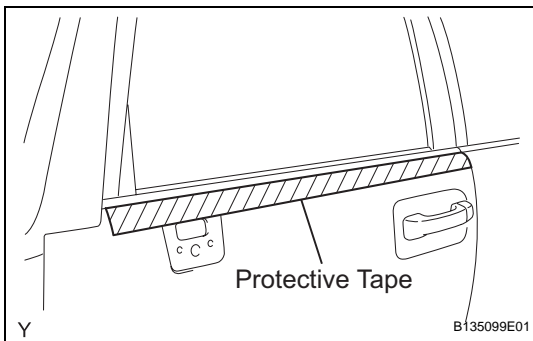

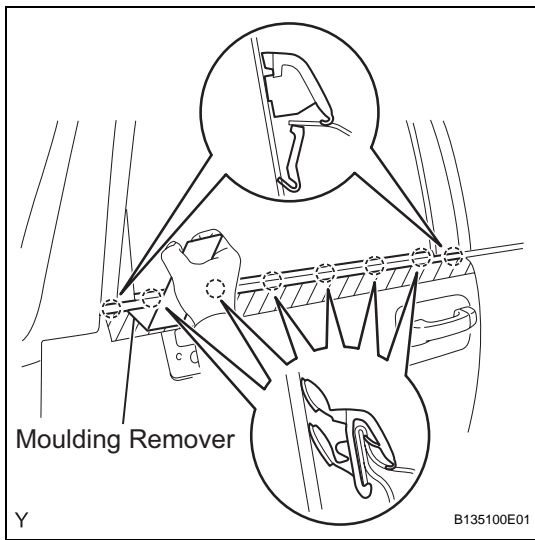

- (b) Using a moulding remover, disengage the 8 claws and remove the front door glass outer weatherstrip.