

INSTALLATION

HINT:


The procedure described below is for the LH side. Use the same procedure for both the RH and LH sides, unless otherwise specified.

1. INSTALL BACK DOOR OUTSIDE MOULDING RH


- (a) Install 6 new clips in the positions shown in the illustration.

NOTICE:


If you install the clips wrongly, the installation of the back door outside moulding will be improper.

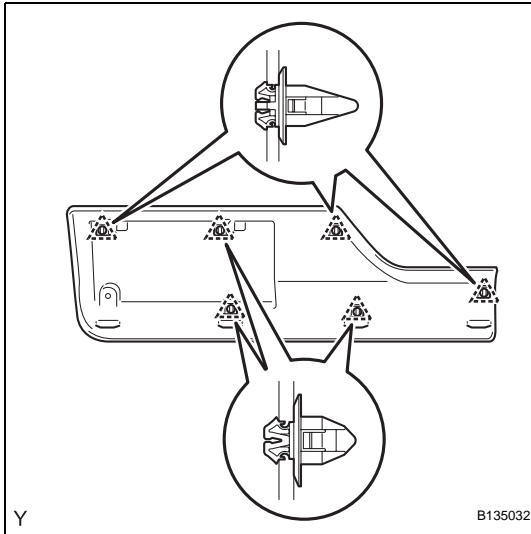


- (b) Engage the 6 clips and install the back door outside moulding.

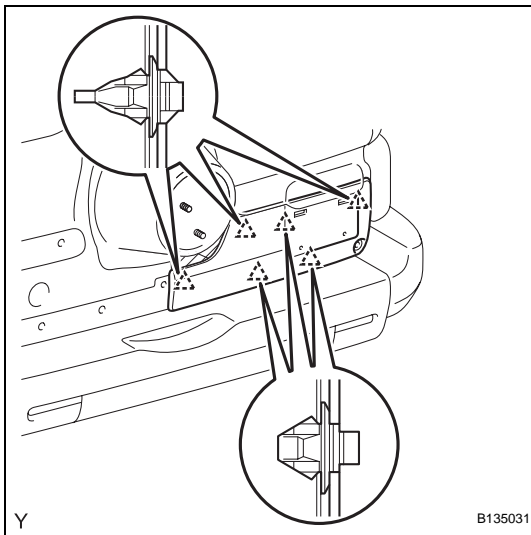

- (c) Tighten the screw.
(d) Remove the protective tape.

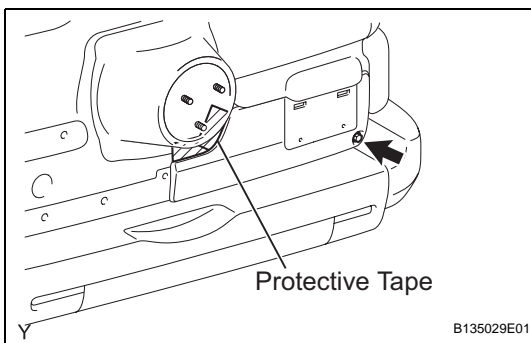

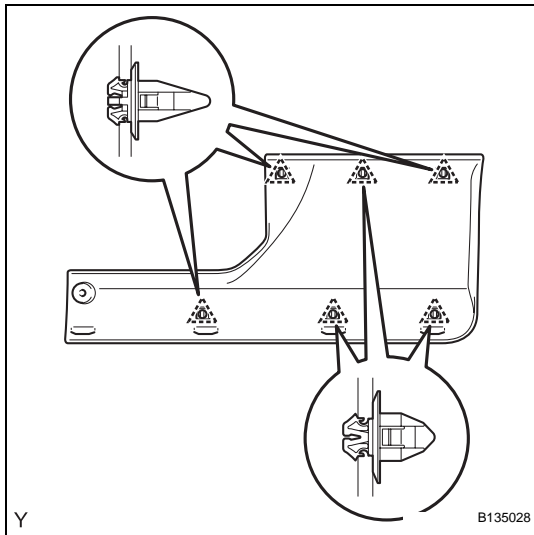


2. INSTALL BACK DOOR OUTSIDE MOULDING LH


- (a) Install 6 new clips in the positions shown in the illustration.

NOTICE:

If you install the clips wrongly, the installation of the back door outside moulding will be improper.

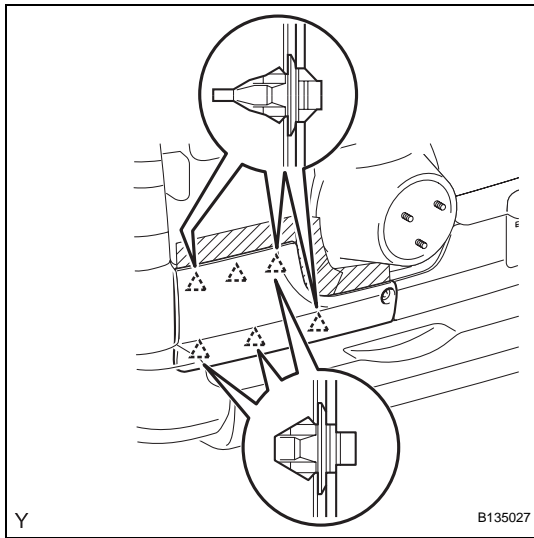

- (b) Engage the 6 clips and install the back door outside moulding.

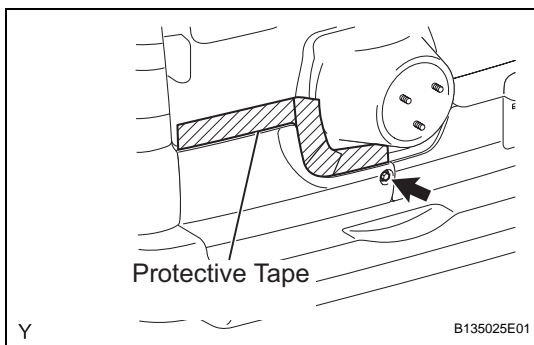


- (c) Tighten the screw.

- (d) Remove the protective tape.

3. INSTALL SPARE TIRE

Torque: 88 N*m (897 kgf*cm, 65 ft.*lbf)

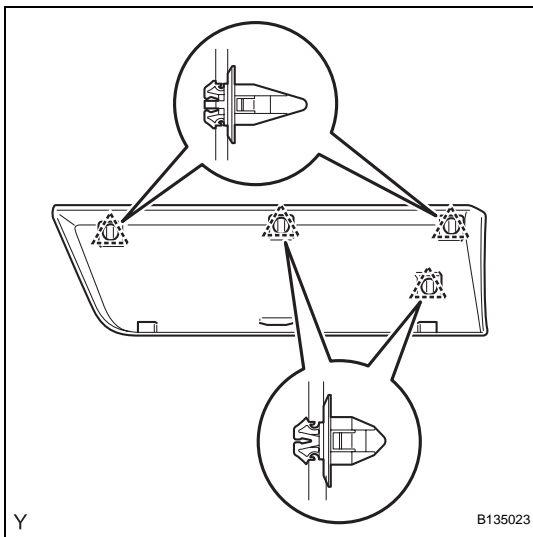


4. INSTALL ACCESS DOOR OUTSIDE MOULDING SUB-ASSEMBLY


- (a) Install 4 new clips in the positions shown in the illustration.

NOTICE:

If you install the clips wrongly, the installation of the access door outside moulding will be improper.

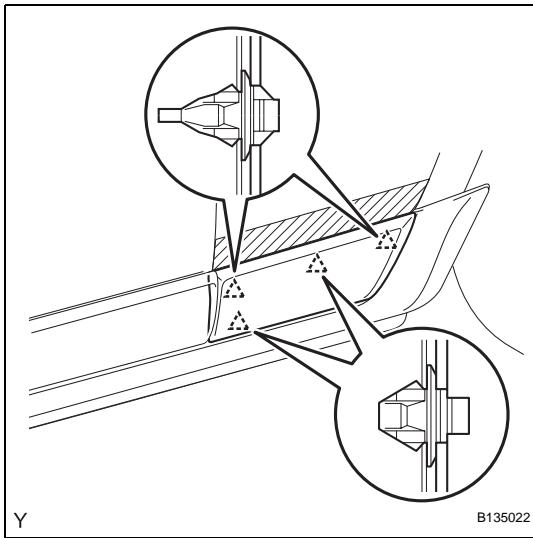


- (b) Engage the 4 clips and install the access door outside moulding.

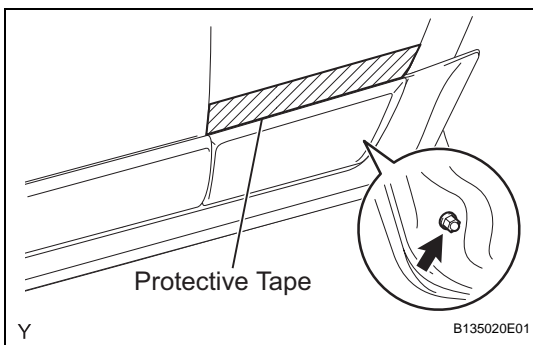

- (c) Tighten the nut.

Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)

- (d) Remove the protective tape.

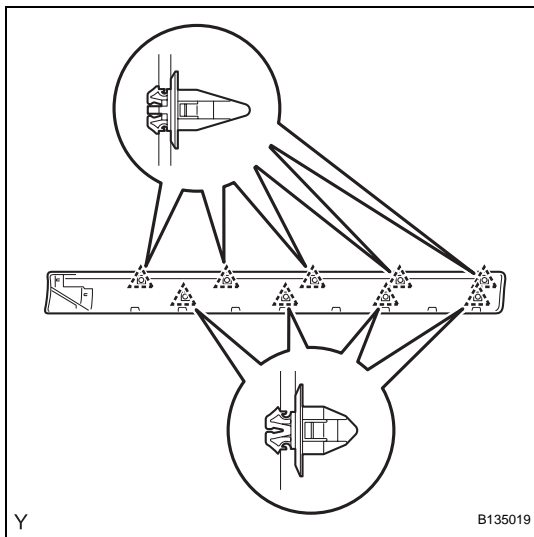


5. INSTALL FRONT DOOR OUTSIDE MOULDING SUB-ASSEMBLY


- (a) Install 9 new clips in the positions shown in the illustration.

NOTICE:

If you install the clips wrongly, the installation of the rear door outside moulding will be improper.

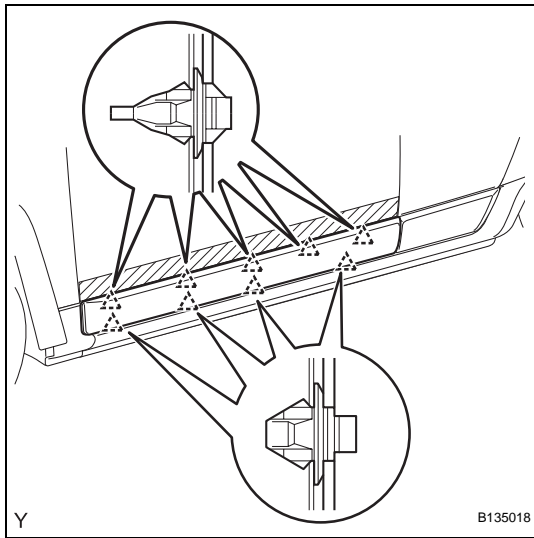

- (b) Engage the 9 clips and install the front door outside moulding.

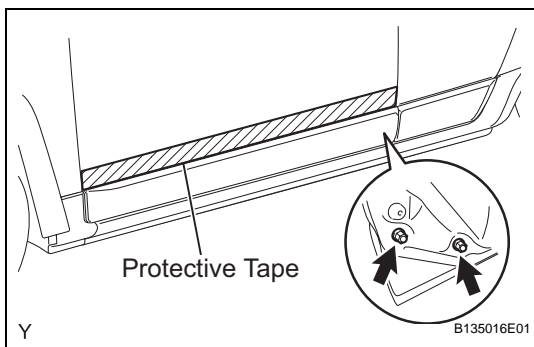

- (c) Tighten the 2 nuts.


Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)

- (d) Remove the protective tape.


6. INSTALL QUARTER PANEL MOULDING PAD

HINT:

Only follow this procedure when replacing the quarter outside moulding pad.

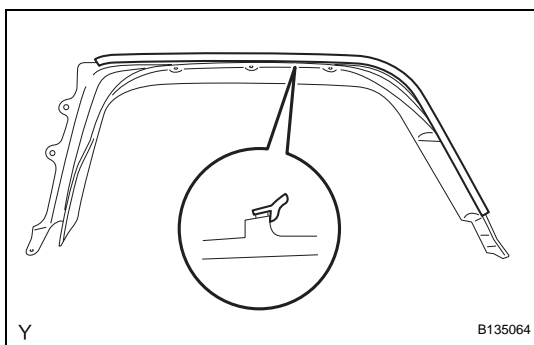

- (a) Install a new quarter outside moulding pad in the position shown in the illustration.

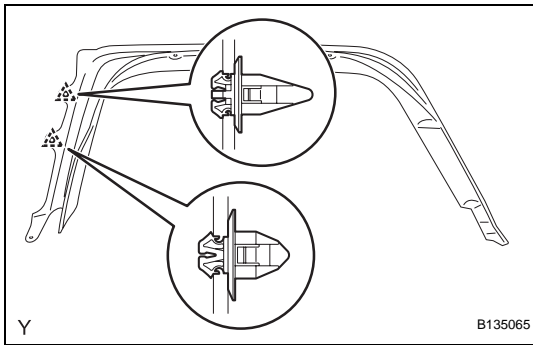


7. INSTALL QUARTER OUTSIDE MOULDING SUB-ASSEMBLY


- (a) Install 2 new clips in the positions shown in the illustration.

NOTICE:


If you install the clips wrongly, the installation of the quarter outside moulding will be improper.

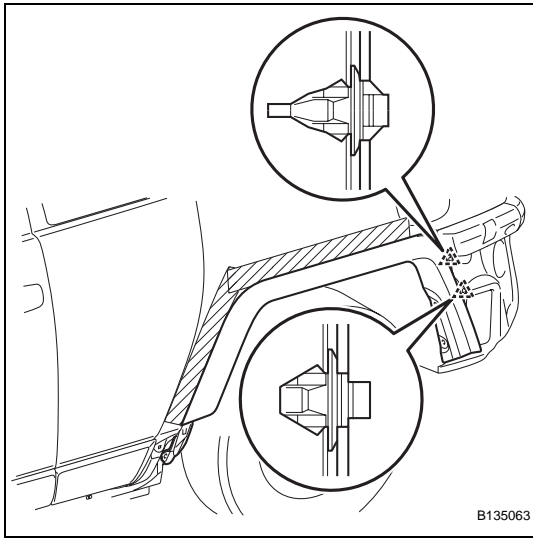

- (b) Engage the 2 clips and install the quarter outside moulding.

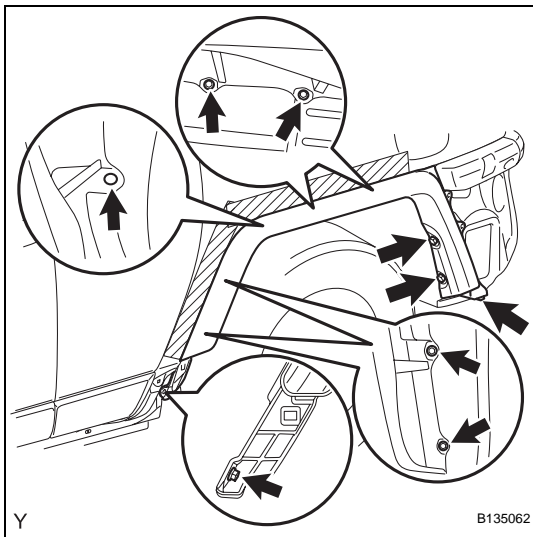


- (c) Tighten the 8 screws
Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)
- (d) Install the clip.

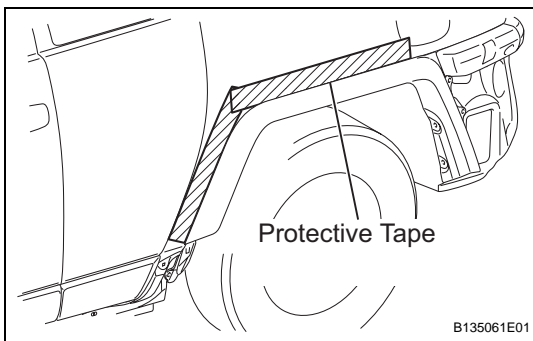


8. INSTALL FRONT FENDER OUTSIDE MOULDING PAD

HINT:

Only follow this procedure when replacing the front wheel opening extension pad.

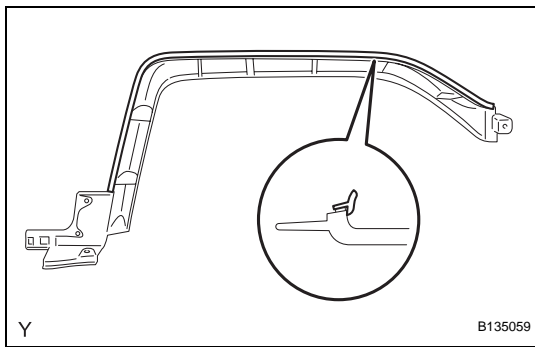

- (a) Install a new front wheel opening extension pad in the position shown in the illustration.

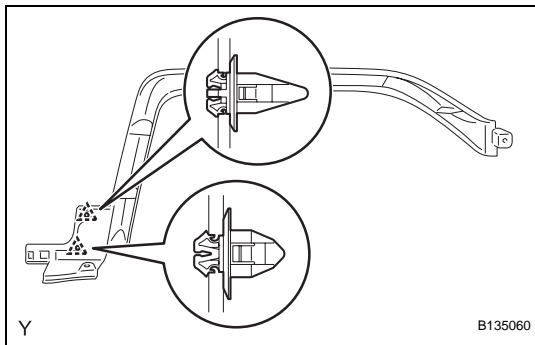


9. INSTALL FRONT FENDER MOULDING SUB-ASSEMBLY


- (a) Install 2 new clips in the positions shown in the illustration.

NOTICE:


If you install the clips wrongly, the installation of the front fender moulding will be improper.

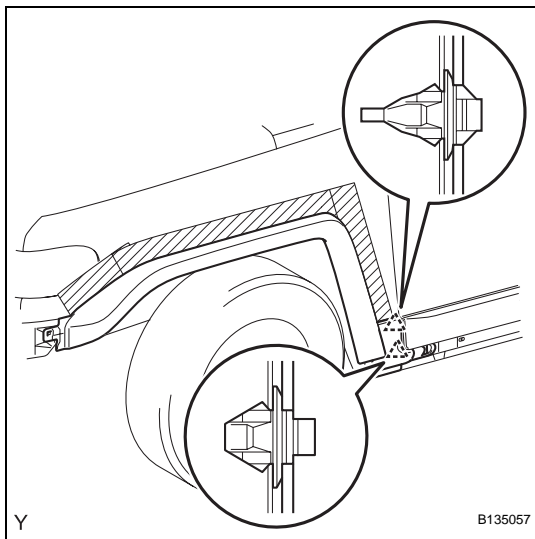

- (b) Engage the 2 clips and install the front fender moulding.

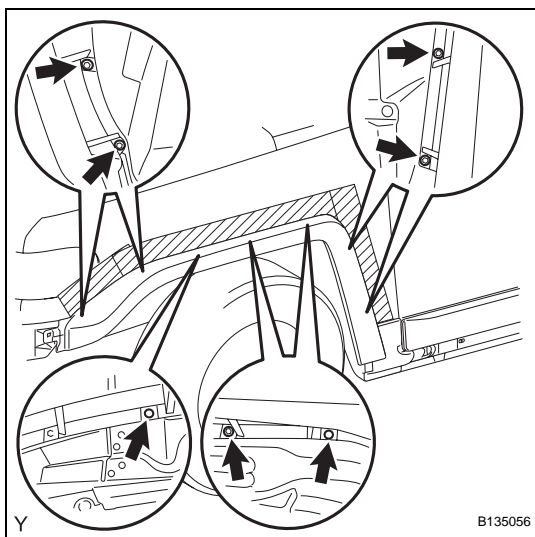

- (c) Tighten the 5 screws.
Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)
- (d) Install the 2 clips

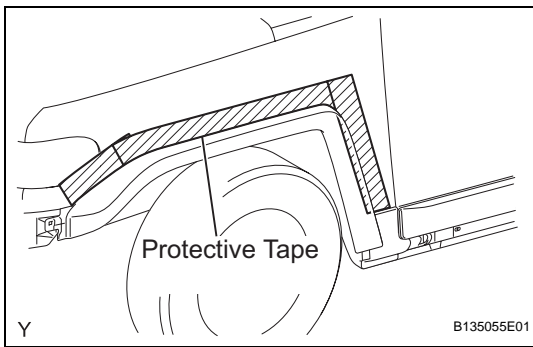


(e) Remove the protective tape.

10. INSTALL FRONT BUMPER SIDE SUPPORT (See page ET-9)

11. INSTALL ROCKER PANEL MOULDING


(a) Install 3 clips in the positions shown in the illustration.

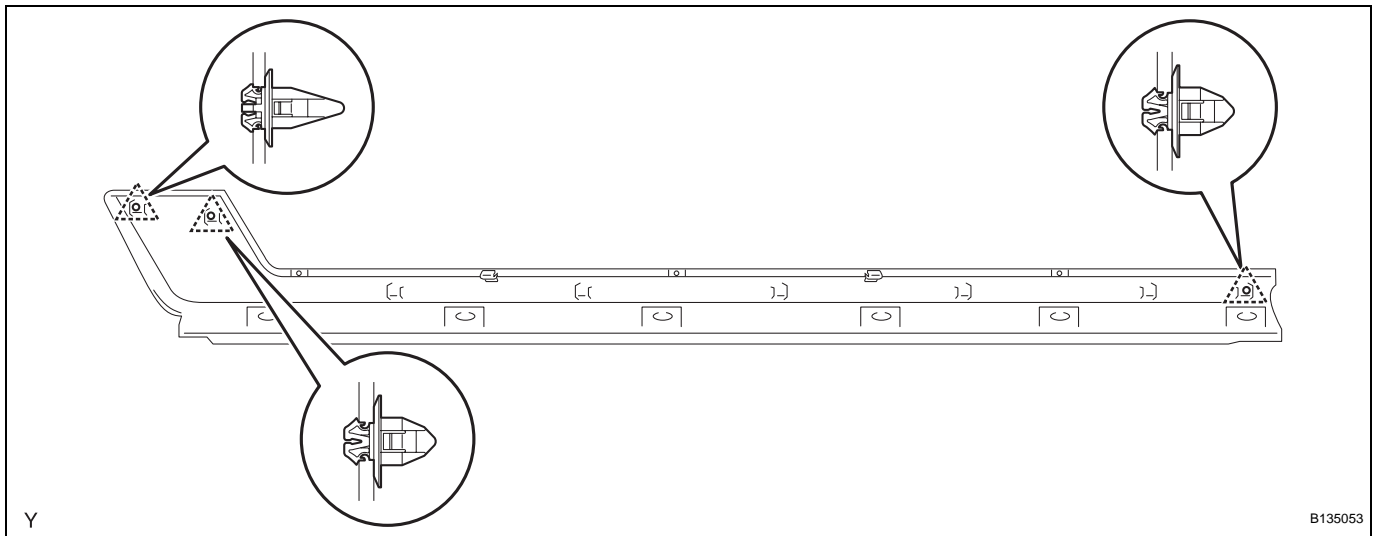

NOTICE:

If you install the clips wrongly, the installation of the rocker panel moulding will be improper.


(b) Engage the 5 clips and install the rocker panel moulding.

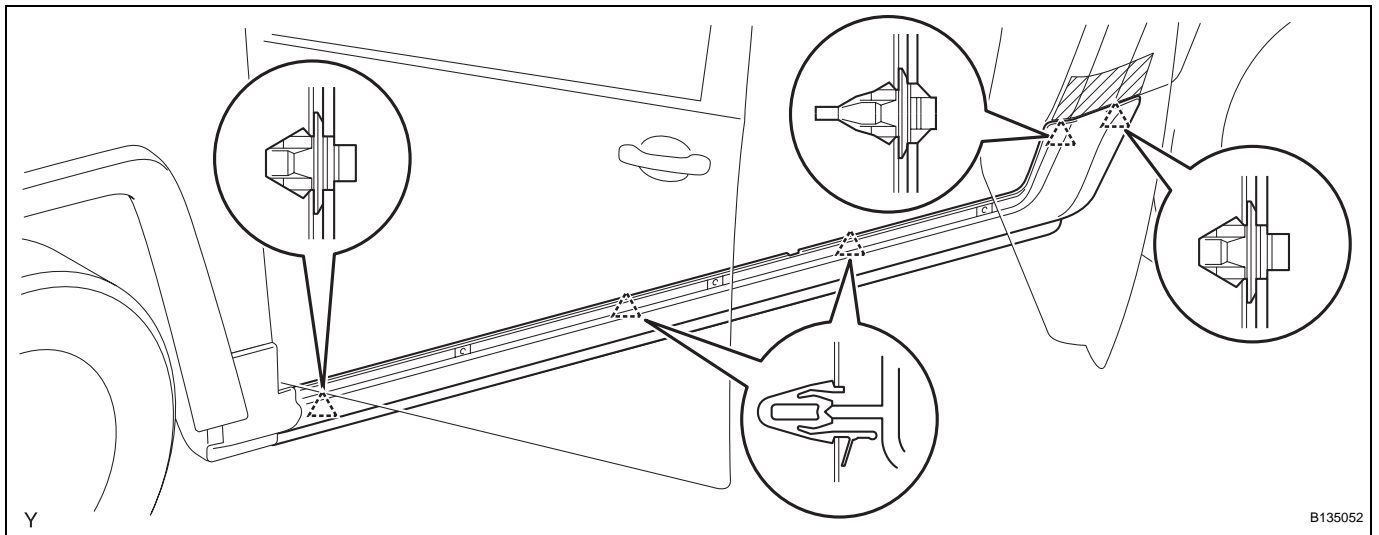

(c) Tighten the 3 screws.

Torque: 5.0 N*m (50 kgf*cm, 44 in.*lbf)

(d) Install the 6 retainers.

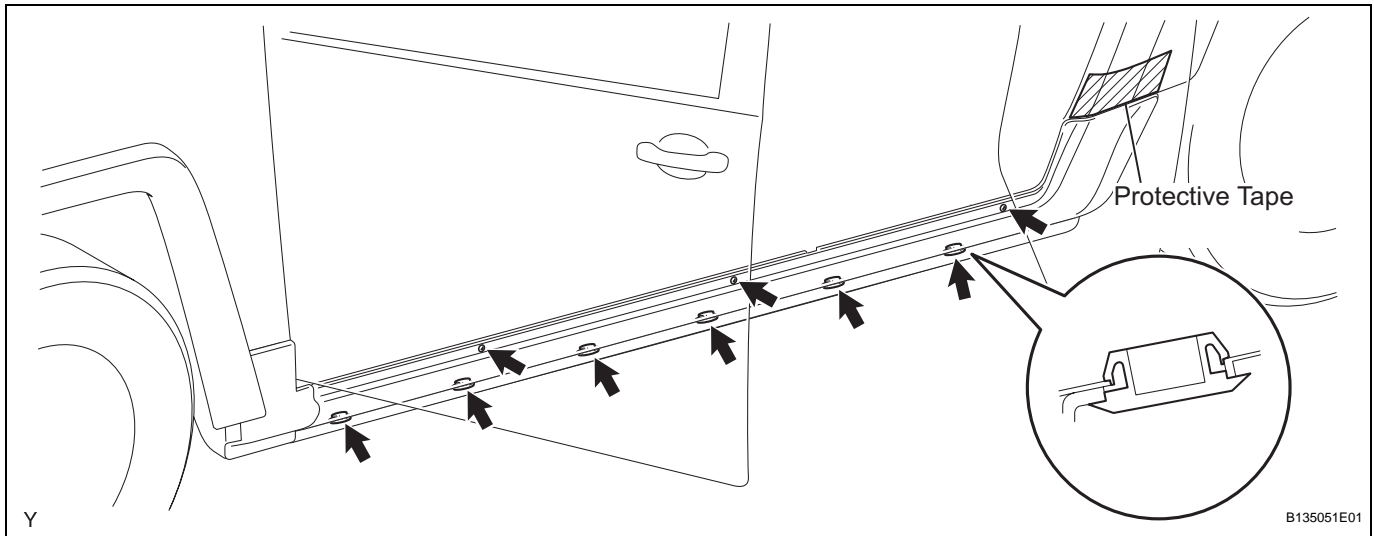

12. INSTALL SIDE STEP SUB-ASSEMBLY (See page [ET-87](#))


13. INSTALL QUARTER PANEL MUDGUARD (See page [ET-83](#))


14. INSTALL FRONT FENDER MUDGUARD (See page [ET-84](#))

15. INSTALL REAR BUMPER COVER (See page [ET-25](#))


16. INSTALL FRONT BUMPER COVER

(a) Engage the 2 claws and install the front bumper cover.

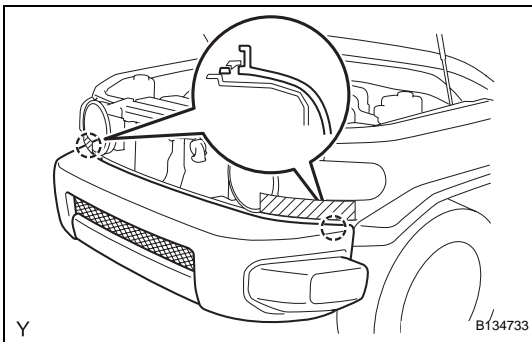


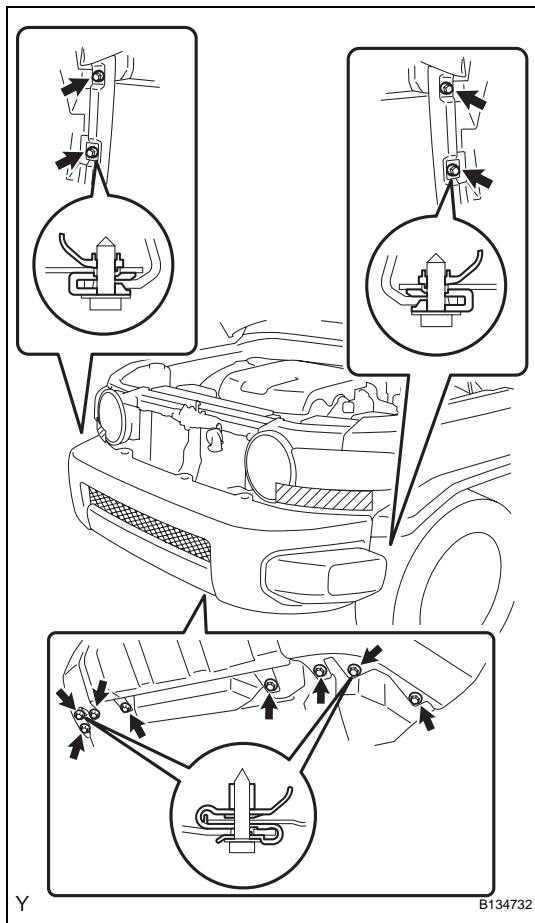

- (b) Tighten the 8 screws and the 4 bolts.
Torque: 3.0 N*m (30 kgf*cm, 27 in.*lbf) for screw
8.0 N*m (80 kgf*cm, 71 in.*lbf) for bolt

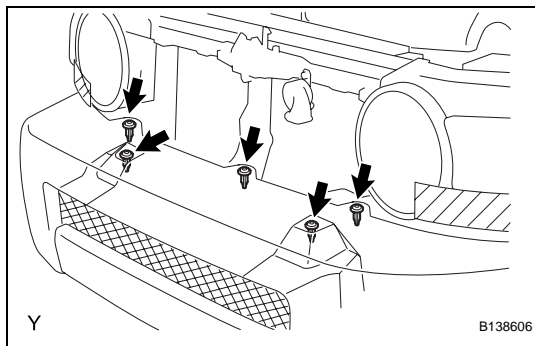

- (c) Install the 5 clips.

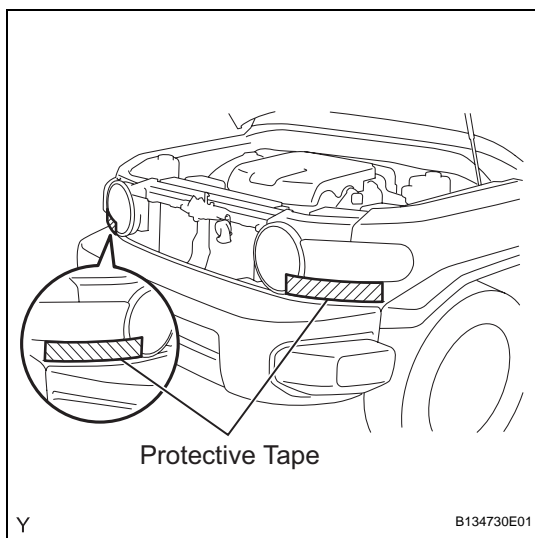

- (d) Remove the protective tape.

17. INSTALL RADIATOR GRILLE (See page [ET-11](#))

18. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (w/ Back Sonar)

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)