


FRONT FLOOR FOOTREST


COMPONENTS

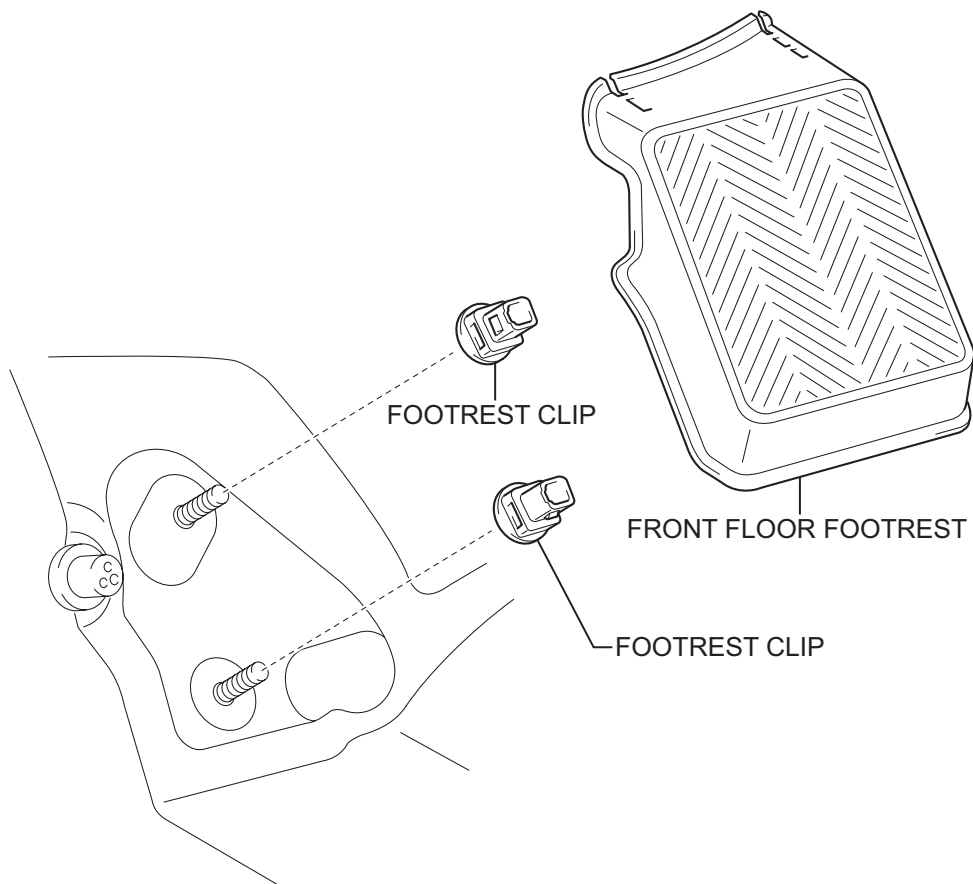

REMOVAL


1. REMOVE FRONT FLOOR FOOTREST

- (a) Disengage the 4 claws and remove the front floor footrest.

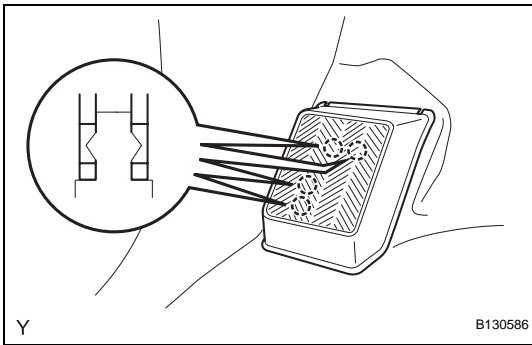

2. REMOVE FOOTREST CLIP

- (a) Remove the 2 footrest clips.

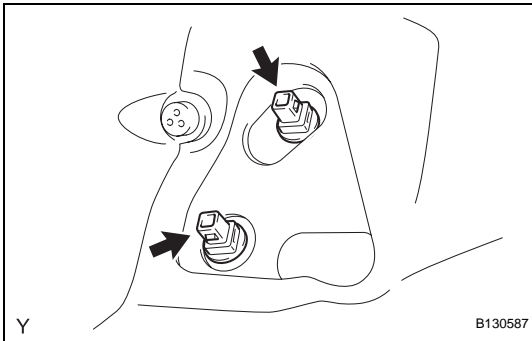


INSTALLATION

1. INSTALL FOOTREST CLIP

HINT:

Use the same procedure for both sides.

- (a) Engage the 2 claws and install the footrest clip.

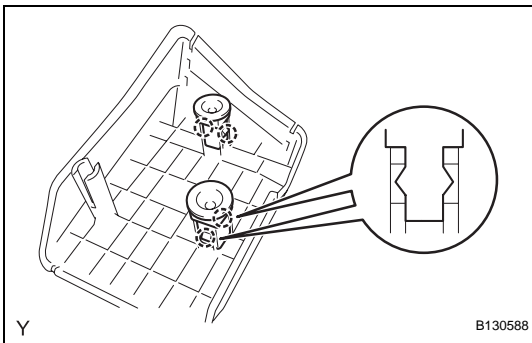

2. INSTALL FRONT FLOOR FOOTREST

- (a) Engage the 2 studs and install the front floor footrest.

