CUSTOMIZE PARAMETERS

HINT:

The following can be customized.

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

1. LIGHTING SYSTEM

Illuminated Entry

Display (Item)	Default	Contents	Setting
LIGHTING TIME (Lighting Time)	15 (second)	Changes illumination duration after door closure. (It will quickly fade out in case of turning the ignition switch ON)	7.5/ 15/ 30 (second)
/L ON / UNLOCK (Room light illuminates when door key unlocked.)	ON	Function to light up the room light, when unlocking with the door key cylinder. (Room light illuminated when interior light switch in DOOR position)	ON / OFF
I/L ON/ACC OFF (Room light illuminates when ignition switch turned off)	ON	Illuminates light when ignition switch turned on (ACC). (Room light illuminated when interior light switch in DOOR position)	ON / OFF

HINT:

Sensitivity adjustments are difficult to confirm. Check by driving the customer's vehicle.

2. POWER DOOR LOCK CONTROL SYSTEM

Power Door Lock Control System

Display (Item)	Default	Contents	Setting
UNLK/KEY TWICE	ON	Unlocks only driver side door when driver side door key cylinder turned to unlock once, and unlocks all doors when turned to unlock twice. For OFF setting, turning it once unlocks all doors.	ON / OFF

3. WIRELESS DOOR LOCK CONTROL SYSTEM

Wireless Door Lock Control System

Display (Item)	Default	Contents	Setting
HAZARD ANS BACK	ON	When wireless lock switch on transmitter pressed, illuminates all hazard warning lights once. When unlock switch pressed, all hazard warning lights illuminate twice	ON / OFF
WIRELESS OPER	ON	ON /OFF of wireless door lock function	ON / OFF
ALARM FUNCTION	ON	Operates security alarm when panic switch on transmitter continuously pressed for 1 second	ON / OFF



Display (Item)	Default	Contents	Setting
UNLOCK/2 OPER	ON	Function that unlocks driver side door when unlock switch on transmitter is pressed once, and unlocks all doors when pressed twice. If setting is OFF, pressing unlock switch once makes all doors unlock	ON / OFF
AUTO LOCK DELAY	30 seconds	Time until relocking after unlocking with wireless door lock function	60 seconds / 30 seconds
OPEN DOOR WARN	ON	If a door is not completely closed and LOCK is pressed, this function sounds a buzzer for 10 seconds	ON / OFF
WIRELS BUZZ VOL	MID2	To adjust the volume of the wireless buzzer	OFF / MIN / MID1/ MID2 /MID3 / MAX

