

## INSPECTION

### 1. INSPECT FRONT DOOR COURTESY SWITCH

- (a) Check the resistance.
  - (1) Using an ohmmeter, measure the resistance and check the results in accordance with the value(s) in the table below.

#### Standard Resistance

Tester Connection	Condition	Specified Condition
1 - Switch body	ON (Shaft not pressed)	Below 1 $\Omega$
1 - Switch body	OFF (Shaft pressed)	10 k $\Omega$ or higher

If the result is not as specified, replace the front door courtesy switch.

## INSTALLATION

### 1. INSTALL FRONT DOOR COURTESY SWITCH

- (a) Connect the connector.
- (b) Install the front door courtesy switch with the bolt.  
Torque: 7.0 N\*m (71 kgf\*cm, 62 in.\*lbf)

### 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)

