

HEADLIGHT RELAY

ON-VEHICLE INSPECTION

1. INSPECT HEADLIGHT RELAY

- (a) Check the resistance.
- (b) Using an ohmmeter, measure the resistance between the terminals.

Standard Resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the headlight relay.

