


# REAR DOOR COURTESY SWITCH (for Lower Side)

## COMPONENTS


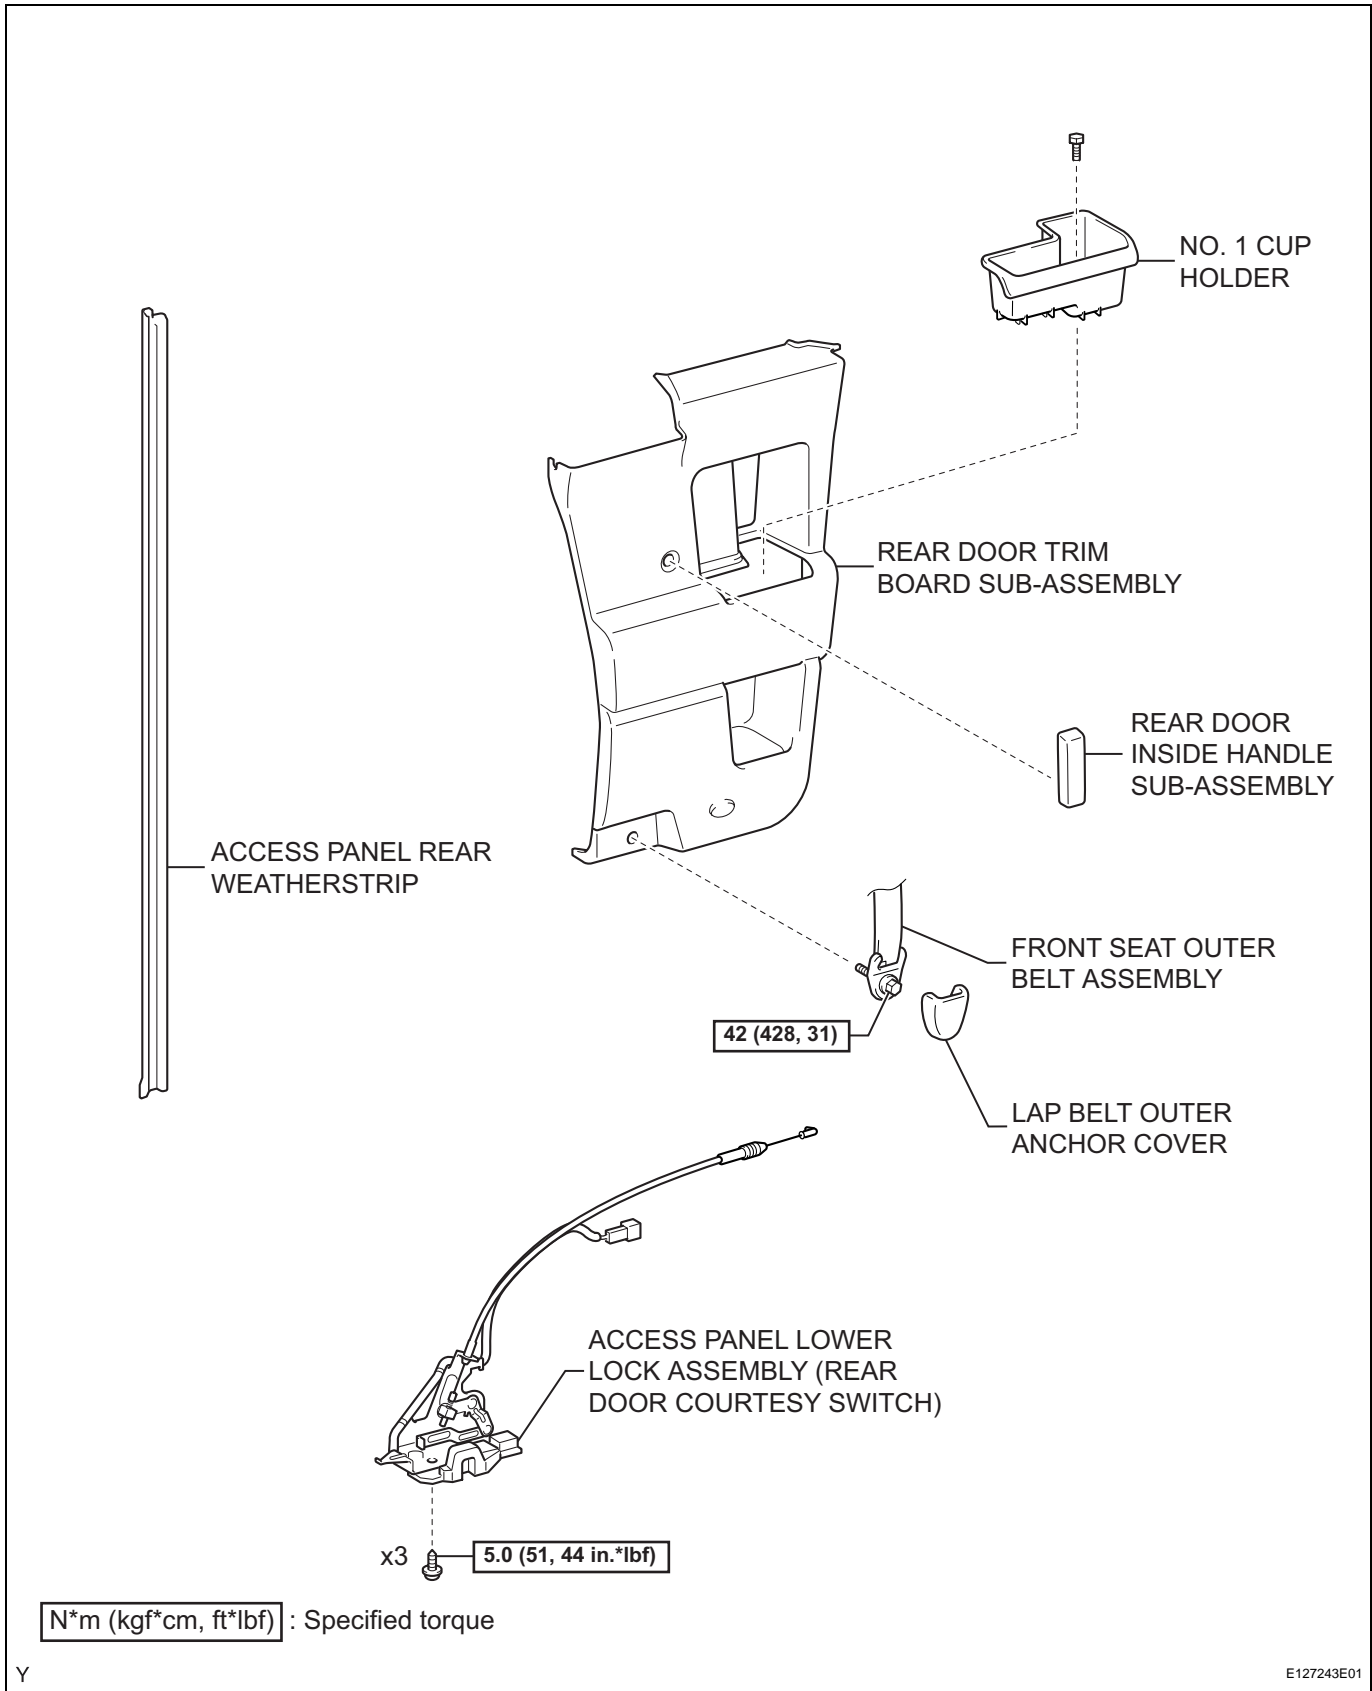


## REMOVAL

### HINT:

- Use the same procedure for both the RH and LH sides.
- The procedure described below is for the RH side.

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE ACCESS PANEL REAR WEATHERSTRIP** (See page [ED-29](#))
3. **REMOVE LAP BELT OUTER ANCHOR COVER** (See page [ED-29](#))
4. **REMOVE REAR DOOR INSIDE HANDLE SUB-ASSEMBLY** (See page [ED-29](#))
5. **REMOVE NO. 1 CUP HOLDER** (See page [ED-29](#))
6. **REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY** (See page [ED-30](#))
7. **REMOVE ACCESS PANEL LOWER LOCK ASSEMBLY**
  - (a) Disconnect the connector, connector clamp and access panel lock control cable.

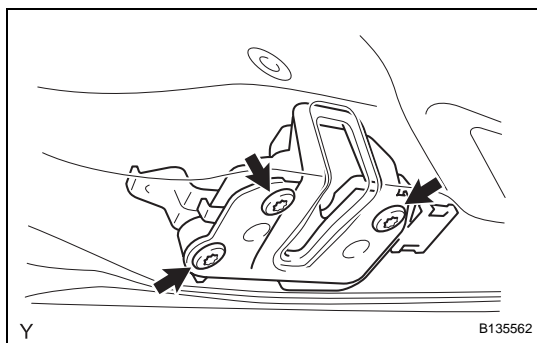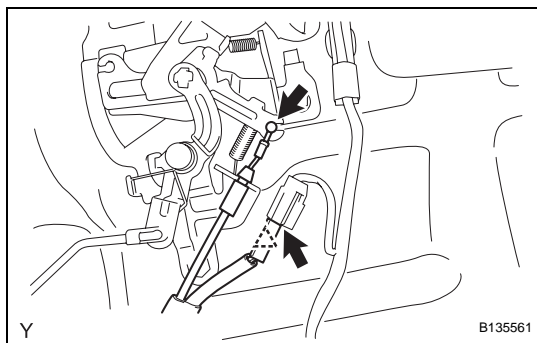

- (b) Using "Torx" socket wrench T30, remove the 3 screws.
- (c) Remove the access panel lower lock by sliding it upward.