

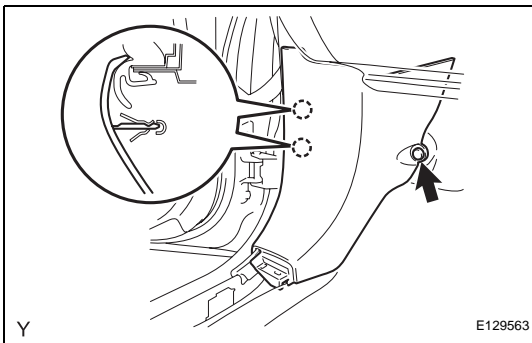



## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE FRONT DOOR SCUFF PLATE LH**
  - (a) Disengage the 14 claws and remove the front door scuff plate.
3. **REMOVE FRONT FLOOR FOOTREST (See page IR-2)**
4. **REMOVE FOOTREST CLIP (See page IR-2)**

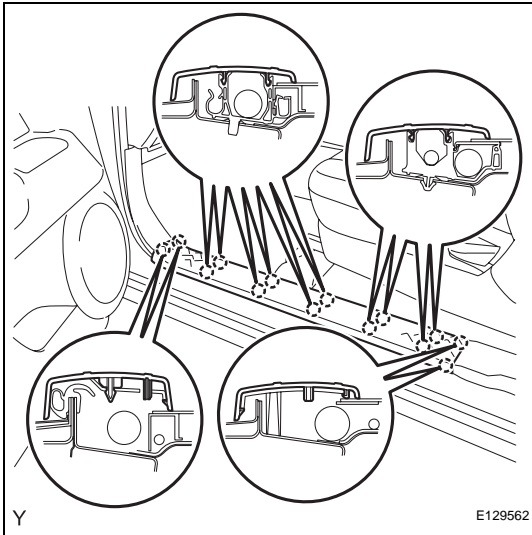

5. **REMOVE COWL SIDE TRIM BOARD LH**
  - (a) Remove the clip.
  - (b) Disengage the 2 claws and remove the cowl side trim board.
6. **REMOVE INSTRUMENT PANEL GARNISH LH (See page IP-10)**
7. **REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY (See page IP-13)**
8. **REMOVE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page IP-13)**
9. **REMOVE LOWER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LH (See page IP-14)**
10. **REMOVE INSTRUMENT CLUSTER FINISH PANEL (See page IP-14)**
11. **REMOVE COMBINATION METER ASSEMBLY**
  - (a) Remove the 4 screws.

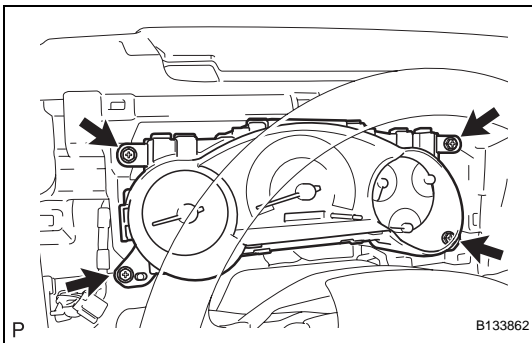

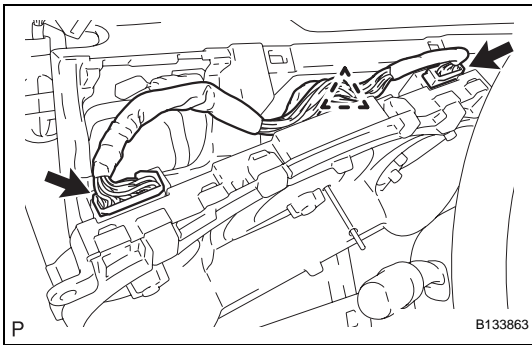


- (b) Disconnect the 2 connectors and clamp and remove the combination meter.

## DISASSEMBLY

### 1. REMOVE COMBINATION METER GLASS


- (a) Disengage the 8 claws and remove the combination meter glass.

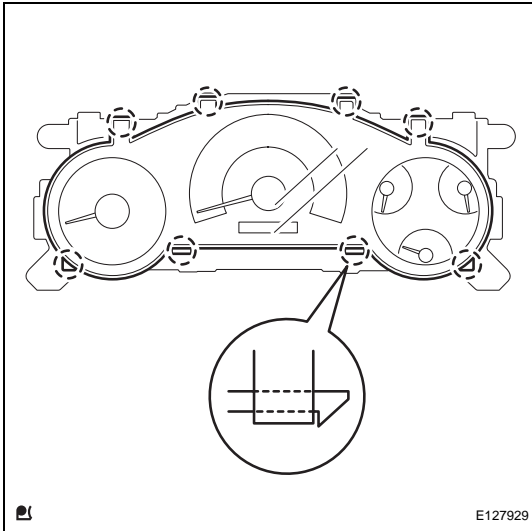

## REASSEMBLY

### 1. INSTALL COMBINATION METER GLASS


- (a) Engage the 8 claws and install the combination meter glass.

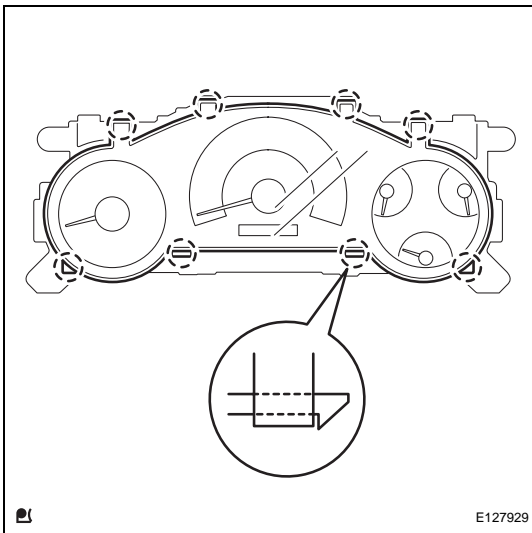


## INSTALLATION

### 1. INSTALL COMBINATION METER ASSEMBLY

- (a) Connect the 2 connectors and the clamp.


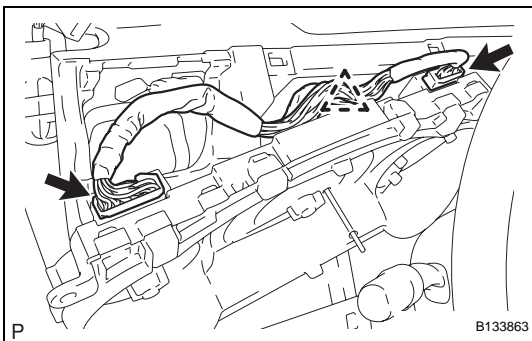


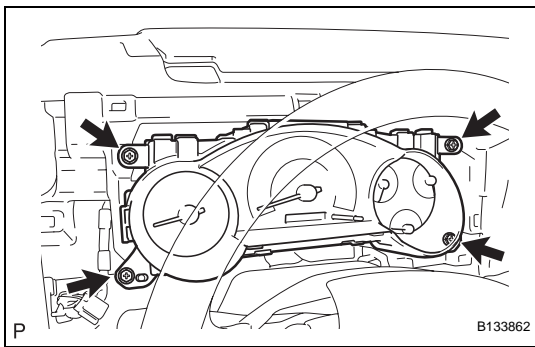

(b) Install the combination meter assembly with the 4 screws.

Torque: 7.0 N\*m (71 kgf\*cm, 62 in.\*lbf)

2. **INSTALL INSTRUMENT CLUSTER FINISH PANEL**  
(See page [IP-29](#))
3. **INSTALL LOWER INSTRUMENT FINISH PANEL SUB-ASSEMBLY LH** (See page [IP-29](#))
4. **INSTALL HOOD LOCK CONTROL LEVER SUB-ASSEMBLY** (See page [IP-30](#))
5. **INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY** (See page [IP-30](#))
6. **INSTALL INSTRUMENT PANEL GARNISH LH** (See page [IP-33](#))
7. **INSTALL COWL SIDE TRIM BOARD LH**
  - (a) Engage the 2 claws and install the cowl side trim board.
  - (b) Install the clip.
8. **INSTALL FOOTREST CLIP** (See page [IR-2](#))
9. **INSTALL FRONT FLOOR FOOTREST** (See page [IR-2](#))

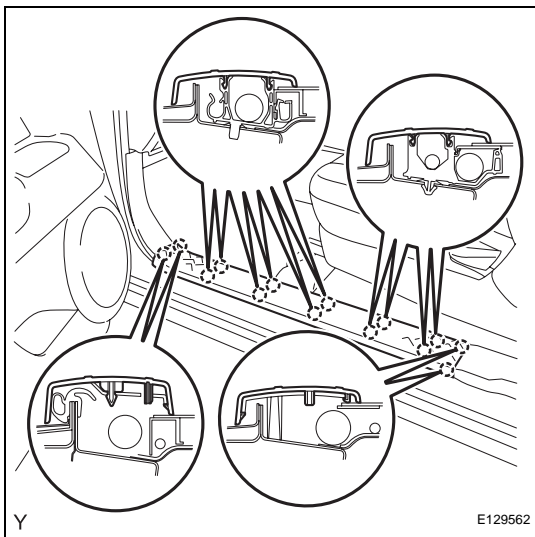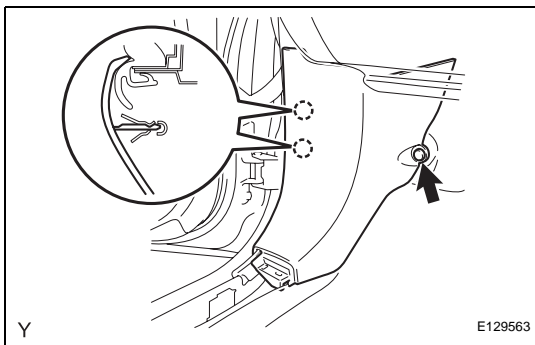

10. **INSTALL FRONT DOOR SCUFF PLATE LH**
  - (a) Engage the 14 claws and install the door scuff plate.
11. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**  
Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)