

INSPECTION

1. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY LH


(a) Check the operation.

- (1) Apply battery voltage to the outer rear view mirror and check the operation of the outer rear view mirror.

Standard

Measurement Condition	Mirror Assembly Operation
Battery positive (+) - Terminal 3 (MV) Battery negative (-) - Terminal 4 (COM)	Turns upward
Battery positive (+) - Terminal 4 (COM) Battery negative (-) - Terminal 3 (MV)	Turns downward
Battery positive (+) - Terminal 5 (MH) Battery negative (-) - Terminal 4 (COM)	Turns left
Battery positive (+) - Terminal 4 (COM) Battery negative (-) - Terminal 5 (MH)	Turns right

If the result is not as specified, replace the outer rear view mirror.

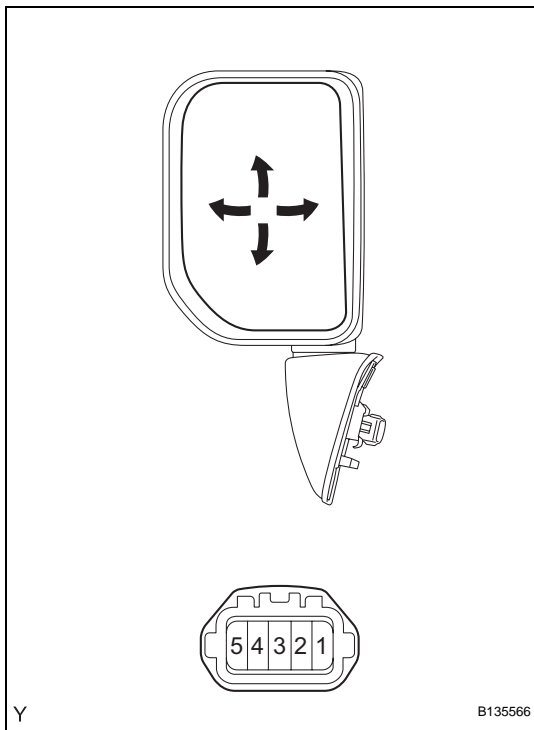

2. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY RH


(a) Check the operation.

- (1) Apply battery voltage to the outer rear view mirror and check the operation of the outer rear view mirror.

Standard

Measurement Condition	Mirror Assembly Operation
Battery positive (+) - Terminal 3 (MV) Battery negative (-) - Terminal 4 (COM)	Turns upward
Battery positive (+) - Terminal 4 (COM) Battery negative (-) - Terminal 3 (MV)	Turns downward
Battery positive (+) - Terminal 5 (MH) Battery negative (-) - Terminal 4 (COM)	Turns left
Battery positive (+) - Terminal 4 (COM) Battery negative (-) - Terminal 5 (MH)	Turns right

If the result is not as specified, replace the outer rear view mirror.

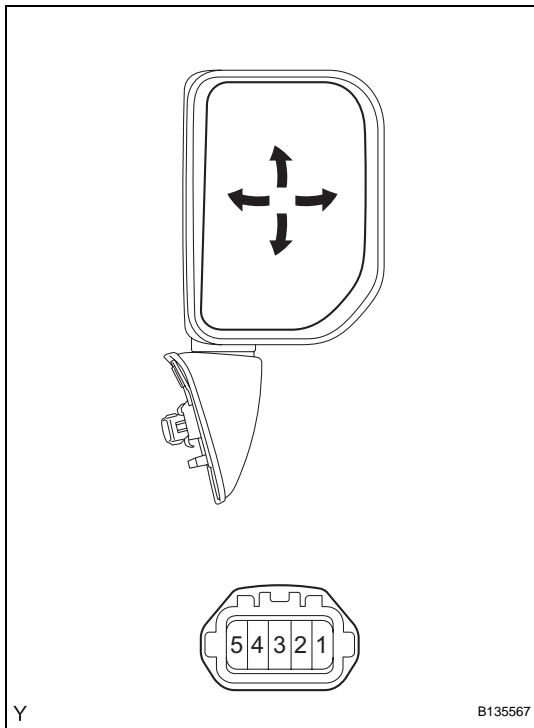

3. INSPECT OUTER REAR VIEW MIRROR ILLUMINATION LIGHT


(a) Check the illumination operation.

- (1) Connect the positive (+) battery lead to terminal 2 and the negative (-) battery lead to terminal 1, then check that the illumination illuminates.

Standard:

Illumination illuminates.

If the illumination does not illuminate, check the faulty bulb.

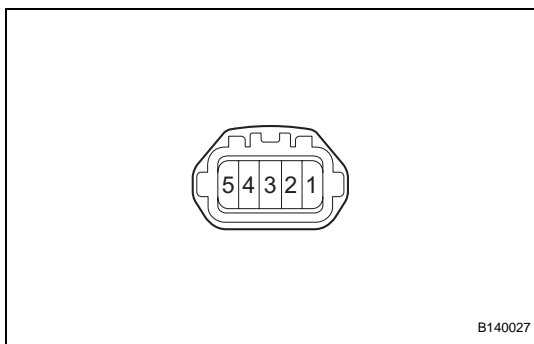

- (b) Inspect the bulb.
 - (1) Inspect continuity of the bulb by connecting the tester.

Standard:
Continuity.


If continuity exists, replace the outer rear view mirror.

If no continuity exists, replace the bulb.

INSTALLATION

1. INSTALL OUTER REAR VIEW MIRROR ILLUMINATION LIGHT BULB (w/ Illumination)

- (a) Install the outer rear view mirror illumination light bulb into the light socket.
- (b) Turn the outer rear view mirror illumination light socket and bulb, in the direction indicated by the arrow in the illustration, to install them.

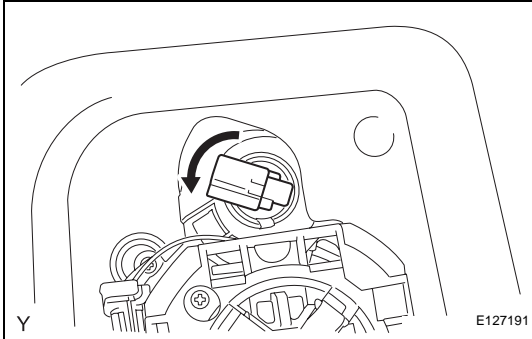



2. INSTALL OUTER REAR VIEW MIRROR

- (a) Engage the 2 claws on the upper side of the mirror and the 6 clips and install the mirror.

HINT:

Heating the mirror holder with a domestic dryer before this procedure makes the work easier.

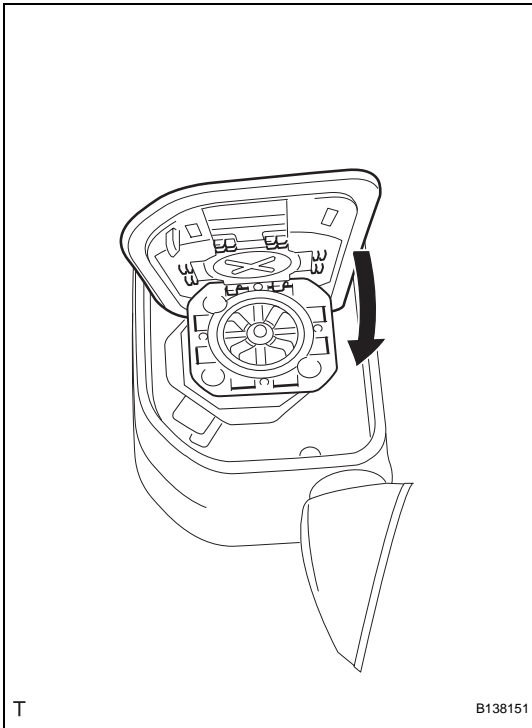

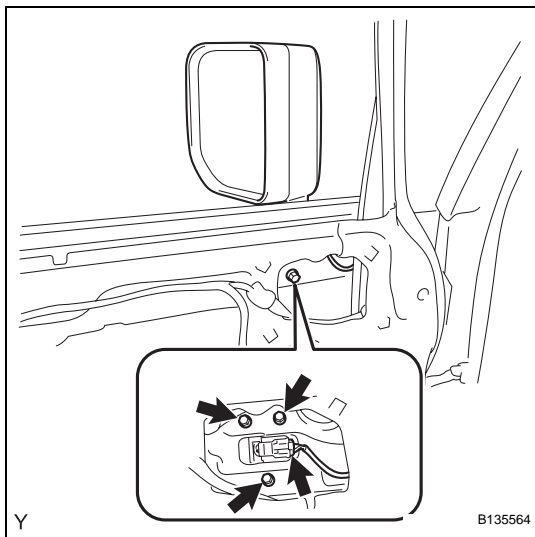

(b) Install the outer rear view mirror with the 3 bolts.

Torque: 8.0 N*m (82 kgf*cm, 71 in.*lbf)

(c) Connect the connector.

3. INSTALL NO. 2 FRONT DOOR SERVICE HOLE COVER

HINT:

Use the same procedure as for the RH side (see page

[ED-24](#)).

4. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY

HINT:

Use the same procedure as for the RH side (see page

[ED-24](#)).

5. INSTALL FRONT ARMREST BASE UPPER PANEL
(See page [WS-27](#))

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)