



INSTALLATION

1. **INSTALL VOLTAGE INVERTER ASSEMBLY**
 - (a) Install the voltage inverter assembly with the 5 bolts.
Torque: 8.5 N*m (87 kgf*cm, 75 ft.*lbf)
 - (b) Connect the 2 connectors and install the wire harness clamp.
 - (c) Install the earth wire with the bolt.
Torque: 6.9 N*m (70 kgf*cm, 61 in.*lbf)
2. **INSTALL DECK TRIM SIDE PANEL ASSEMBLY RH**
(See page [IR-39](#))
3. **INSTALL REAR SEAT OUTER BELT ASSEMBLY RH**
(See page [IR-40](#))
4. **INSTALL LAP BELT OUTER ANCHOR COVER** (See page [IR-41](#))
5. **INSTALL QUARTER TRIM POCKET (w/o Amplifier Box Speaker Assembly)** (See page [IR-41](#))
6. **INSTALL SIDE TRIM COVER (w/o Amplifier Box Speaker Assembly)** (See page [IR-42](#))
7. **INSTALL QUARTER TRIM POCKET TRAY (w/o Amplifier Box Speaker Assembly)** (See page [IR-42](#))
8. **INSTALL PACKAGE HOLDER NET HOOK (w/o Amplifier Box Speaker Assembly)** (See page [IR-42](#))
9. **INSTALL AMPLIFIER BOX SPEAKER ASSEMBLY (w/ Amplifier Box Speaker Assembly)** (See page [AV-90](#))
10. **INSTALL SPEAKER MOUNTING COVER (w/ Amplifier Box Speaker Assembly)** (See page [AV-91](#))
11. **INSTALL DECK SIDE GARNISH (w/ Amplifier Box Speaker Assembly)** (See page [IR-41](#))
12. **INSTALL REAR DOOR SCUFF PLATE RH** (See page [IR-45](#))
13. **INSTALL FRONT DOOR SCUFF PLATE RH** (See page [IR-45](#))
14. **INSTALL REAR FLOOR MAT ASSEMBLY** (See page [IR-46](#))
15. **INSTALL REAR FLOOR MAT SUPPORT PLATE** (See page [IR-46](#))
16. **INSTALL REAR FLOOR BOARD** (See page [IR-47](#))
17. **INSTALL REAR SEATBACK ASSEMBLY RH** (See page [SE-54](#))

18. **INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY RH (See page [SE-54](#))**
19. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)