



 


 






 


 

 
 




 
 
 
 








DIFFERENTIAL

SST

 

 
 
 




 

 
	09223-00010	Cover & Seal Replacer	
	09223-15020	Oil Seal & Bearing Replacer	
	09308-00010	Oil Seal Puller	
	09308-10010	Oil Seal Puller	
	09316-60011	Transmission & Transfer Bearing Replacer	
	(09316-00011)	Replacer Pipe	
	(09316-00021)	Replacer A	
	(09316-00041)	Replacer C	
	09330-00021	Companion Flange Holding Tool	
	(09330-00030)	Pin	
	09350-20015	TOYOTA Automatic Transmission Tool Set	




PP

	(09369-20040)	Piston Spring Compressor Set	
	09502-12010	Differential Bearing Replacer	
	09504-00011	Differential Side Bearing Adjusting Nut Wrench	
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	
	09550-00032	Replacer	
	09554-22010	Differential Oil Seal Replacer	
	09554-30011	Differential Oil Seal Replacer	
	09556-22010	Drive Pinion Front Bearing Remover	
	09564-32011	Differential Preload Adaptor	
	09608-32010	Steering Knuckle Oil Seal Replacer	
	09612-65014	Steering Worm Bearing Puller	
	(09612-01020)	Claw B	


 







	(09612-01050)	Hanger Pin with Nut	
	09636-20010	Upper Ball Joint Dust Cover Replacer	
	09930-00010	Drive Shaft Nut Chisel	
	09950-00020	Bearing Remover	
	(09951-00680)	Replacer 68	
	(09951-00890)	Replacer 89	
	09950-30012	Puller A Set	
	(09951-03010)	Upper Plate	
	(09953-03010)	Center Bolt	
	(09954-03010)	Arm	
	(09955-03030)	Lower Plate 130	
	(09956-03020)	Adapter 18	

PP

	(09956-03030)	Adaptor 20	
	09950-40011	Puller B Set	
	(09951-04010)	Hanger 150	
	(09951-04020)	Hanger 200	
	(09952-04010)	Slide Arm	
	(09953-04020)	Center Bolt 150	
	(09953-04030)	Center Bolt 200	
	(09954-04010)	Arm 25	
	(09955-04011)	Claw No.1	
	(09955-04061)	Claw No.6	
	(09957-04010)	Attachment	
	(09958-04011)	Holder	

	09950-60010	Replacer Set	
	(09951-00360)	Replacer 36	
	(09951-00380)	Replacer 38	
	(09951-00430)	Replacer 43	
	(09951-00470)	Replacer 47	
	(09951-00480)	Replacer 48	
	(09951-00510)	Replacer 51	
	(09951-00520)	Replacer 52	
	(09951-00550)	Replacer 55	
	(09951-00610)	Replacer 61	
	09950-60020	Replacer Set No.2	
	(09951-00680)	Replacer 68	

PP

	(09951-00810)	Replacer 81	
	09950-70010	Handle Set	
	(09951-00560)	Replacer 56	
	(09951-00570)	Replacer 57	
	(09951-07100)	Handle 100	
	(09951-07150)	Handle 150	
	09960-10010	Variable Pin Wrench Set	
	(09962-01000)	Variable Pin Wrench Arm Assembly	
	(09963-00700)	Pin 7	