

MANUAL TRANSMISSION OIL

ON-VEHICLE INSPECTION

1. INSPECT TRANSMISSION OIL

- (a) Park the vehicle in a level place.
- (b) Remove the transmission filler plug and gasket.
- (c) Check that the oil surface is within 5 mm (0.20 in.) of the lowest point of the transmission filler plug opening.

NOTICE:

- **Problems may occur when the oil level is too high or low.**
 - **After replacing the oil, drive the vehicle and check the oil level again.**
- (d) Check for oil leakage when the oil level is low.
 - (e) Install the transmission filler plug and a new gasket.
Torque: 37 N*m (377 kgf*cm, 27 ft.*lbf)

