

## REMOVAL

### CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).

### HINT:


The procedure described below is for the RH side. Use the same procedure for both the RH and LH sides, unless otherwise specified.


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

### CAUTION:


Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.

2. **REMOVE ACCESS PANEL REAR WEATHERSTRIP** (See page [ED-29](#))
3. **REMOVE LAP BELT OUTER ANCHOR COVER** (See page [ED-29](#))
4. **REMOVE ACCESS DOOR INSIDE HANDLE SUB-ASSEMBLY** (See page [ED-29](#))
5. **REMOVE CUP HOLDER** (See page [ED-29](#))
6. **REMOVE ACCESS DOOR TRIM BOARD SUB-ASSEMBLY** (See page [ED-30](#))
7. **REMOVE CENTER PILLAR UPPER GARNISH** (See page [ED-30](#))
8. **REMOVE FRONT SEAT OUTER BELT ASSEMBLY**
  - (a) Remove the nut and the through anchor.

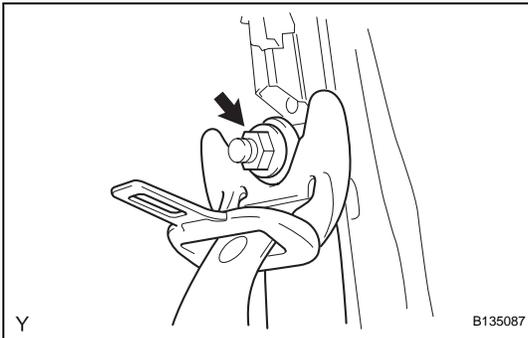


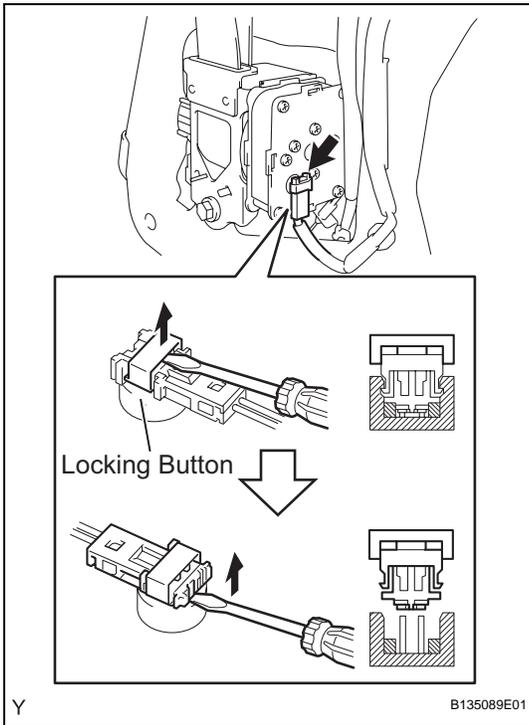

- (b) for RH Side:
- (1) Using a screwdriver, release the locking button of the pretensioner connector.
  - (2) Using a screwdriver, disconnect the pretensioner connector.

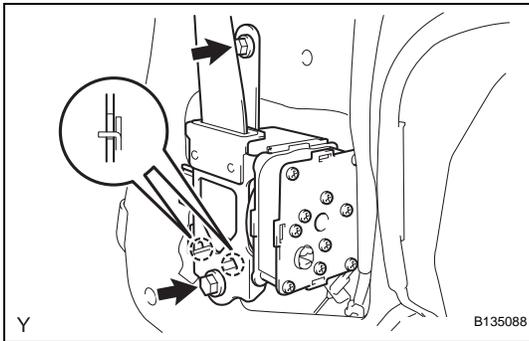

- (3) Remove the 2 bolts, the 2 hooks and the retractor.

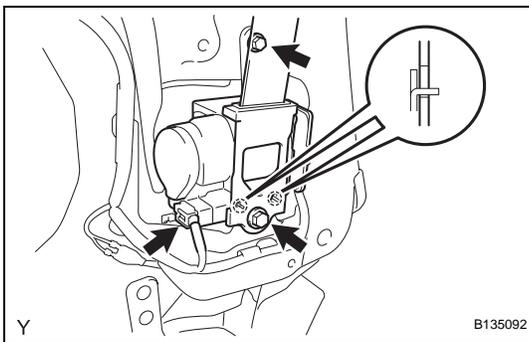

- (c) for LH Side:
- (1) Disconnect the tension reducer connector.
  - (2) Remove the 2 bolts, the 2 hooks and the retractor.