

SYSTEM DESCRIPTION

The seat belt tension reducer is fitted to the front seat belt LH. This mechanism can help reduce the belt tension applied to the occupant in the front seat when the seat belt is fastened.

PROBLEM SYMPTOMS TABLE**Seat Belt Tension Reducer**

Symptom	Suspected area	See page
Driver side tension reducer does not operate	1. Front seat inner belt assembly (Driver side)	SB-32
	2. Front seat outer belt assembly (Driver side)	SB-38
	3. Wire harness	-