

## REASSEMBLY

### CAUTION:

Wear protective gloves. Sharp surfaces on the rear seat cushion frame and the rear seatback frame could cause injuries to your hands.


### 1. INSTALL REAR SEATBACK COVER

- (a) Using hog ring pliers, install the rear seatback cover with 8 new hog rings.

#### NOTICE:


- Do not soil or scratch the rear seatback cover.
  - When installing the hog rings, minimize wrinkles as far as possible.
- (b) Pass the hook of the rear seatback cover through the slit in the rear seatback pad.

### 2. INSTALL REAR CENTER SEAT OUTER BELT ASSEMBLY (See page [SB-67](#))

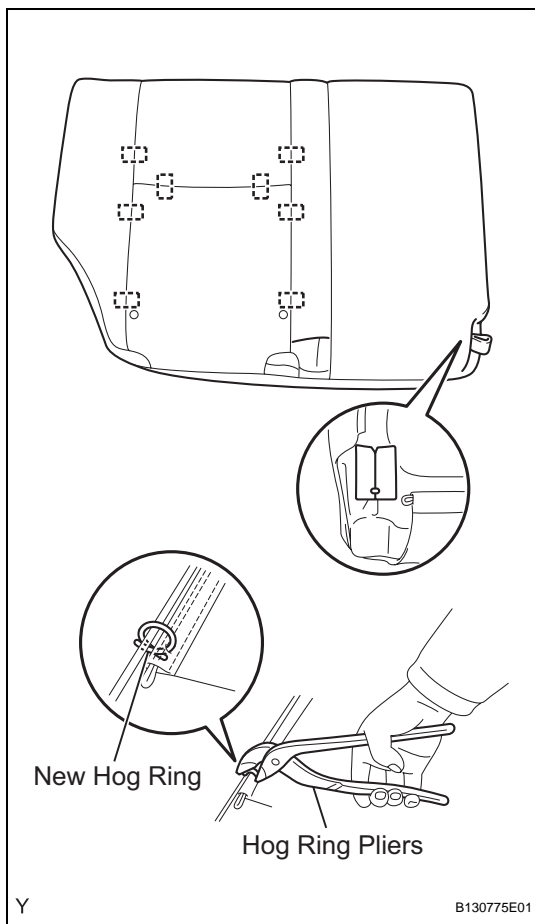


### 3. INSTALL REAR SEATBACK LOCK ASSEMBLY

- (a) Install the rear seatback lock with the 2 bolts.  
**Torque: 18 N\*m (185 kgf\*cm, 13 ft.\*lbf)**

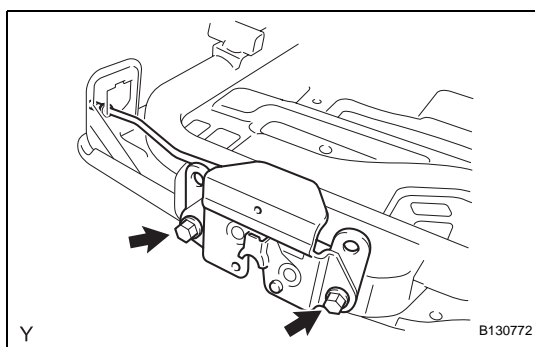


**4. INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY**


(a) Install the rear seatback frame.

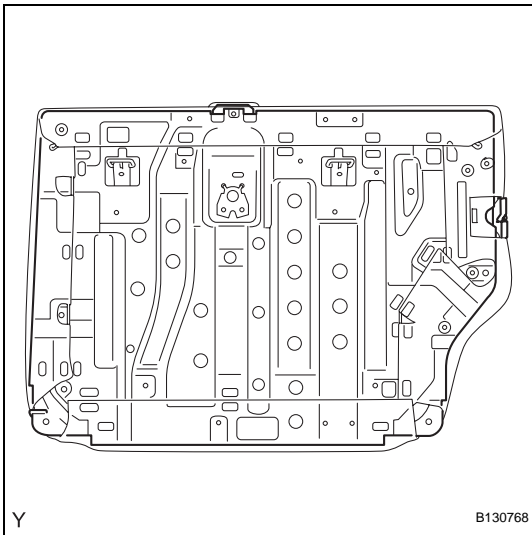


(b) Using hog ring pliers, install 17 new hog rings.

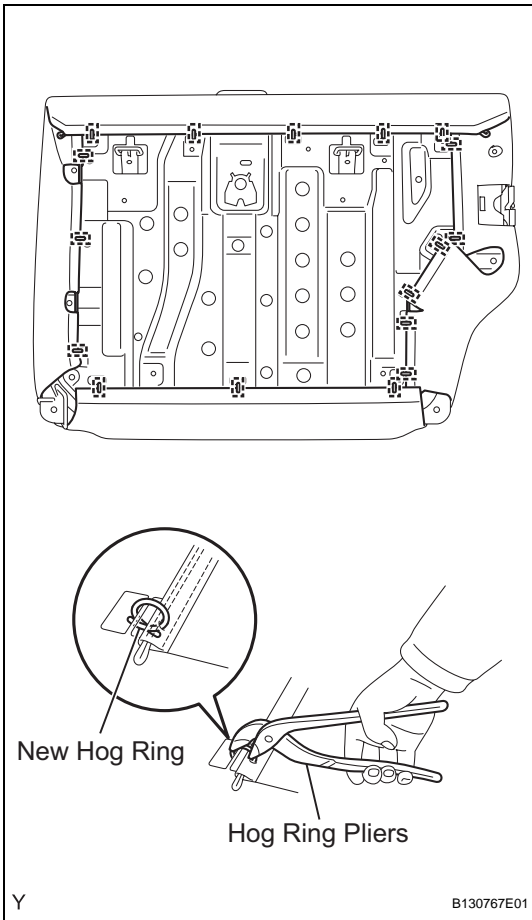


(c) Install the belt of the rear center seat outer belt into the rear seatback cover band.

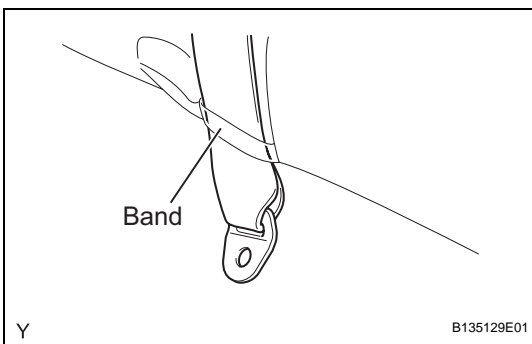

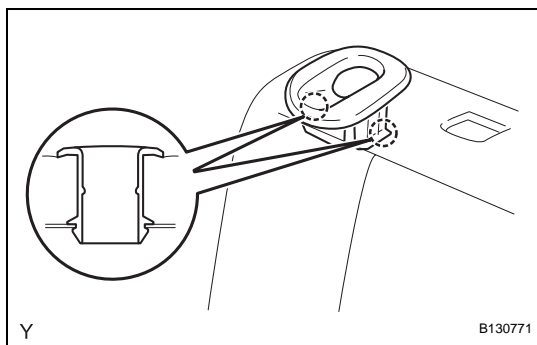


### 5. INSTALL REAR SEATBACK STOP BUTTON GROMMET

- (a) Engage the 2 claws and install the rear seatback stop button grommet.

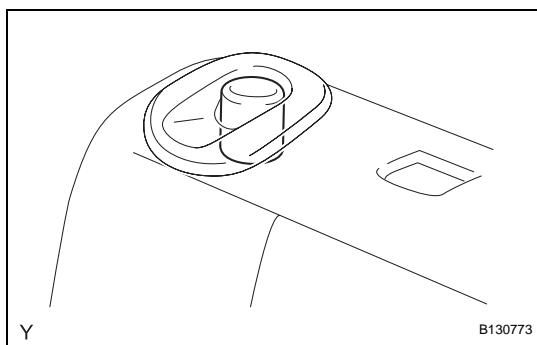

### 6. INSTALL REAR SEATBACK LOCK RELEASE BUTTON

- (a) Install rear seatback lock release button.

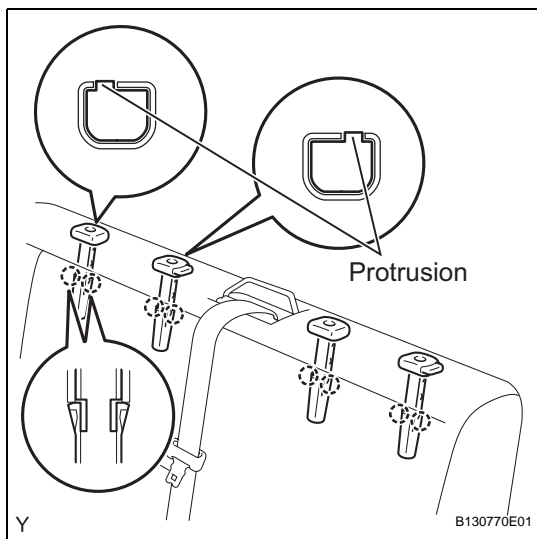


### 7. INSTALL REAR SEAT HEADREST SUPPORT

#### HINT:

Use the same procedure to install all the rear seat headrest supports.

- (a) Align the protruding portion of the rear seat headrest support with the installation groove of the rear seatback frame.
- (b) Engage the 2 claws and install the rear seat headrest support.

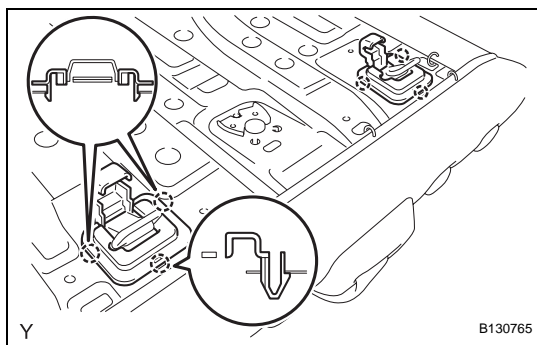


### 8. INSTALL TETHER ANCHOR COVER


#### HINT:

Use the same procedure for both sides.

- (a) Engage the 3 claws and install the tether anchor cover.

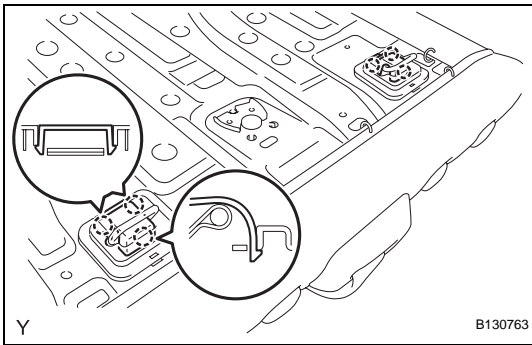


(b) Engage the 2 claws and close the cover.

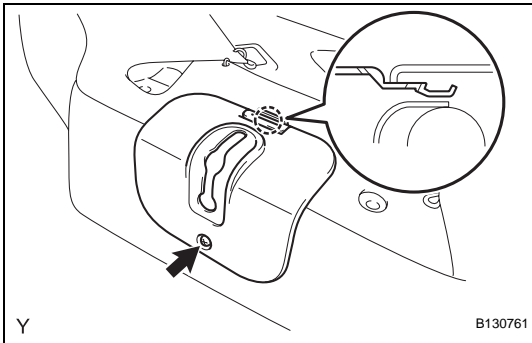


### 9. INSTALL REAR SEATBACK LOCK COVER

- (a) Engage the claw and install the rear seatback lock cover.
- (b) Tighten the screw.

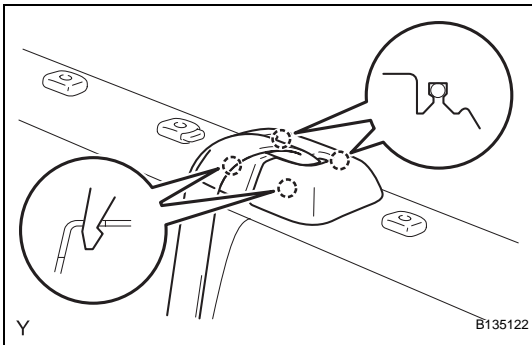


### 10. INSTALL REAR SEAT SHOULDER BELT COVER

- (a) Engage the 4 claws and install the rear seat shoulder belt cover.

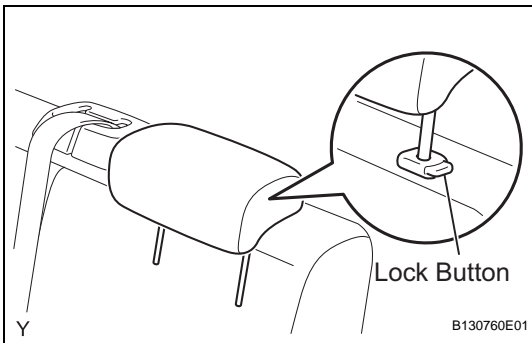


### 11. INSTALL REAR CENTER SEAT HEADREST ASSEMBLY

- (a) Push the lock button of the rear seat headrest support and install the rear seat headrest.

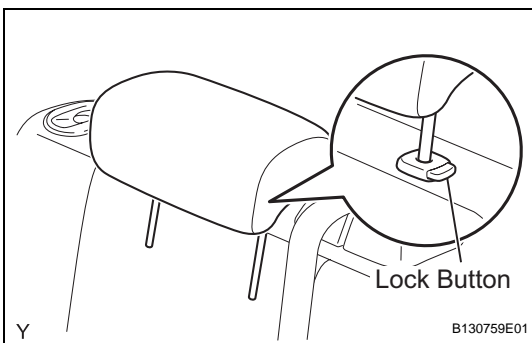

### 12. INSTALL REAR SEAT HEADREST ASSEMBLY

- (a) Push the lock button of the rear seat headrest support and install the rear seat headrest.

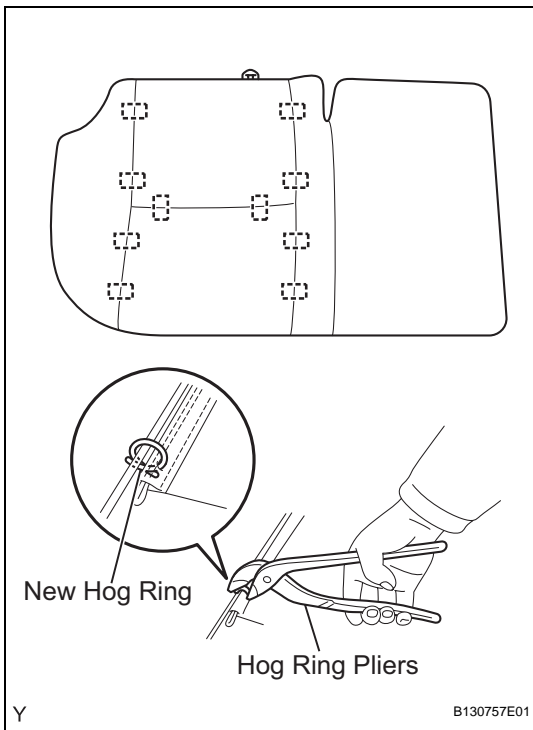


### 13. INSTALL REAR SEAT CUSHION COVER

- (a) Using hog ring pliers, install the rear seat cushion cover with 10 new hog rings.


#### NOTICE:

- Do not soil or scratch the rear seat cushion cover.
- When installing the hog rings, minimize wrinkles as far as possible.

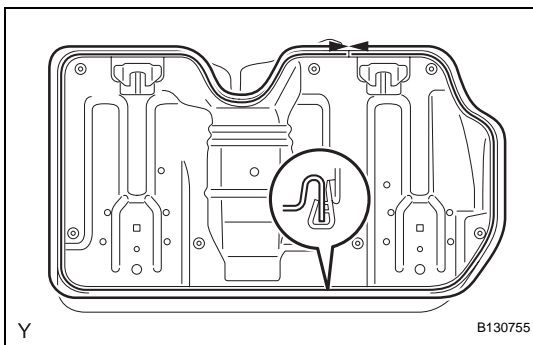


### 14. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY

- (a) Engage the hook and install the rear seat cushion frame.

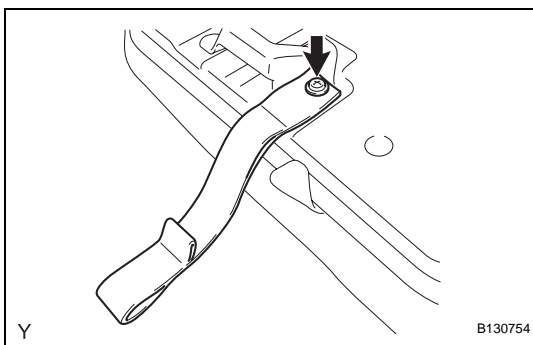


### 15. INSTALL REAR SEAT CUSHION STOPPER

- (a) Install the rear seat cushion stopper with the screw.

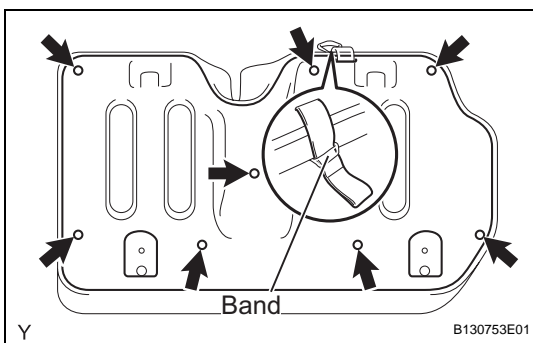

### 16. INSTALL REAR SEAT CUSHION UNDER COVER

- (a) Insert the rear seat cushion stopper into the slit of the rear seat cushion under cover.
- (b) Install the rear seat cushion under cover with the 7 clips.
- (c) Install the rear seat cushion stopper into the rear seat cushion cover band.

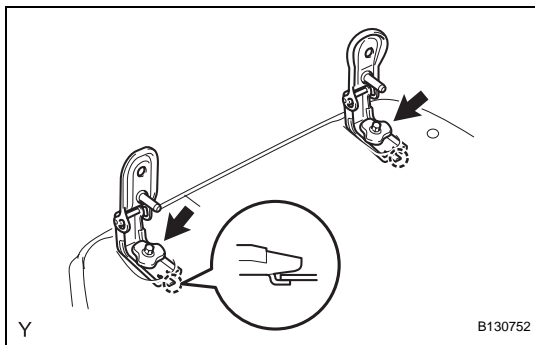

## 17. INSTALL REAR SEAT CUSHION HINGE SUB-ASSEMBLY

### HINT:


Use the same procedure for both sides.

- (a) Engage the hook and install the rear seat cushion hinge.
- (b) Install the rear seat cushion hinge with the bolt.  
**Torque: 18 N\*m (185 kgf\*cm, 13 ft.\*lbf)**

## INSTALLATION

### 1. INSTALL REAR SEATBACK ASSEMBLY

- (a) Engage the hook and temporarily install the rear seatback with the 2 bolts.
- (b) Tighten the 2 bolts in the sequence shown in the illustration.  
**Torque: 37 N\*m (375 kgf\*cm, 27 ft.\*lbf)**
- (c) Pull up the rear seatback.

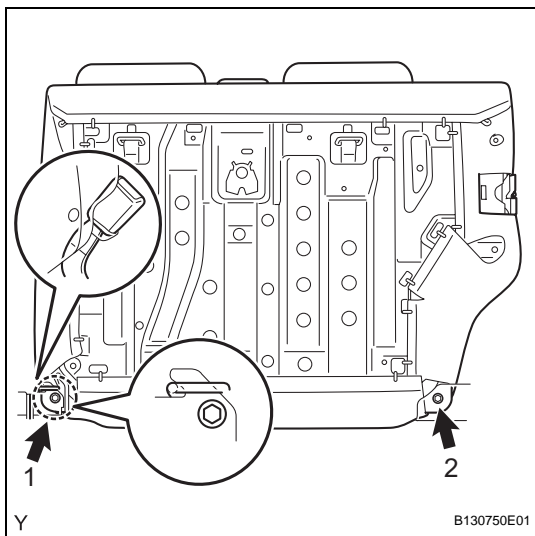


- (d) Install the rear seat inner belt into the rear seatback holder.
- (e) Install the anchor plate of the rear center seat outer belt with the bolt.

**Torque: 42 N\*m (430 kgf\*cm, 31 ft.\*lbf)**


### NOTICE:


**Do not place the anchor plate over the convex area of the rear seat inner belt.**

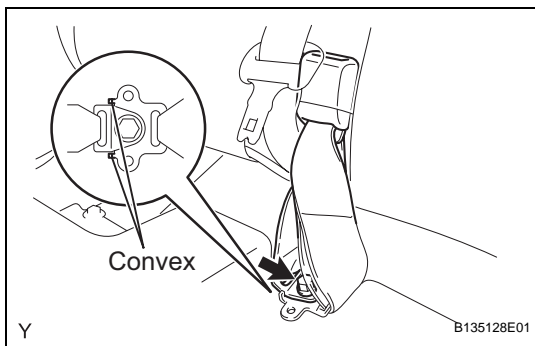

### 2. INSTALL REAR SEATBACK BOARD CARPET ASSEMBLY

- (a) Pull the rear seatback lock release button and tilt the rear seatback forward.
- (b) Engage the 10 clips and install the rear seatback board carpet.
- (c) Pull up the rear seatback.

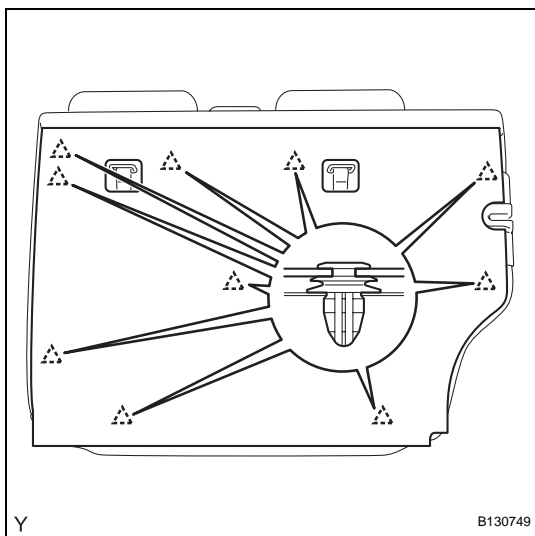

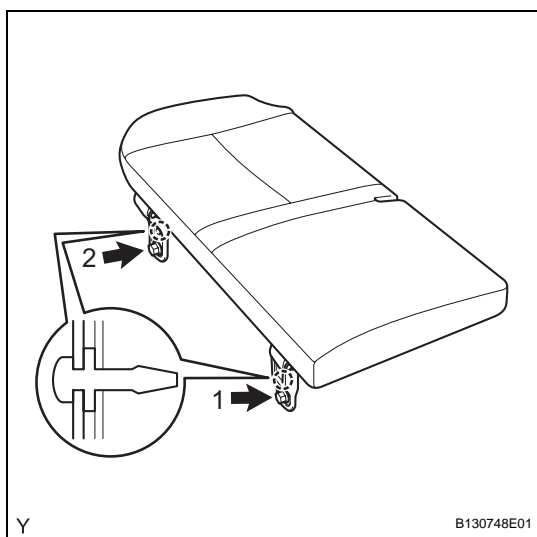**3. INSTALL REAR SEAT CUSHION ASSEMBLY**

- (a) Insert the locating pin into the body hole.
- (b) Temporarily install the rear seat cushion with the 2 bolts.
- (c) Tighten the 2 bolts in the sequence shown in the illustration.

**Torque: 37 N\*m (375 kgf\*cm, 27 ft.\*lbf)**