

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures described below are for the LH side.

1. PRECAUTION

CAUTION:

Read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:



Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.

3. REMOVE RADIATOR GRILLE (See page [ET-4](#))

4. REMOVE FRONT BUMPER COVER (See page [ET-4](#))

5. REMOVE FRONT AIRBAG SENSOR LH

- Remove the 2 bolts.
- Disengage the 2 claws and the front airbag sensor LH.

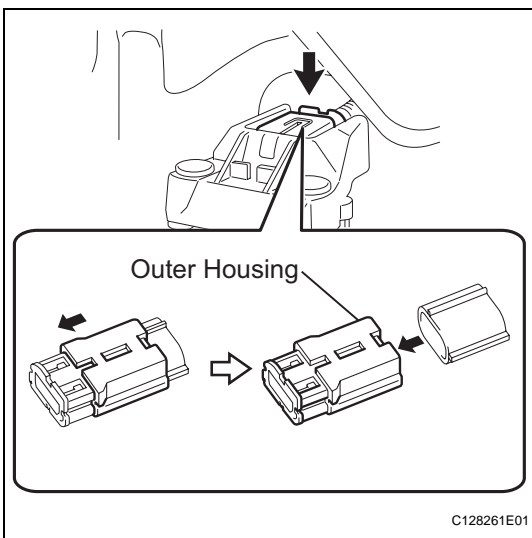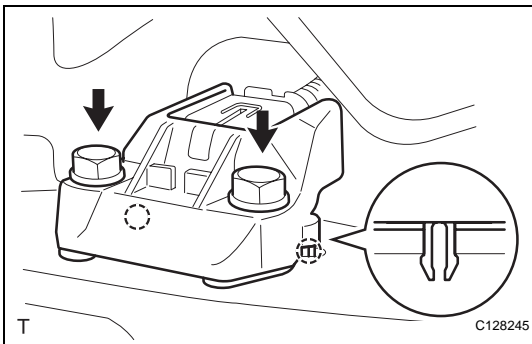

- Disconnect the connector from the front airbag sensor LH.

INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures described below are for the LH side.

1. PRECAUTION

CAUTION:

Read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).

2. INSTALL FRONT AIRBAG SENSOR LH



- Check that the ignition switch is turned to OFF.
- Check that the negative (-) battery terminal is disconnected.

CAUTION:

After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

- Connect the connector to the front airbag sensor LH.

RS

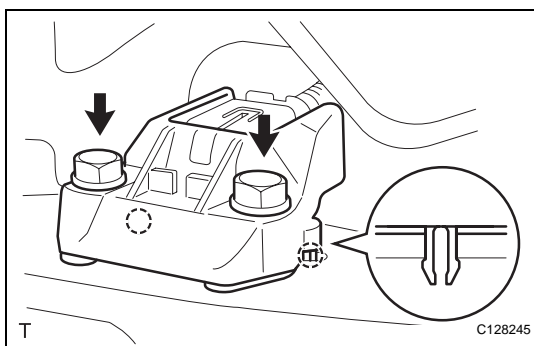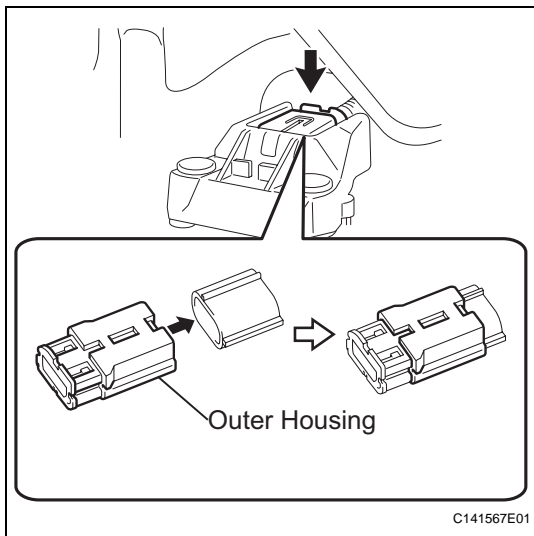

- Install the front airbag sensor LH with the 2 bolts.
Torque: 9.0 N*m (92 kgf*cm, 80 in.*lbf)

NOTICE:

- If the front airbag sensor LH has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
- When installing the front airbag sensor LH, make sure that the SRS wiring does not interfere with any other parts and that it is not pinched between other parts.

- Check that there is no looseness in the installation parts of the front airbag sensor LH.

3. INSTALL FRONT BUMPER COVER (See page [ET-10](#))

4. INSTALL RADIATOR GRILLE (See page [ET-11](#))

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

6. PERFORM INITIALIZATION

- (a) Perform initialization (See page [IN-31](#)).

HINT:

Some systems need initialization when the cable has been disconnected from the negative battery terminal.

7. INSPECT SRS WARNING LIGHT

- (a) Inspect the SRS warning light (See page [RS-29](#)).