


REMOVAL

1. **PRECAUTION**
CAUTION:
Read "PRECAUTION" thoroughly before servicing
(See page [RS-1](#)).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
3. **REMOVE FRONT SEAT ASSEMBLY RH** (See page [SE-6](#))
4. **REMOVE OCCUPANT CLASSIFICATION ECU**
 - (a) Disconnect the 2 connectors from the occupant classification ECU.
 - (b) Using a screwdriver, remove the occupant classification ECU.

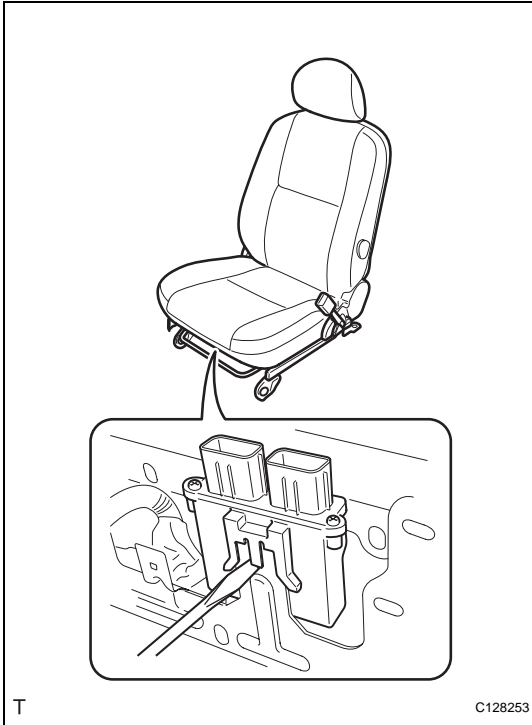

INSTALLATION

1. PRECAUTION

CAUTION:

Read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).

2. INSTALL OCCUPANT CLASSIFICATION ECU

- (a) Check that the ignition switch is turned to OFF.
- (b) Check that the negative (-) battery terminal is disconnected.

CAUTION:

After disconnecting the negative battery terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the occupant classification ECU.
- (d) Connect the 2 connectors to the occupant classification ECU.

NOTICE:

- If the occupant classification ECU has been dropped, or there are any cracks, dents or other defects in the case or connector, replace it with a new one.
- When installing the occupant classification ECU, make sure that the SRS wiring does not interfere with any other parts and that it is not pinched between other parts.

3. INSTALL FRONT SEAT ASSEMBLY RH (See page [SE-24](#))

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

5. PERFORM INITIALIZATION

- (a) Perform initialization (See page [IN-31](#)).

HINT:

Some systems need initialization when the cable has been disconnected from the negative battery terminal.

6. INSPECT SRS WARNING LIGHT

- (a) Inspect the SRS warning light (See page [RS-29](#)).



RS