


# OCCUPANT CLASSIFICATION ECU

## COMPONENTS

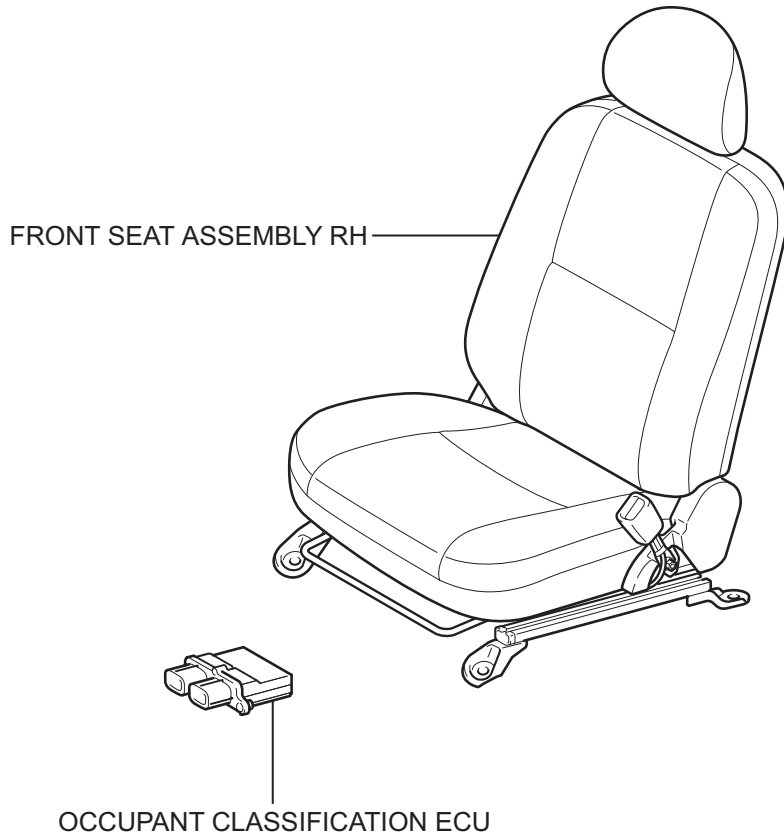

RS

## ON-VEHICLE INSPECTION

### 1. INSPECT OCCUPANT CLASSIFICATION ECU (VEHICLE NOT INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (See page [RS-36](#)).

### 2. INSPECT OCCUPANT CLASSIFICATION ECU (VEHICLE INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (See page [RS-36](#)).

- (b) Even if the airbag has not been deployed, check if there is any damage to the occupant classification ECU.

If there are any defects as mentioned below, replace the occupant classification ECU with a new one:

- Cracks, dents or chips on the case.
- Cracks or other damage to the connector.

**CAUTION:**

**Be sure to follow the correct removal and installation procedures.**

