


INSTALLATION

1. INSTALL TRANSFER EXTENSION HOUSING OIL SEAL

- (a) Coat the lip of a new oil seal with MP grease.
- (b) Using SST and a hammer, tap in the oil seal until its surface is flush with the housing upper surface.
SST 09316-60011 (09316-00011)

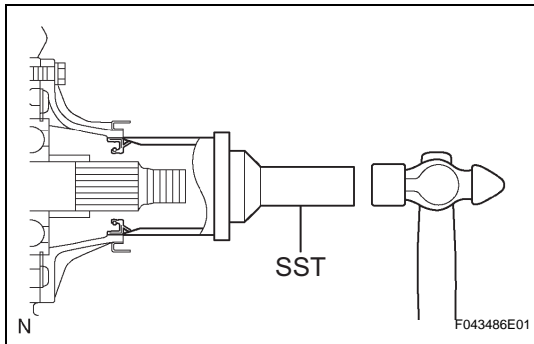

2. INSTALL TRANSFER OUTPUT SHAFT COMPANION FLANGE OIL SEAL (for Rear) (See page [TF-42](#))

3. INSTALL OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY (See page [TF-42](#))

4. INSTALL REAR PROPELLER SHAFT ASSEMBLY (See page [PR-14](#))

5. INSTALL LOWER TRANSFER CASE PROTECTOR

- (a) Install the protector with the 4 bolts.
Torque: 18 N*m (183 kgf*cm, 13 ft.*lbf)

6. ADD TRANSFER OIL (See page [TF-7](#))

7. CHECK FOR TRANSFER OIL LEAKAGE (See page [TF-7](#))