




EXTENSION HOUSING OIL SEAL

COMPONENTS

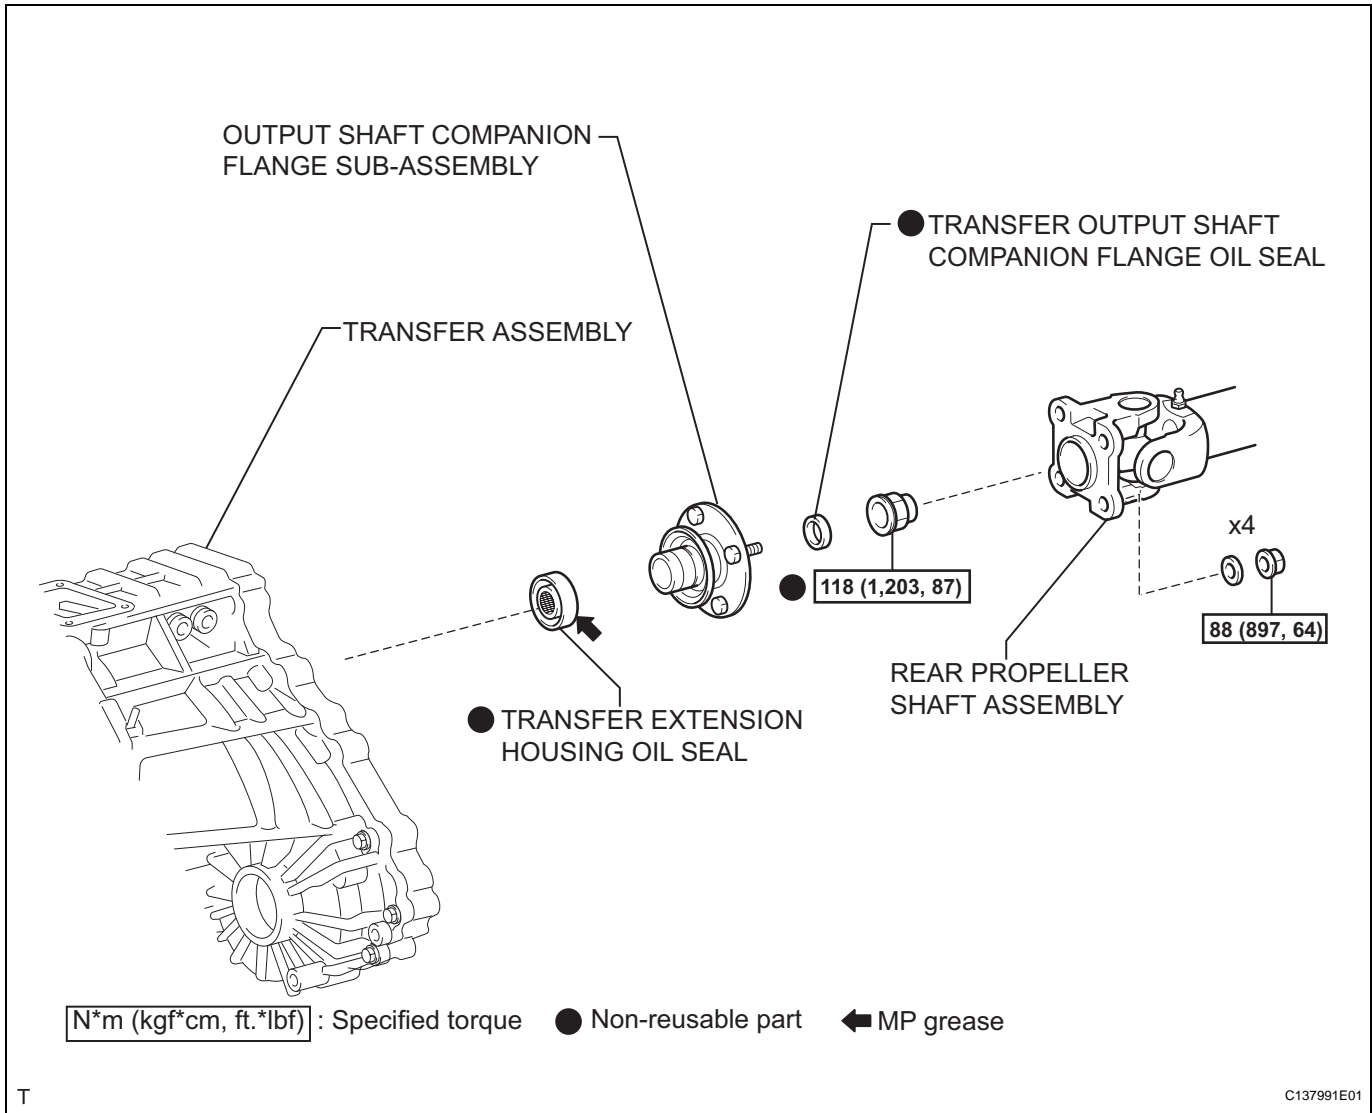

REMOVAL

1. DRAIN TRANSFER OIL
2. REMOVE LOWER TRANSFER CASE PROTECTOR
 - (a) Remove the 4 bolts and protector.
3. REMOVE REAR PROPELLER SHAFT ASSEMBLY (See page [PR-9](#))
4. REMOVE OUTPUT SHAFT COMPANION FLANGE SUB-ASSEMBLY (See page [TF-21](#))
5. REMOVE TRANSFER OUTPUT SHAFT COMPANION FLANGE OIL SEAL (for Rear) (See page [TF-21](#))

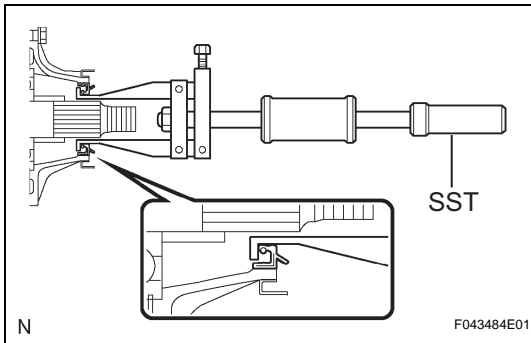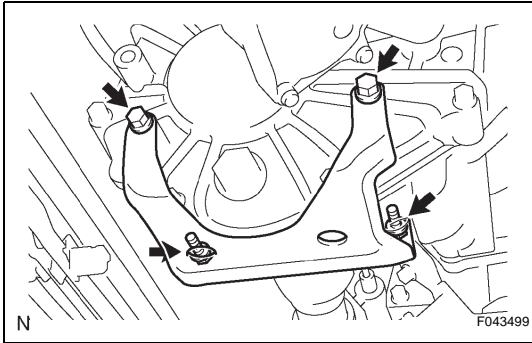

6. REMOVE TRANSFER EXTENSION HOUSING OIL SEAL
 - (a) Using SST, tap out the oil seal.
SST 09308-00010
NOTICE:
Be careful not to damage the oil seal and extension housing contact surface.