

INSTALLATION

1. INSTALL TRANSFER ASSEMBLY

- (a) Install the transfer onto the transmission.
- (b) Install the 2 clamps and 8 bolts.

Torque: 24 N*m (244 kgf*cm, 17 ft.*lbf)

2. INSTALL AUTOMATIC TRANSMISSION ASSEMBLY

- (a) Install the automatic transmission (see page [AT-181](#)).

3. INSTALL LOWER TRANSFER CASE PROTECTOR

- (a) Install the protector with the 4 bolts.

Torque: 18 N*m (183 kgf*cm, 13 ft.*lbf)

4. ADD TRANSFER OIL (See page [TF-7](#))

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

6. PERFORM INITIALIZATION

- (a) Perform initialization (see page [AT-19](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

7. CHECK FOR TRANSFER OIL LEAKAGE

